



				
MERCEDES-BENZ				
200 / 500 Break (W124)	5	85 -> 95	Alu 1090	100
Classe C Break (W202)	5	96 -> 00	Alu 1090	100
Classe C Break (W203)	5	01 -> 09/07	Alu 1090	100
Classe E Break (W124)	5	85 -> 95	Alu 1250	100
Classe E Break (W210)	5	96 -> 02	Alu 1250	100
Classe E Break (W211)	5	03 ->	Alu 1250	100
Classe M / ML	5	06/05 ->	Alu 1250	75
Classe M / ML	5	97 -> 05/05	Alu 1250	75
GL	5	06 ->	Alu 1250	100
VANEO	5	01 ->	Alu 1250	75
MITSUBISHI				
GALANT Wagon	5	97 ->	Alu 1090	80
GRANDIS	5	03 ->	Alu 1250	75
LANCER Wagon	5	93 -> 03	Alu 1090	50
OUTLANDER	5	02/07 ->	Alu 1250	100
OUTLANDER / AIRTREK	5	03 -> 01/07	Alu 1250	75
PAJERO	3	02/07 ->	Alu 1250	100
PAJERO	5	02/07 ->	Alu 1250	100
PAJERO	5	99 -> 01/07	Alu 1250	80
PAJERO PININ	5	00 ->	Alu 1250	80
PAJERO PININ	3	99 ->	Alu 1250	80
PAJERO SPORT	5	00 ->	Alu 1250	75
SPACE RUNNER	5	91 -> 98	Alu 1090	80
SPACE WAGON	5	99 ->	Alu 1250	80
NISSAN				
MURANO	5	03 ->	Alu 1250	60
PRIMERA Break (W10)	5	91 -> 97	Alu 1090	75
PRIMERA Break (W11)	5	98 -> 02/02	Alu 1090	100
SUNNY Break	5	91 -> 99	Alu 1090	75
TERRANO / PATHFINDER	3	86 -> 95	Alu 1090	75
TERRANO / PATHFINDER	5	89 -> 95	Alu 1090	75
TERRANO II	3	93 ->	Alu 1250	75
TERRANO II	5	93 ->	Alu 1250	75
X-TRAIL	5	01 -> 07/07	Alu 1250	75
OPEL				
AGILA	5	00 ->	Alu 1250	75
ANTARA	5	07 ->	Alu 1250	100
ASTRA Break	5	91 -> 97	Alu 1090	100
ASTRA II Break	5	98 -> 08/04	Alu 1090	100
ASTRA III Break	5	09/04 -> 01/07	Alu 1250	01 75
ASTRA III Break	5	02/07 ->	Alu 1250	02 75
FRONTERA	5	91 -> 98	Alu 1090	100
FRONTERA	3	91 -> 98	Alu 1250	100
FRONTERA	3	99 ->	Alu 1250	100
FRONTERA	5	99 ->	Alu 1250	100
KADETT	5	84 -> 91	Alu 1090	100
OMEGA Caravan / Break	5	94 ->	Alu 1090	100
SIGNUM	5	09/03 ->	Alu 1250	01 75
SINTRA	5	96 ->	Alu 1250	75
VECTRA Break	5	09/03 ->	Alu 1250	01 75
VECTRA Caravan / Break	5	96 -> 08/03	Alu 1090	100
ZAFIRA	5	02/07 ->	Alu 1250	02 75
ZAFIRA	5	09/05 -> 01/07	Alu 1250	01 75
ZAFIRA	5	99 -> 08/05	Alu 1090	75
PEUGEOT				
1007	3	05 ->	Alu 1250	100
4007	5	07 ->	Alu 1250	80
206 SW / Break	5	02 ->	Alu 1090	80
207 SW	5	07/07 ->	Alu 1250	75
306 Break	5	97 ->	Alu 1090	75
307 SW / Break	5	02 ->	Alu 1250	80
406 Break	5	96 ->	Alu 1090	100
407 SW	5	04 ->	Alu 1250	100
PARTNER	5	96 ->	Alu 1090	60
PARTNER QUICKSILVER	5	06 ->	Alu 1090	75
PONTIAC				
VIBE	5	01 ->	Alu 1250	75
RENAULT				
KANGOO (hayon)	4	97 ->	Alu 1090	80
KANGOO 4x4	4	01 ->	Alu 1090	80
LAGUNA II Estate / Break	5	01 ->	Alu 1090	80
LAGUNA Nevada / Break	5	95 -> 00	Alu 1250	80
MEGANE II Estate / Break	5	10/03 ->	Alu 1250	80
SCENIC CONQUEST	5	06/07 ->	Alu 1250	75
ROVER				
75 Tourer / Break	5	01 ->	Alu 1090	100
MONTEGO Break	5	84 -> 94	Alu 1090	75
STREETWISE	3	04 ->	Alu 1090	60
STREETWISE	5	04 ->	Alu 1090	60

				
SAAB				
9.5 Estate	5	99 ->	Alu 1250	100
SEAT				
ALHAMBRA	5	96 ->	Alu 1250	75
ALTEA Freerack	5	07 ->	Alu 1250	02 75
ALTEA XL	5	06 ->	Alu 1250	02 75
SKODA				
FABIA Combi / Break	5	00 ->	Alu 1090	75
FELICIA Break	5	95 ->	Alu 1090	75
FORMAN / FAVORIT Break	5	90 -> 95	Alu 1090	75
OCTAVIA Combi / Break	5	10/04 ->	Alu 1250	75
OCTAVIA Combi / Break	5	98 -> 09/04	Alu 1090	100
OCTAVIA SCOUT	5	04/07 ->	Alu 1250	75
ROOMSTER	5	06 ->	Alu 1090	75
ROOMSTER SCOUT	5	07/07 ->	Alu 1090	75
SSANGYONG				
KYRON	5	06 ->	Alu 1250	45
MUSSO	5	93 ->	Alu 1250	55
REXTON	5	02 ->	Alu 1250	100
RHODIUS	5	04 ->	Alu 1250	70
SUBARU				
IMPREZA Station Wagon	5	01 ->	Alu 1090	80
IMPREZA Station Wagon	5	93 -> 00	Alu 1090	75
IMPREZA TS / RS	4	93 -> 00	Alu 1090	75
LEGACY Outback/LANCASTER	5	97 -> 08/03	Alu 1090	100
SUZUKI				
BALENO/ESTEEM/CULTUS	5	96 ->	Alu 1090	75
GRAND VITARA / ESCUDO	3	98 -> 09/05	Alu 1250	45
GRAND VITARA / ESCUDO	5	98 -> 09/05	Alu 1250	45
IGNIS	5	03 ->	Alu 1250	35
JIMNY	3	98 ->	Alu 1250	75
SX4	5	06 ->	Alu 1250	60
WAGON R / R Wide / R+	5	96 -> 99	Alu 1250	50
WAGON R+	5	00 ->	Alu 1250	50
TOYOTA				
4 - RUNNER / SURF	5	87 -> 95	Alu 1090	75
AVENSIS VERSO	5	01 ->	Alu 1090	100
AVENSIS Wagon / Break	5	05/03 ->	Alu 1090	100
AVENSIS Wagon / Break	5	98 -> 04/03	Alu 1090	100
CARINA E Break - Wagon	5	92 -> 97	Alu 1090	100
CARINA II Break - Wagon	5	88 -> 91	Alu 1090	100
COROLLA VERSO / SPACIO	5	01 ->	Alu 1090	75
COROLLA Wagon / Break	5	91 -> 96	Alu 1090	100
COROLLA Wagon / Break	5	97 -> 00	Alu 1090	100
LAND CRUISER	3	03 ->	Alu 1250	100
LAND CRUISER	5	03 ->	Alu 1250	100
LAND CRUISER J9 - PRADO	5	97 -> 02	Alu 1250	100
PICNIC / IPSUM	5	96 ->	Alu 1250	100
PREVA/ESTIMA/ALPHARD	5	00 ->	Alu 1090	100
RAV-4	3	01 -> 01/06	Alu 1250	100
RAV-4	5	01 -> 01/06	Alu 1250	100
SPRINTER CARIB Break	5	98 ->	Alu 1090	80
YARIS Verso	5	99 ->	Alu 1090	75
VOLKSWAGEN				
BORA Variant / Break	5	99 ->	Alu 1090	75
CROSS GOLF	5	03/07 ->	Alu 1090	75
GOLF III Variant / Break	5	94 -> 98	Alu 1090	75
GOLF IV Variant / Break	5	99 ->	Alu 1090	75
GOLF V SW	5	05/07 ->	Alu 1250	75
PASSAT SW / Break	5	10/05 ->	Alu 1250	100
PASSAT Variant / Break	5	80 -> 88	Alu 1090	75
PASSAT Variant / Break	5	89 -> 96	Alu 1090	75
PASSAT Variant / Break	5	97 -> 09/05	Alu 1090	100
POLO	3	82 -> 94	Alu 1090	75
POLO Cross	5	06 ->	Alu 1090	75
POLO Fun	5	04 ->	Alu 1090	75
POLO Variant / Break	5	98 ->	Alu 1090	50
SHARAN	5	95 ->	Alu 1250	75
TOUAREG	5	02 ->	Alu 1250	75
TOURAN	5	03 ->	Alu 1250	100
VOLVO				
850 Break	5	93 -> 96	Alu 1250	75
V40 Break	5	96 ->	Alu 1090	100
V50 Break	5	04 ->	Alu 1250	75
V70	5	08/07 ->	Alu 1250	100
V70 Break	5	00 -> 07/07	Alu 1250	100
V70 Break	5	97 -> 99	Alu 1250	75
XC 70	5	03 -> 07/07	Alu 1250	100
XC 90	5	03 ->	Alu 1090	100
XC70	5	08/07 ->	Alu 1250	100

Instructions - Instructions - Anweisungen - Istruzioni - Instrucciones
 Instrukcje - Instructies - Instruções - Utasítások - Инструкция - Οδηγίες
 Instruktioner - Pokyny - Instructiuni - Instrukcija - Instrukcijas - Eeskiri
 Inštrukcie - Navodila - Upute - Instrukcije

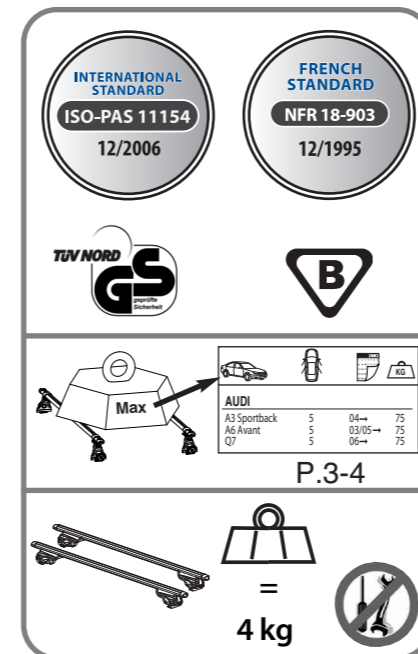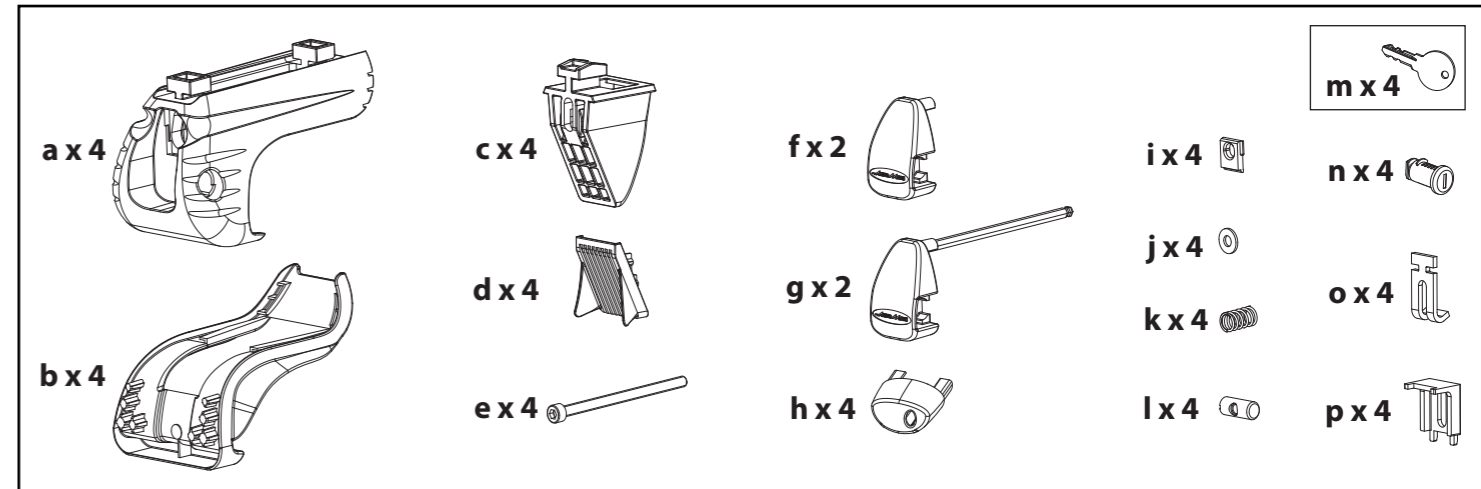









railing **ACTIVA** ALU 1090 - ALU 1250

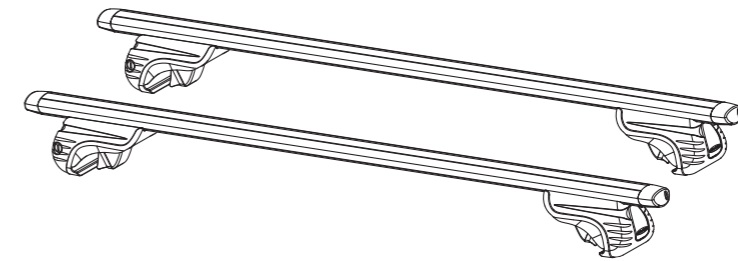

FRA Garder cette notice pour les utilisations futures.
GBR Keep these instructions for future use.
DEU Die Anleitung zur späteren Benutzung aufbewahren.
ITA Conservare queste istruzioni per ogni ulteriore consultazione.
ESP Guardar este manual para futuras utilizaciones.
POL Zachować instrukcję w przypadku użytkowania w przyszłości.
NLD Bewaar deze gebruiksaanwijzing voor toekomstige raadpleging.
PRT Guardar este manual para as utilizações futuras.
HUN Őrizzze meg ezt a használati utasítást későbbi felhasználás céljából.
RUS Сохраните эту инструкцию для дальнейшего пользования.
GRC Φυλάξτε αυτό το εγχειρίδιο οδηγιών για μελλοντικές χρήσεις.
DNK Gem denne vejledning til senere brug.
CZE Uchovajte návod pro pozdější použití.
ROU Păstrați instrucțiunile pentru consultarea lor ulterioară.
LTU Saglabąjiet šio instrukciją turpmākai lietošanai.
LVA Saugokite šią instrukciją, kad atētyje galējumēte ja pasinaudoti.
EST Hoidke need juhised edaspidiseks kasutuseks alles.
SVK Tento návod si uchovajte pre ďalšie použitie.
SVN Sačuvajte ovaj priručnik za buduću upotrebu.
HRV Čuvati ove upute za daljnju uporabu.
SRB Čuvajte instrukcije za dalju upotrebu.



AUTOMAXI INTERNATIONAL
 Z.I Nord - 24 Rue Claude Bernard - CS 61768
 35417 Saint Malo Cedex - France
 Tél : 33 (0) 2 99 21 12 70
 Fax : 33 (0) 2 99 21 12 71
 www.automaxi.fr

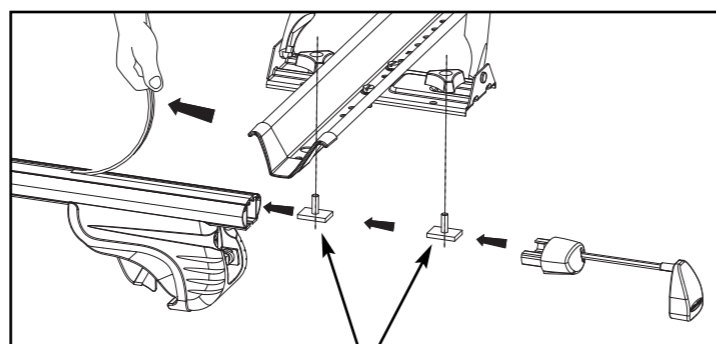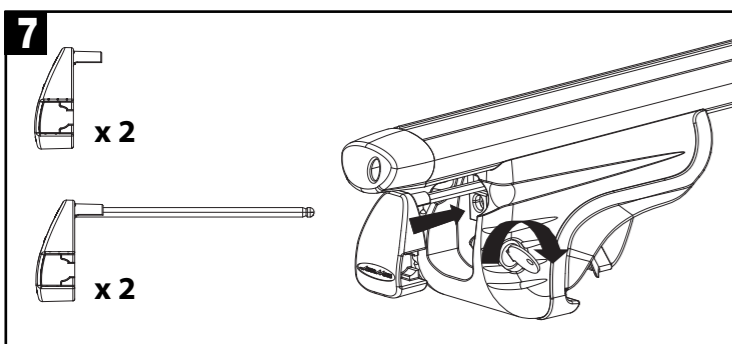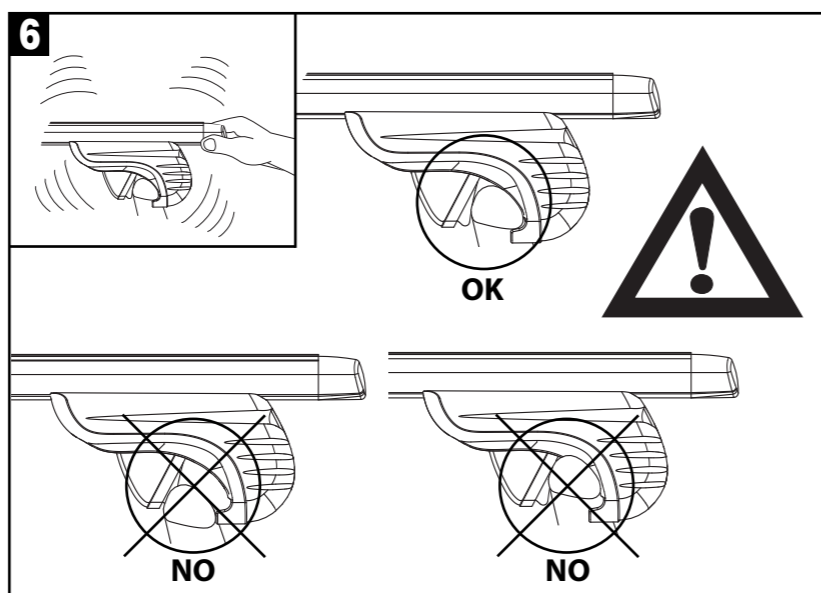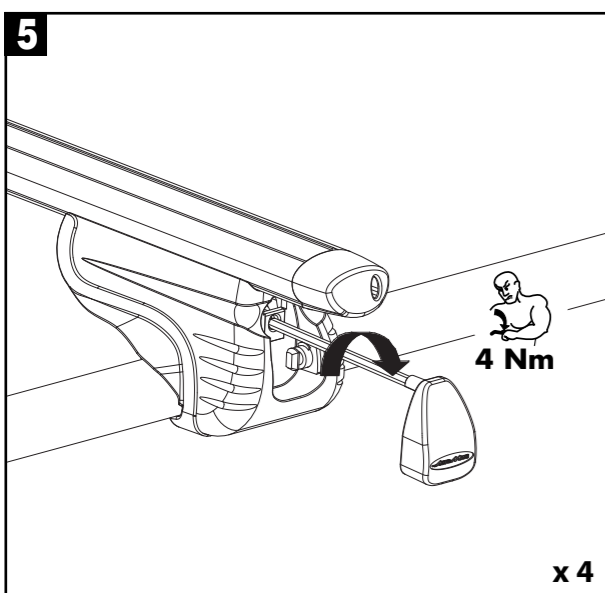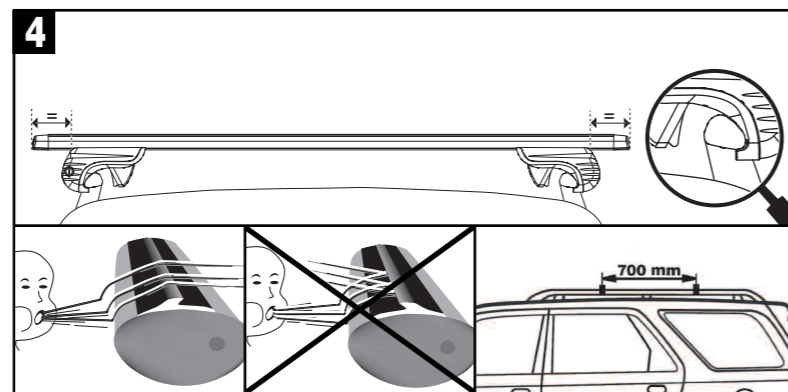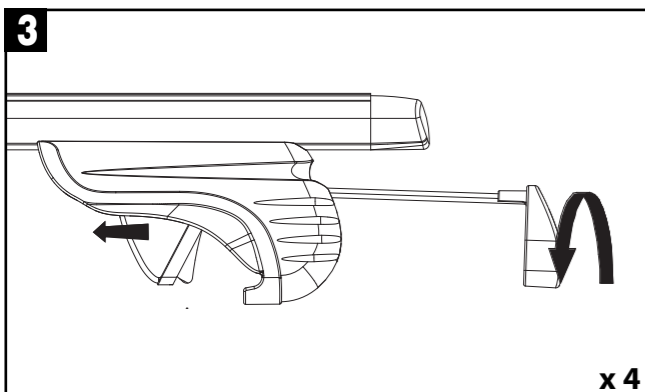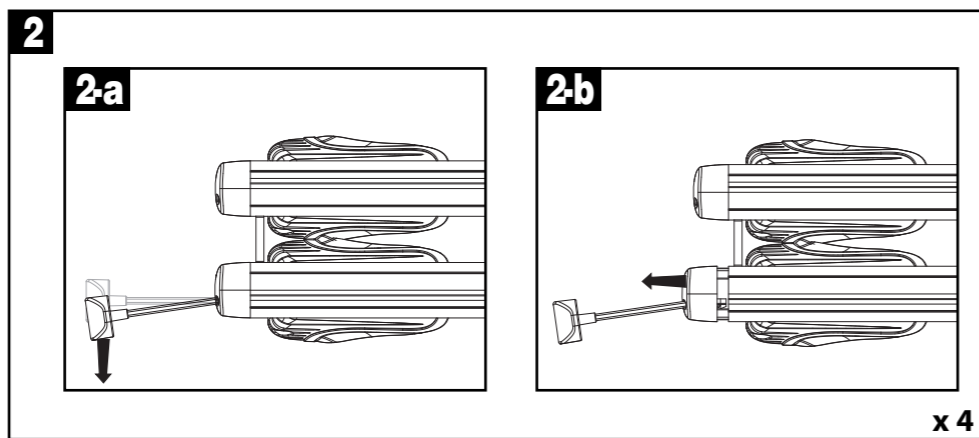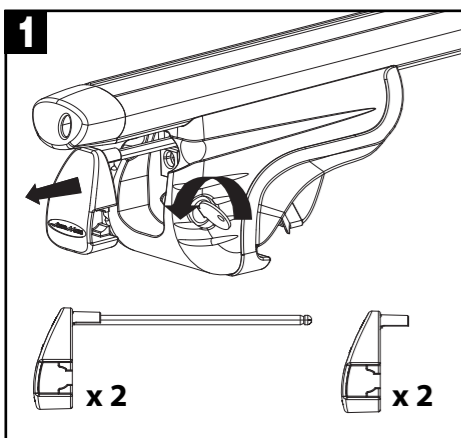

- Option: Kit fixation rainure en T (Barre Silverline) - Option: T-slot attachment kit (Bar Silverline) - Option: T-Schlitz-Befestigungseinheit (Stange Silverline) - Opzione: Kit di fissaggio scanalatura a T (Barra Silverline) - Opción: Kit de fijación de ranura en T (Barra Silverline) - Wybór: Komplet mocowań z tworzywa krztałtowniku (plastowniku Silverline) - Optie: Bevestigingskit T-groef (staaf Silverline) - Opção: Kit de fixação ranhura em T (Barra Silverline) - Opció: T-hornyos rögzítő készlet (Rúd Silverline) - Дополнительно: Набор для фиксации балки в паз Т (образной формы Silverline) - Επιλογή: Kit σταθεροποίησης εσοχής σε σχήμα Τ (Μητράκι Silverline) - Multihed: T-slot forbindelseskit (Bar Silverline) - Volitelné příslušenství sada k upevnění do drážky tvaru T (tyč Silverline) - Opțiunea: Kit cu canal de prindere în T (Bară Silverline) - Papildoma įranga: T formos plyšio padarygo komplektas (Bar Silverline) - Iespēja: T-veida stiprinājumu komplekts (Bar Silverline) - Valki: T-soone tarvikute komplekt (Bar Silverline) - Možnost: súprava na pripavenie T-drážky (strieborná lišta) - Opcja: T-slot pričrvtstveni komplet (Bar Silverline) - Opcja: T-utor dodatak za opremu (Posrebrena šipka) - Posrebrena šipka) - Opcja: T-žleb dodatak za opremu (Posrebrena šipka).

Ref. 330490 / 330540.

CONVIENT POUR VÉHICULE - APPROPRIATE FOR VEHICLE - VERWENDEN SIE FÜR FAHRZEUG -
 SERVE A VEICULO - CONVIENE PARA VEHICULO - PASUJENA SAMOCHOD - GESCHIKT VOOR VOERTUIG -
 APPROPRIARE PER VEICULE - MEGFELELŐ GÉPJÁRMŰ - ПОДХОДИТ ДЛЯ АВТОМОБИЛЕЙ -
 ΓΙΑ ΤΟ ΟΧΗΜΑ ΠΑΡΑ - EGNET TIL KØRETØJER - VHODNÉ DO VOZIDEL - CONVENABIL PENTRU VEICUL -
 TINKA TRANSPORTO PRIEMONEI - PIEMĒROTS TRANSPORTLĪDZEKLĪEM - SOBIB SÖIDUKILE -
 VHODNÉ PRE VOZIDLO - PRIMERNO ZA VOZILO - PODESNO ZA VOZILO - PODESNO ZA VOZILO

Car Model	Year Range	Material	Weight (KG)
ALFA ROMEO			
156 Crosswagon	5 04 ->	Alu 1250	75
156 Sportwagon	5 00 -> 02/02	Alu 1250	75
156 Sportwagon	5 03/02 ->	Alu 1250	75
159 SW	5 06 ->	Alu 1250	50
AUDI			
100 Avant	5 91 -> 94	Alu 1250	100
200 Avant	5 83 -> 90	Alu 1250	75
80 Avant	5 92 -> 96	Alu 1090	75
A3 SPORTBACK	4 04 ->	Alu 1250	02 75
A4 Avant	5 08/01 -> 10/04	Alu 1090	75
A4 Avant	5 11/04 ->	Alu 1090	75
A4 Avant	5 96 -> 07/01	Alu 1250	75
A6 ALLROAD	5 00 -> 05/06	Alu 1250	100
A6 ALLROAD	5 06/06 ->	Alu 1250	100
A6 AVANT	5 03/05 ->	Alu 1250	02 75
A6 Avant	5 94 -> 97	Alu 1250	100
A6 Avant	5 98 -> 02/05	Alu 1250	100
Q7	5 06 ->	Alu 1250	02 75
BMW			
SERIE 3 Touring	5 00 -> 09/05	Alu 1090	75
SERIE 3 Touring	5 10/05 ->	Alu 1090	75
SERIE 3 Touring	5 95 -> 99	Alu 1090	75
SERIE 5 Touring	5 05/04 ->	Alu 1250	75
SERIE 5 Touring	5 97 -> 04/04	Alu 1090	100
X3	5 03 ->	Alu 1250	75
X5	5 00 -> 02/07	Alu 1250	75
X5	5 03/07 ->	Alu 1250	100
CADILLAC			
SRX	5 04 ->	Alu 1250	70
CHEVROLET			
CAPTIVA	5 06 ->	Alu 1250	100
LACETTI	5 05 ->	Alu 1090	75
MATIZ	5 03/05 ->	Alu 1090	50
NUBIRA Break	5 09/04 ->	Alu 1090	75
OPTRA SW	5 05 ->	Alu 1090	75
REZZO / TACUMA	5 05 ->	Alu 1090	75
TRANS SPORT	5 97 ->	Alu 1250	75
CHRYSLER			
300C TOURING	5 06 ->	Alu 1250	70
GRAND VOYAGER	5 96 -> 00	Alu 1250	70
VOYAGER	5 83 -> 95	Alu 1250	70
VOYAGER	5 96 -> 00	Alu 1250	70
CITROËN			
BERLINGO Multispace	5 97 ->	Alu 1090	70
BX Break	5 83 -> 99	Alu 1250	75
C3 X-TR	5 04 ->	Alu 1250	70
C5 Break	5 01 ->	Alu 1090	75
C-Crosser	5 07 ->	Alu 1250	80
GRAND C4 PICASSO	5 10/06 ->	Alu 1250	60
XM Break	5 91 -> 00	Alu 1250	100
ZX Break	5 94 -> 99	Alu 1090	75
DACIA			
LOGAN MCV / BREAK	5 07 ->	Alu 1090	80
DAEWOO			
LACETTI	5 04 ->	Alu 1090	75
MATIZ	5 98 -> 02/05	Alu 1090	50
NUBIRA Break	5 09/04 ->	Alu 1090	75
NUBIRA Break	5 97 -> 08/04	Alu 1090	100
REXTON	5 02 ->	Alu 1250	100
REZZO / TACUMA	5 00 ->	Alu 1090	75
DAIHATSU			
TERIOS	5 05/06 ->	Alu 1090	80
FIAT			
4X4 CROSS	5 06 ->	Alu 1250	50
CROMA	5 06/05 ->	Alu 1250	75
DOBLO	4 01 ->	Alu 1250	75
IDEA	5 03 ->	Alu 1250	75
MAREA Week End	5 97 ->	Alu 1090	80
PALIO Week End	5 97 ->	Alu 1090	75
PANDA	5 10/03 ->	Alu 1250	50
FORD			
AEROSTAR	5 97 ->	Alu 1250	75
ESCORT Clipper / Break	5 90 -> 99	Alu 1090	75
FOCUS Clipper / Break	5 99 -> 09/04	Alu 1090	75
GALAXY	5 96 -> 05/06	Alu 1250	75
MAVERICK	3 92 -> 98	Alu 1250	55
MAVERICK	5 92 -> 98	Alu 1250	55
MONDEO I Clipper / Break	5 93 -> 00	Alu 1090	75
MONDEO II Clipper / Break	5 01 ->	Alu 1090	75
MONDEO III SW	5 05/07 ->	Alu 1250	75
SCORPIO	5 85 -> 94	Alu 1090	75
SCORPIO Clipper / Break	5 91 ->	Alu 1090	100
SIERRA Clipper / Break	5 83 -> 99	Alu 1090	75
HONDA			
ACCORD Tourer / Break	5 03 ->	Alu 1250	70
ACCORD WAG / Break	5 94 -> 97	Alu 1090	75
CIVIC Aerodeck	5 98 ->	Alu 1090	75
CR-V	5 96 -> 01	Alu 1250	50
ODYSSEY / SHUTTLE	5 95 ->	Alu 1250	75
PILOT	5 03 ->	Alu 1250	75
HYUNDAI			
ATOS	5 97 ->	Alu 1090	75
H1 / STAREX / SATELLITE	4 97 ->	Alu 1090	80
LANTRA / ELANTRA Wagon	5 90 -> 99	Alu 1090	80
MATRIX	5 01 ->	Alu 1090	70
SANTA FE	5 01 -> 03/06	Alu 1090	100
TERRACAN	5 02 ->	Alu 1250	35
TRAJET	5 99 ->	Alu 1250	100
TUCSON	5 04 ->	Alu 1090	75
JAGUAR			
X TYPE Estate	5 04 ->	Alu 1090	75
JEEP			
CHEROKEE	3 84 -> 00	Alu 1250	75
CHEROKEE	5 84 -> 00	Alu 1250	75
CHEROKEE Liberty	5 01 ->	Alu 1250	80
GRAND CHEROKEE	5 04/04 ->	Alu 1250	60
GRAND CHEROKEE	5 98 -> 03/04	Alu 1250	60
KIA			
CARENS	5 00 -> 08/06	Alu 1090	75
CARNIVAL	5 05/06 ->	Alu 1250	75
CARNIVAL / SEDONA	5 01 -> 04/06	Alu 1250	75
CEE'D SPORTY WAGON	5 07 ->	Alu 1250	75
RIO Wagon	5 05 ->	Alu 1090	50
SORENTO	5 03 ->	Alu 1090	75
SPORTAGE	3 09/04 ->	Alu 1250	75
SPORTAGE	5 09/04 ->	Alu 1250	75
SPORTAGE	3 93 -> 08/04	Alu 1250	75
SPORTAGE	5 93 -> 08/04	Alu 1250	75
LADA			
111 / 2111	5 96 ->	Alu 1090	75
LAND ROVER			
DISCOVERY	5 98 -> 01	Alu 1250	75
FREELANDER	3 98 -> 06	Alu 1090	75
FREELANDER	5 98 -> 06	Alu 1090	75
MAZDA			
5	5 05 ->	Alu 1250	75
6 Station Wagon / Break	5 02 ->	Alu 1090	100
626 Break	5 88 -> 91	Alu 1090	75
626 Break	5 92 -> 97	Alu 1090	75
626 Break	5 98 ->	Alu 1090	75
DEMIO	5 98 ->	Alu 1250	50
MPV	5 00 ->	Alu 1250	100
PREMACY	5 99 ->	Alu 1250	75