


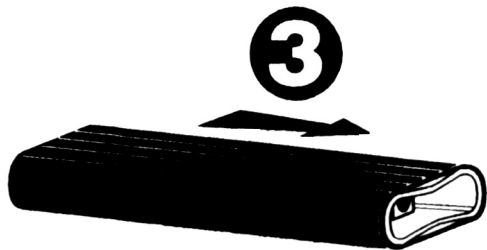
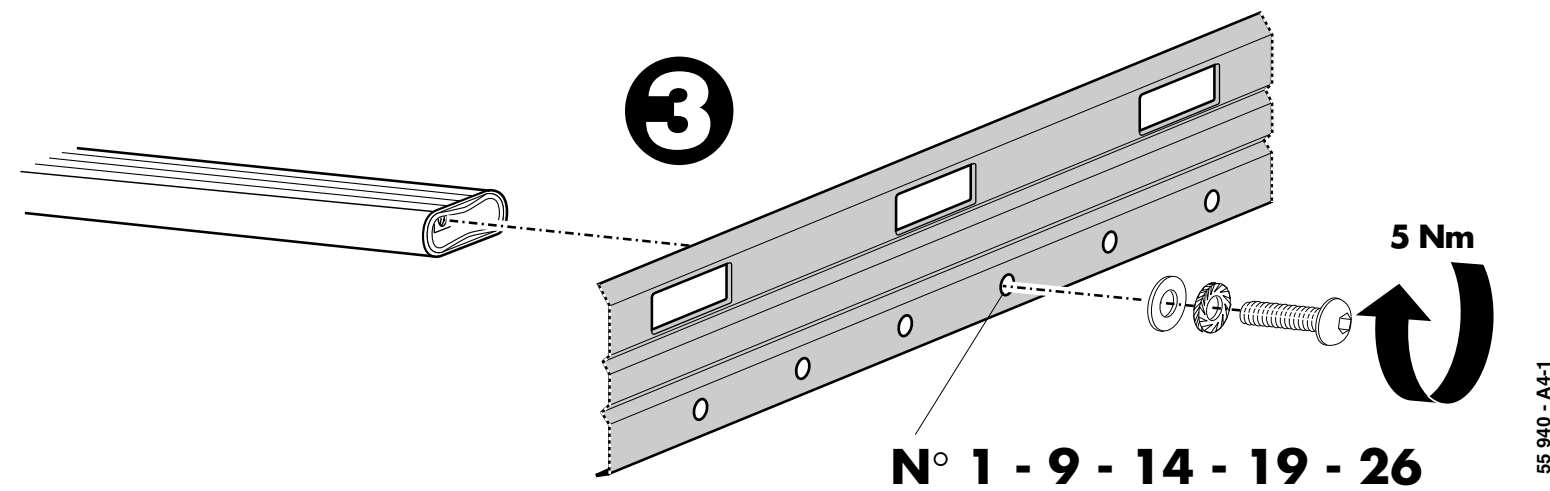
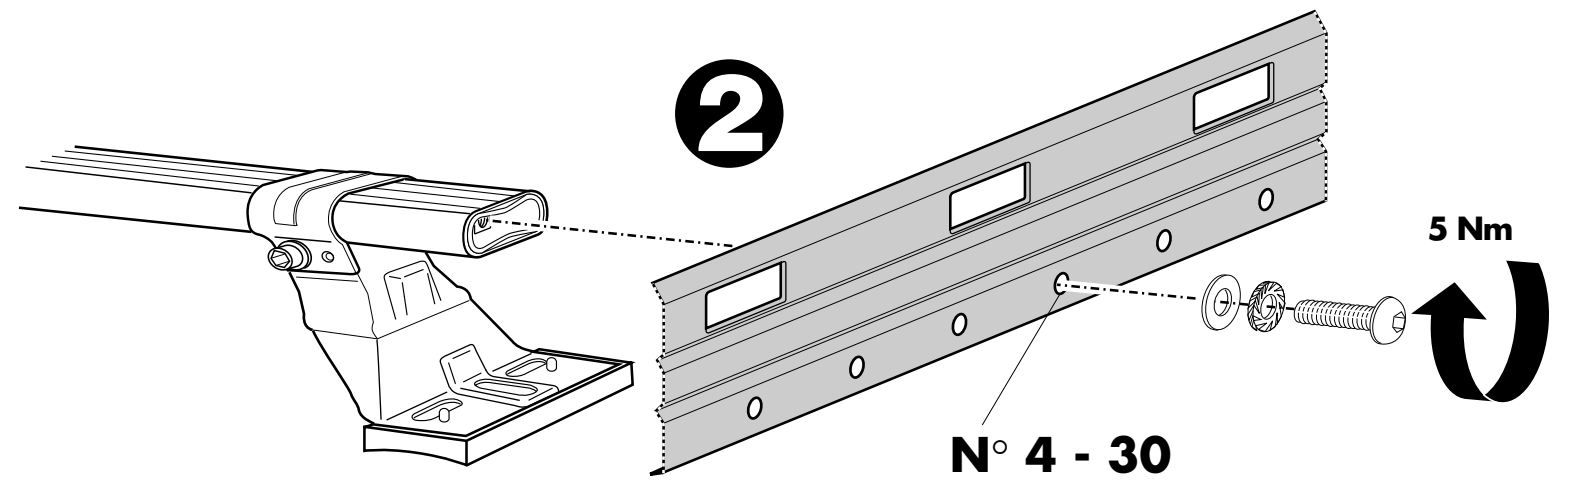
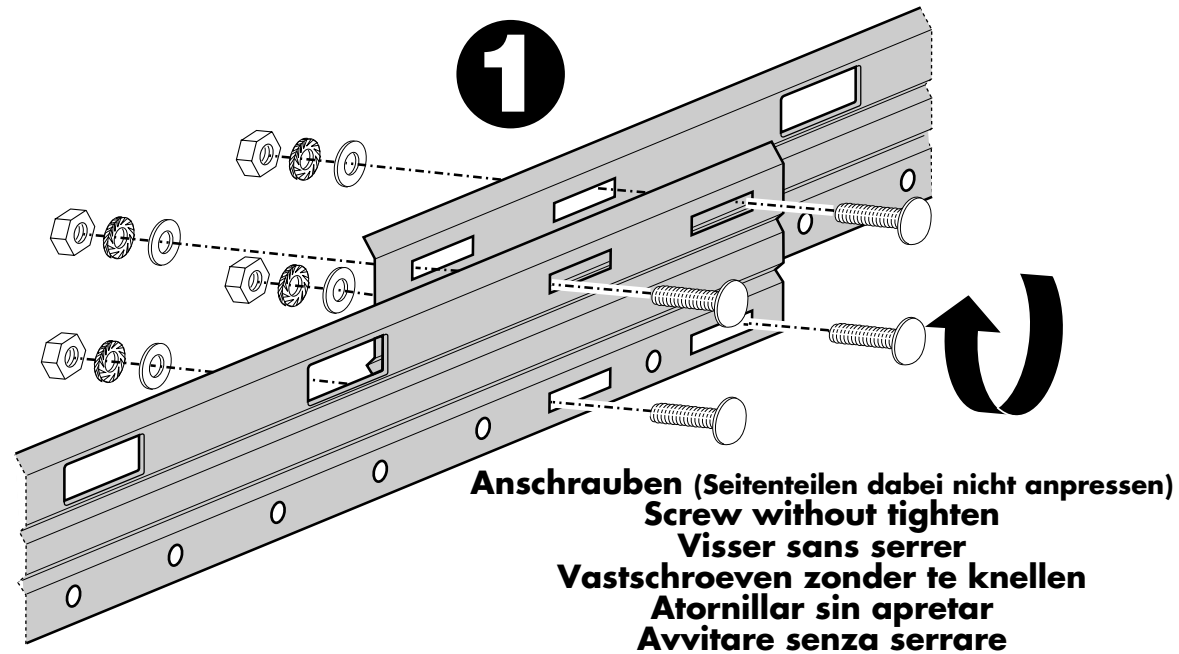
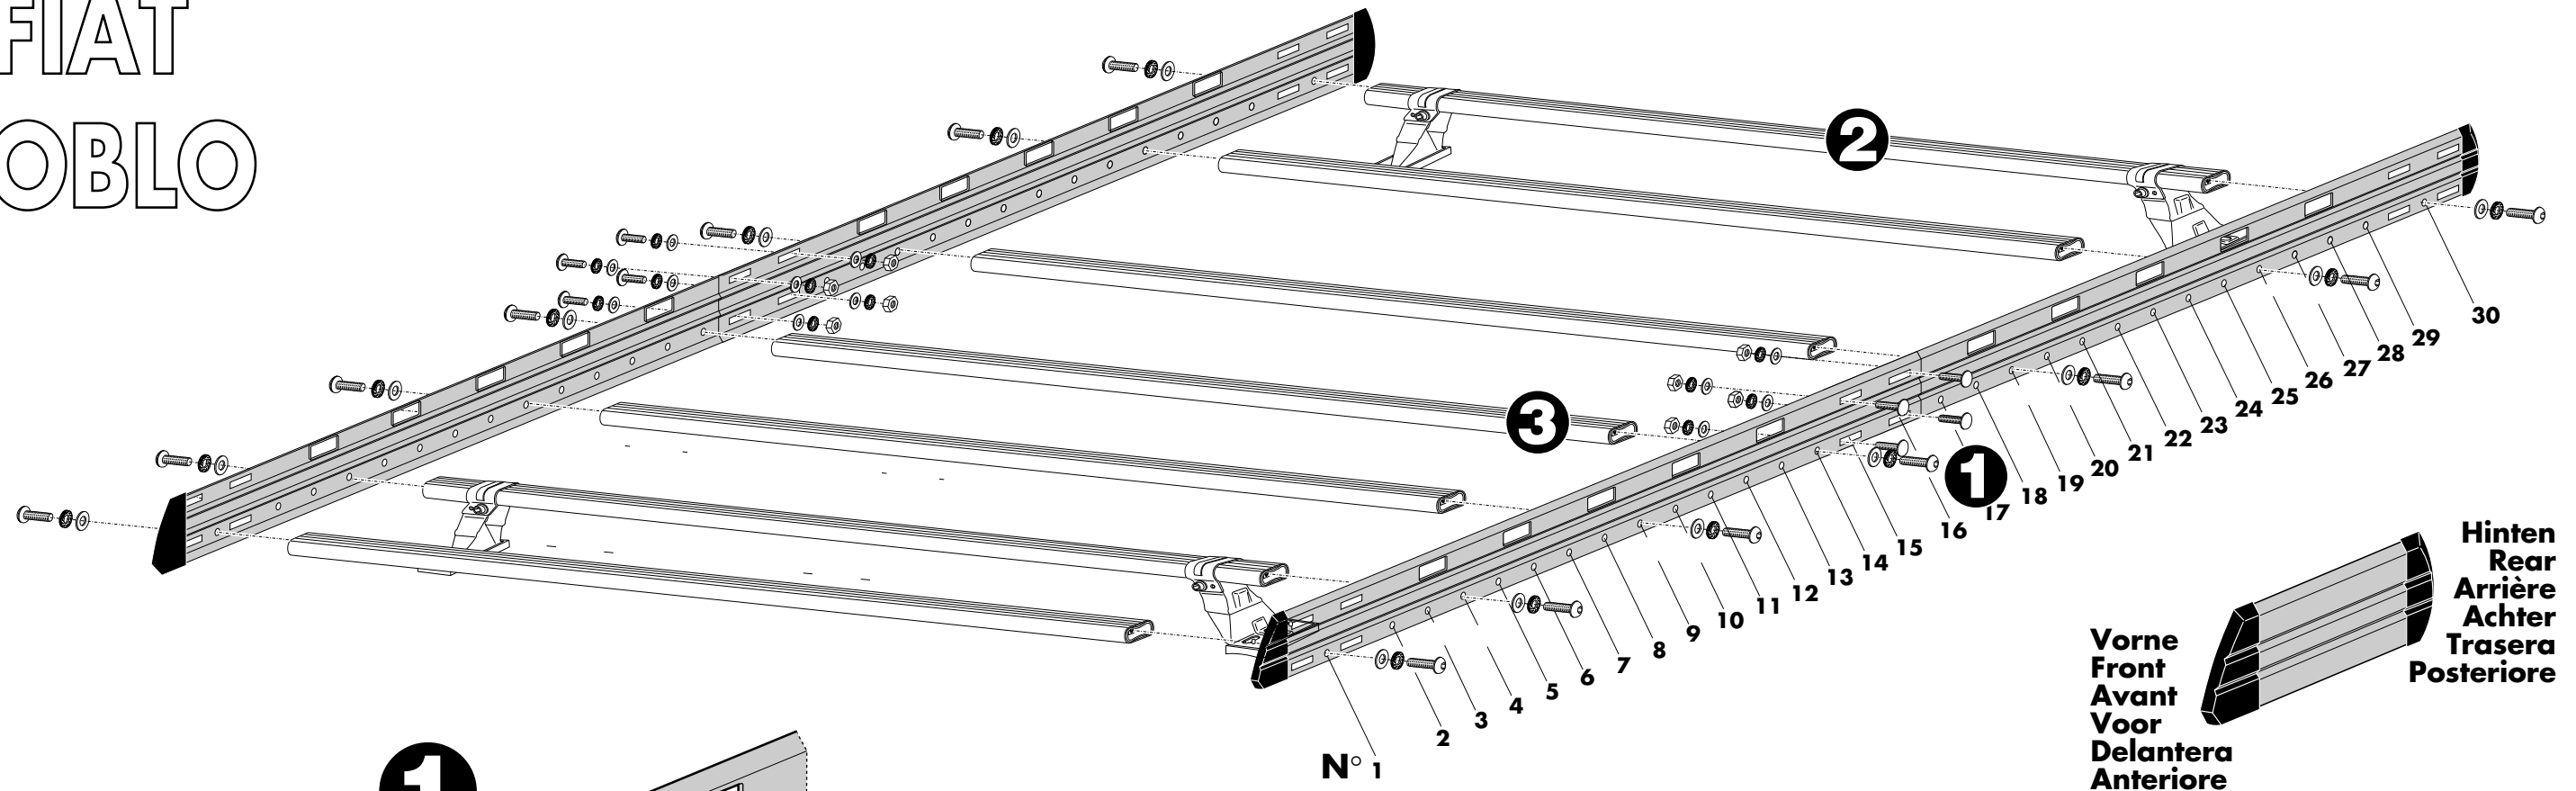
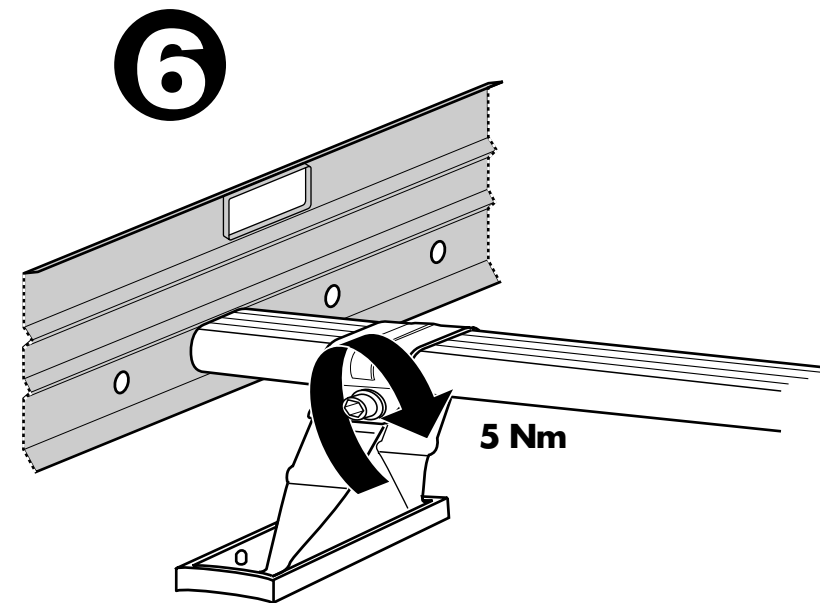


2

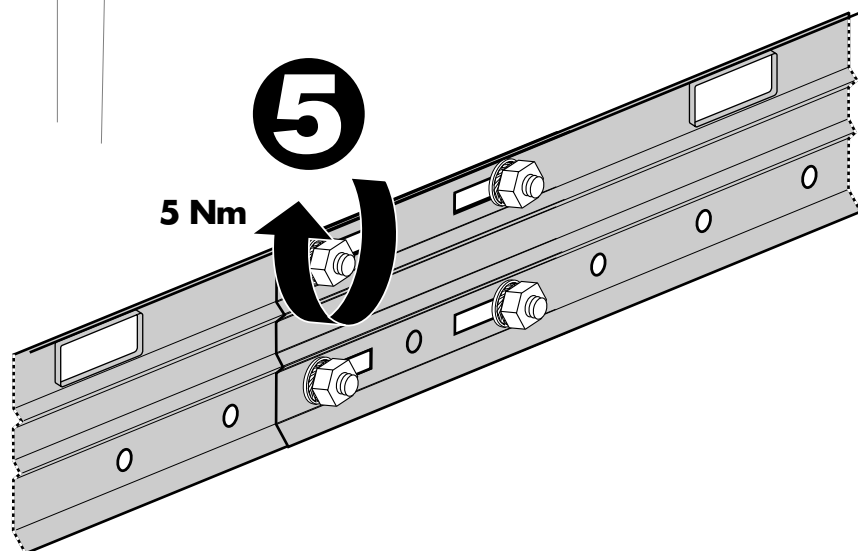

FIAT DOBLO




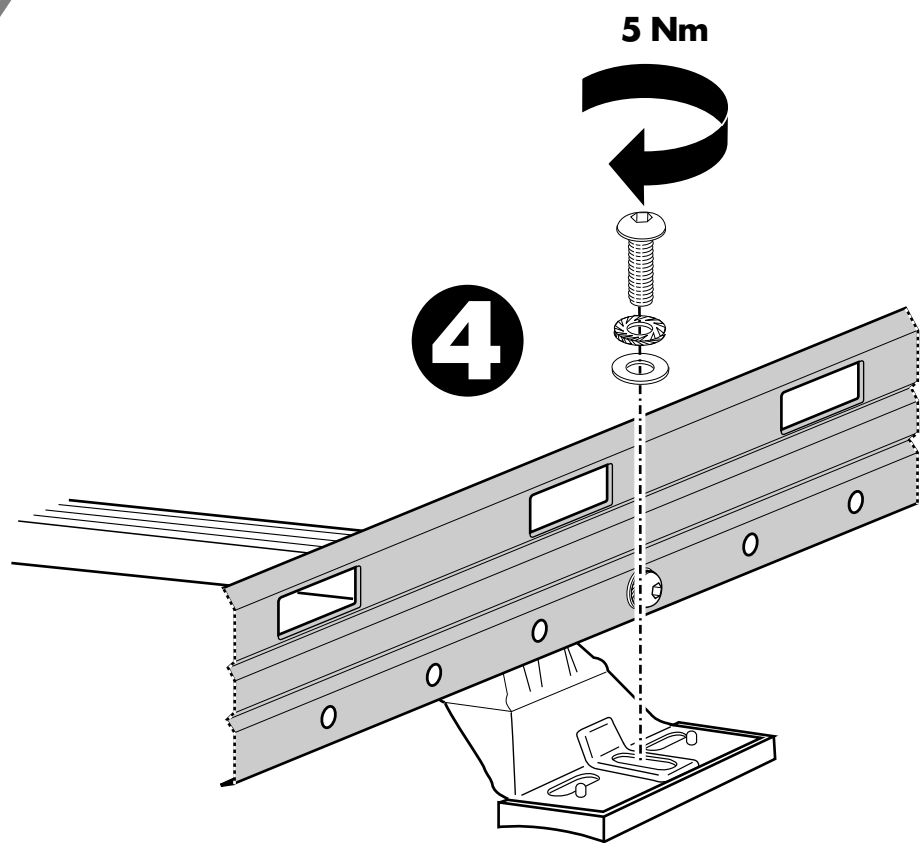





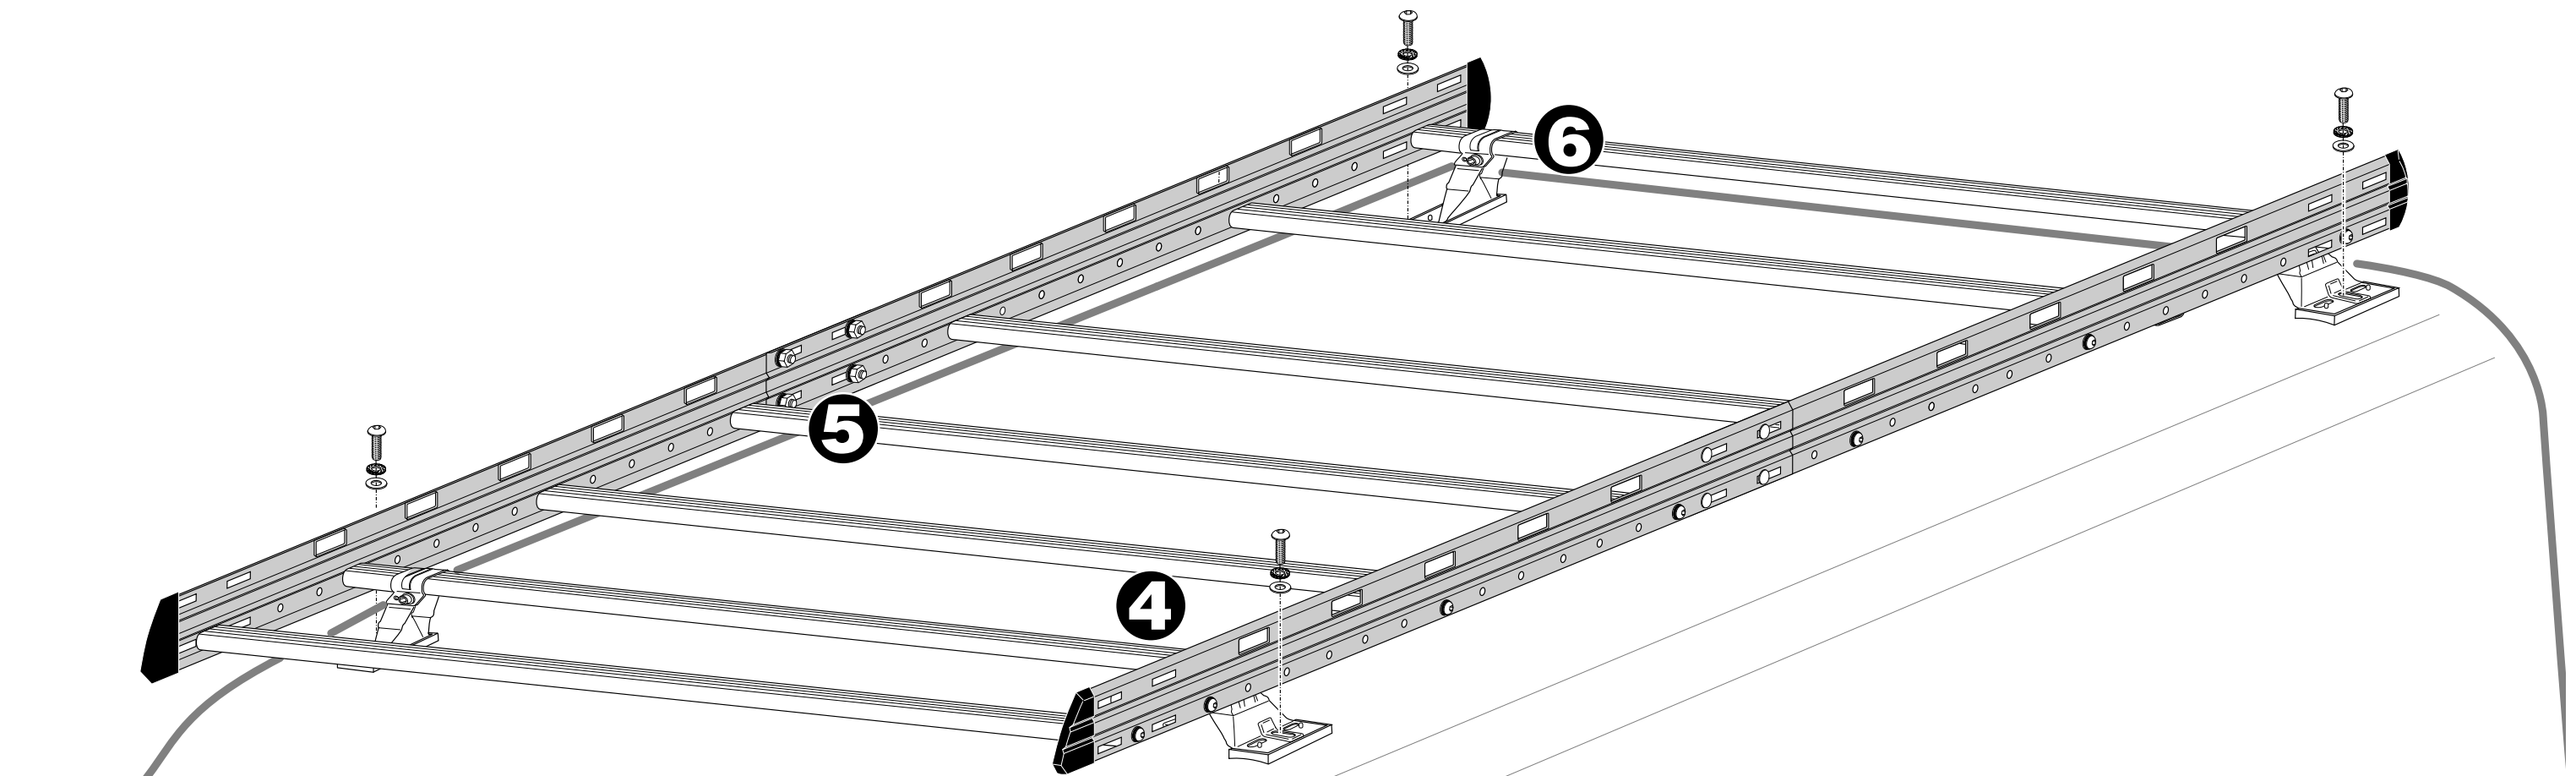


FIAT DOBLO

FORD TRANSIT CONNECT

T200

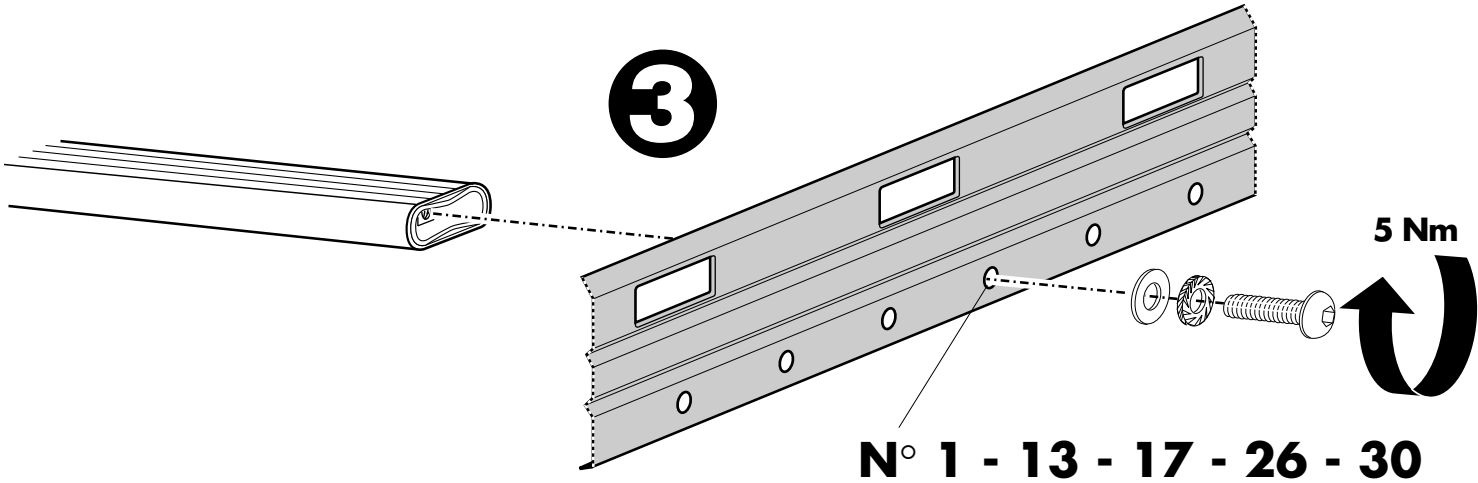
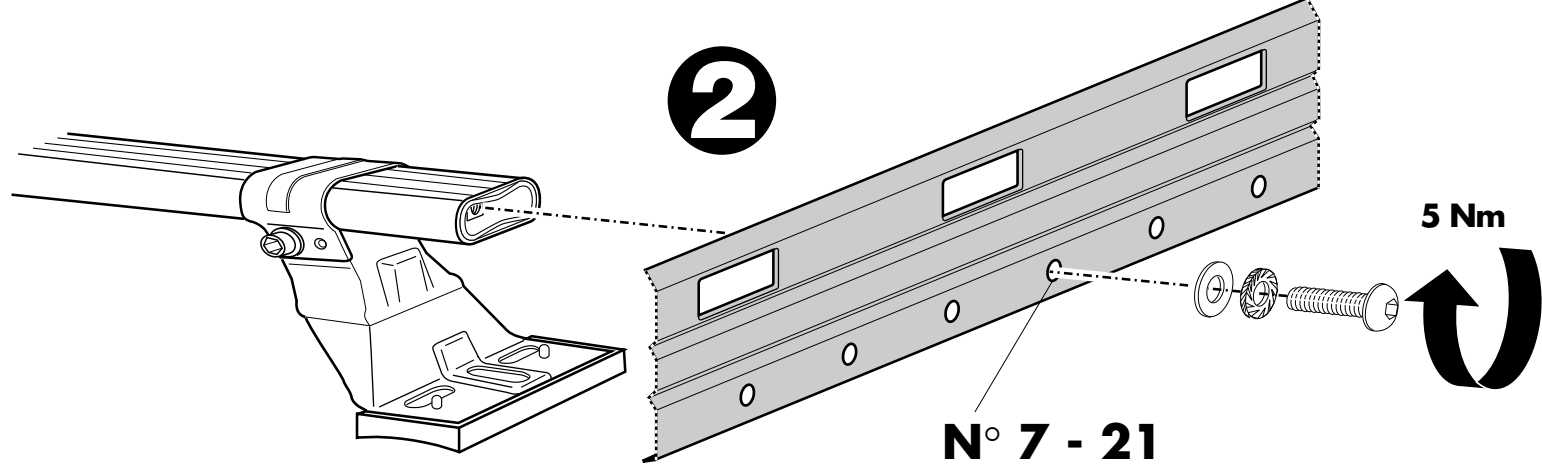
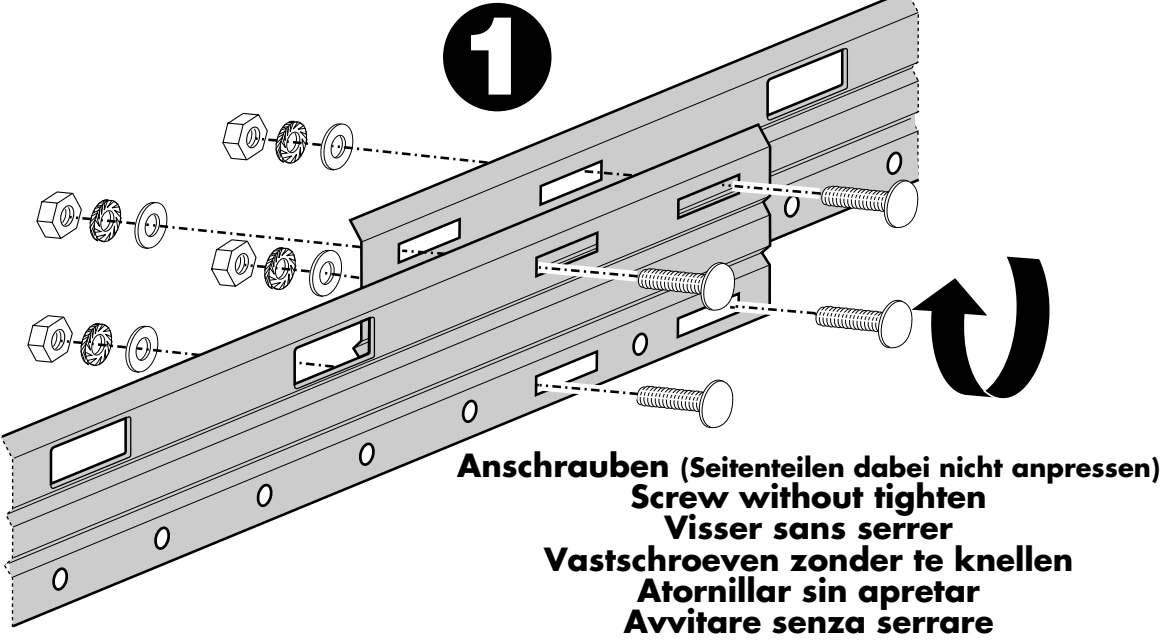
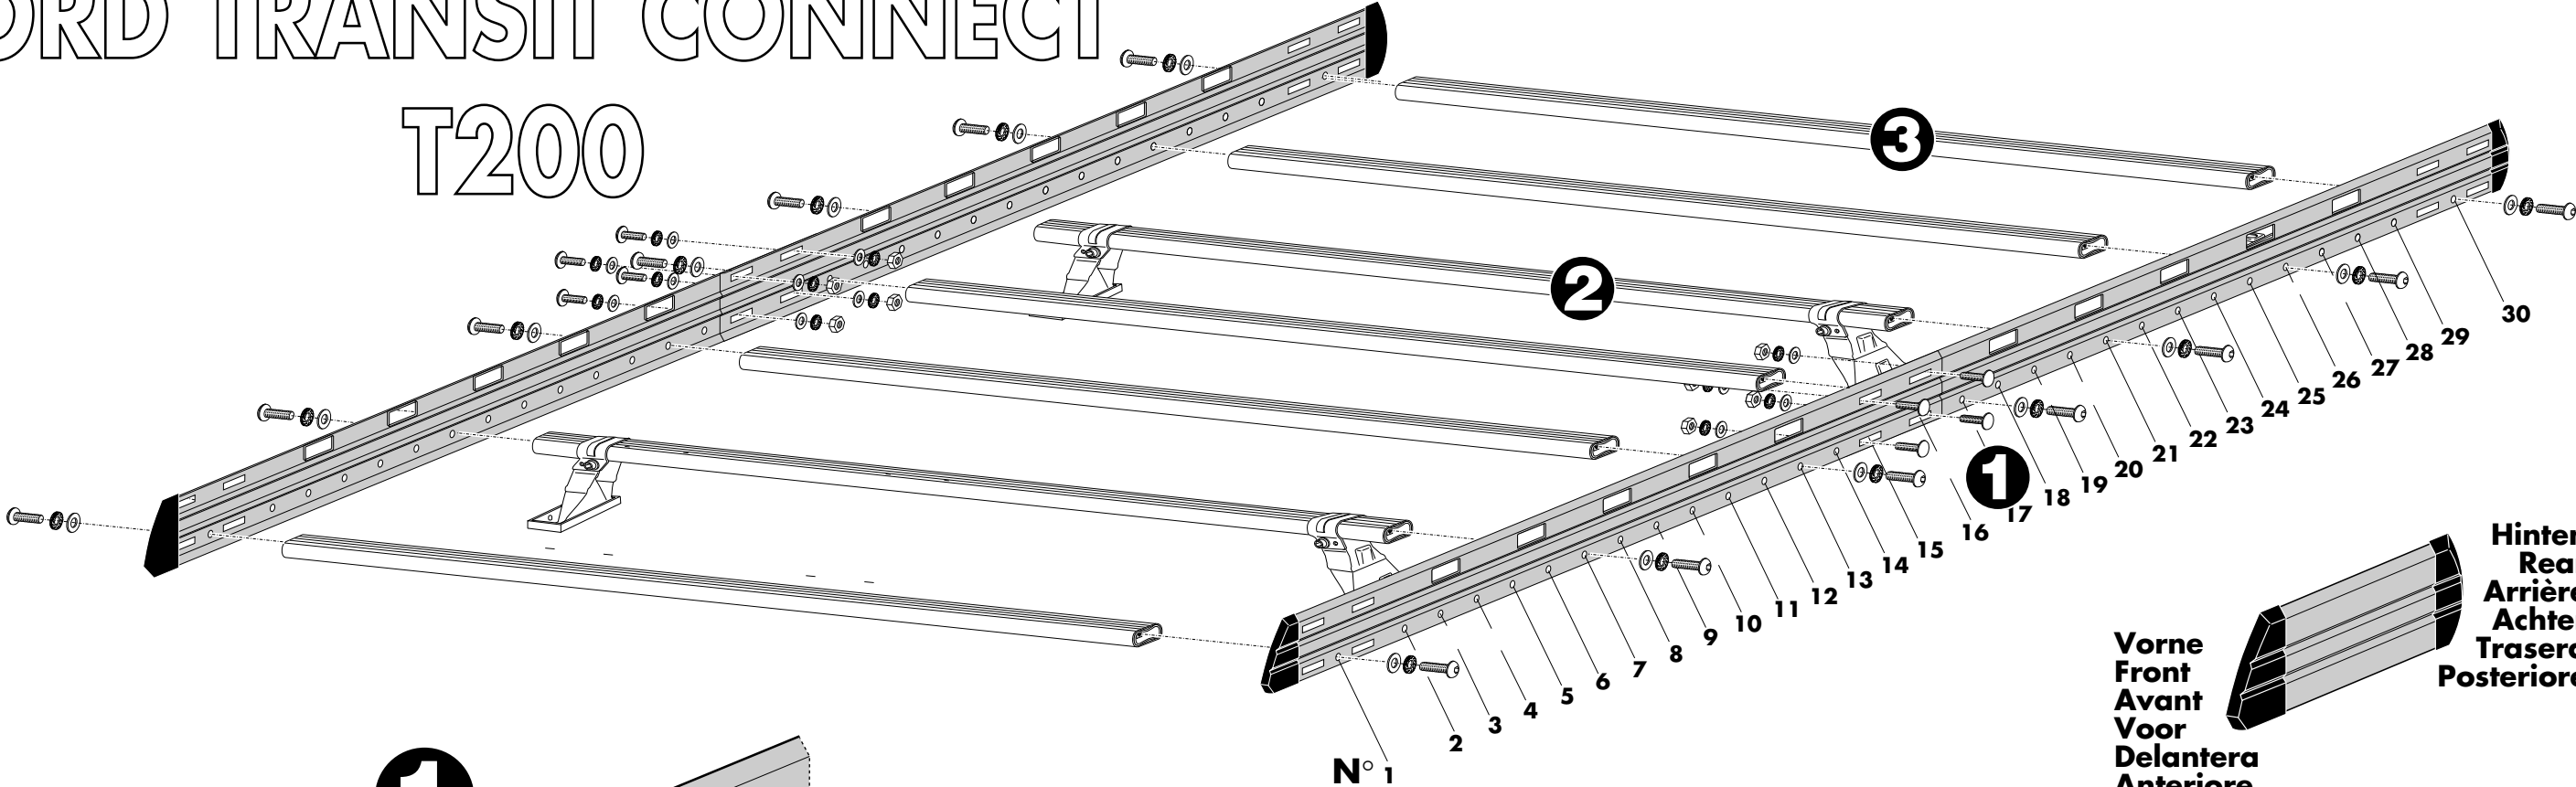


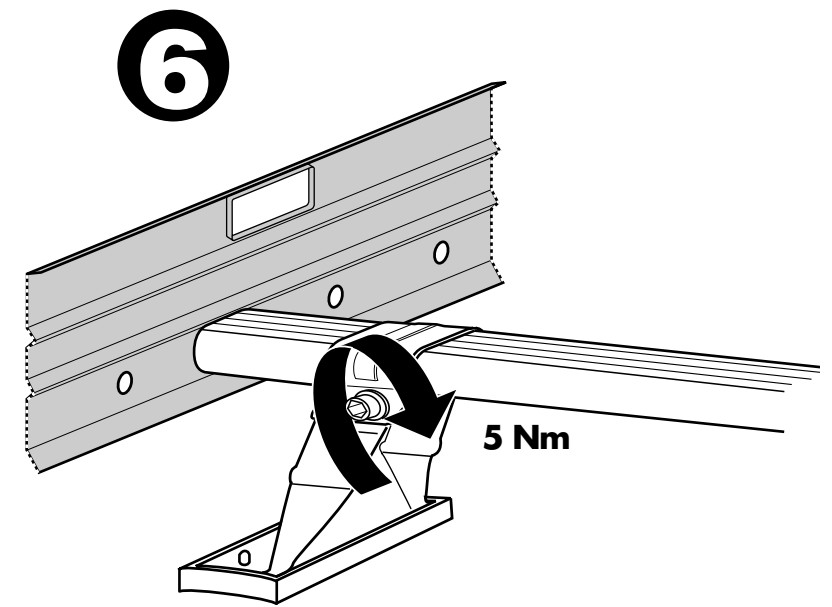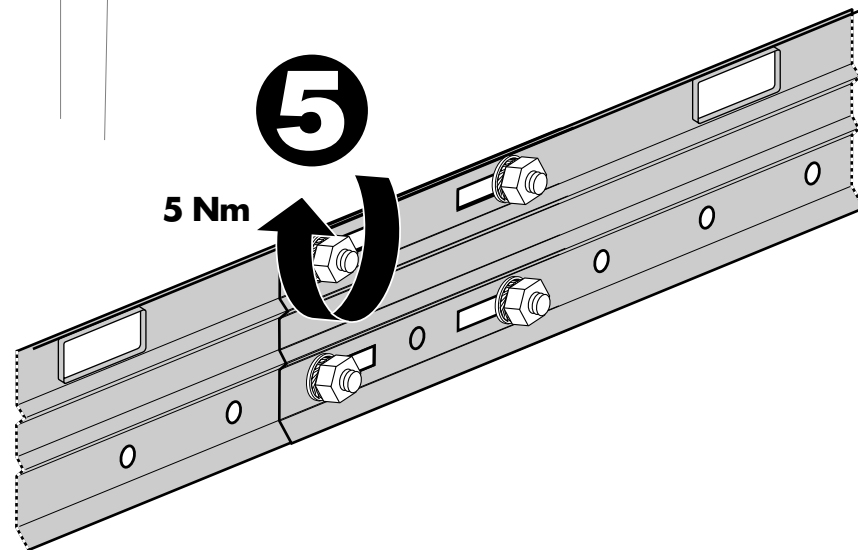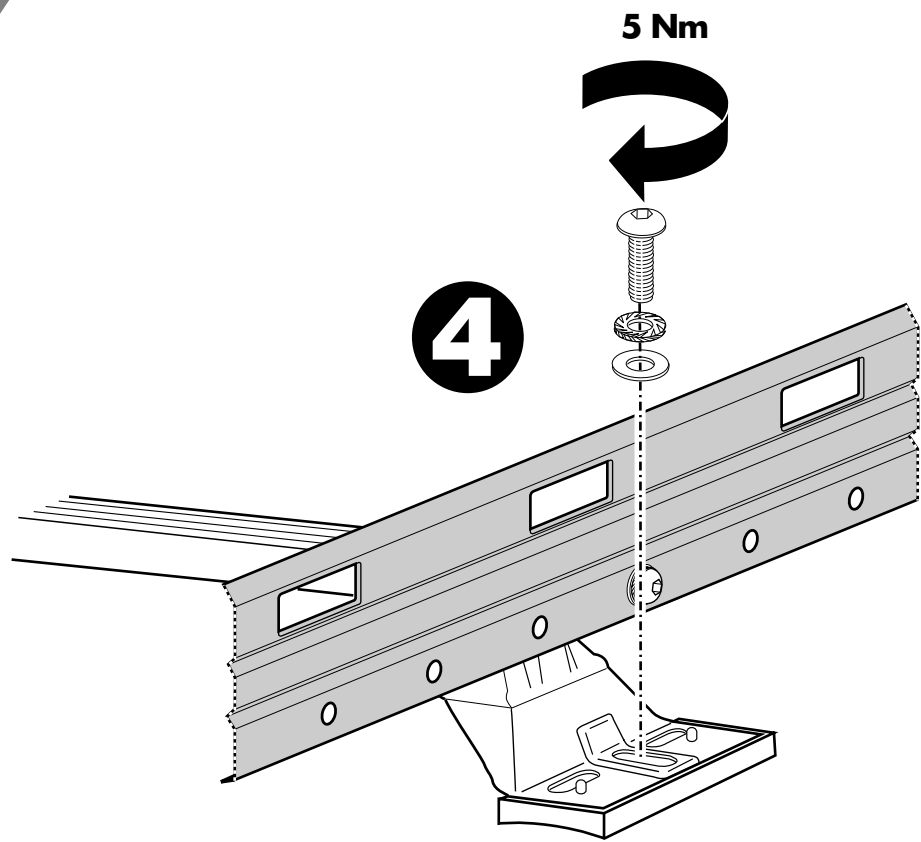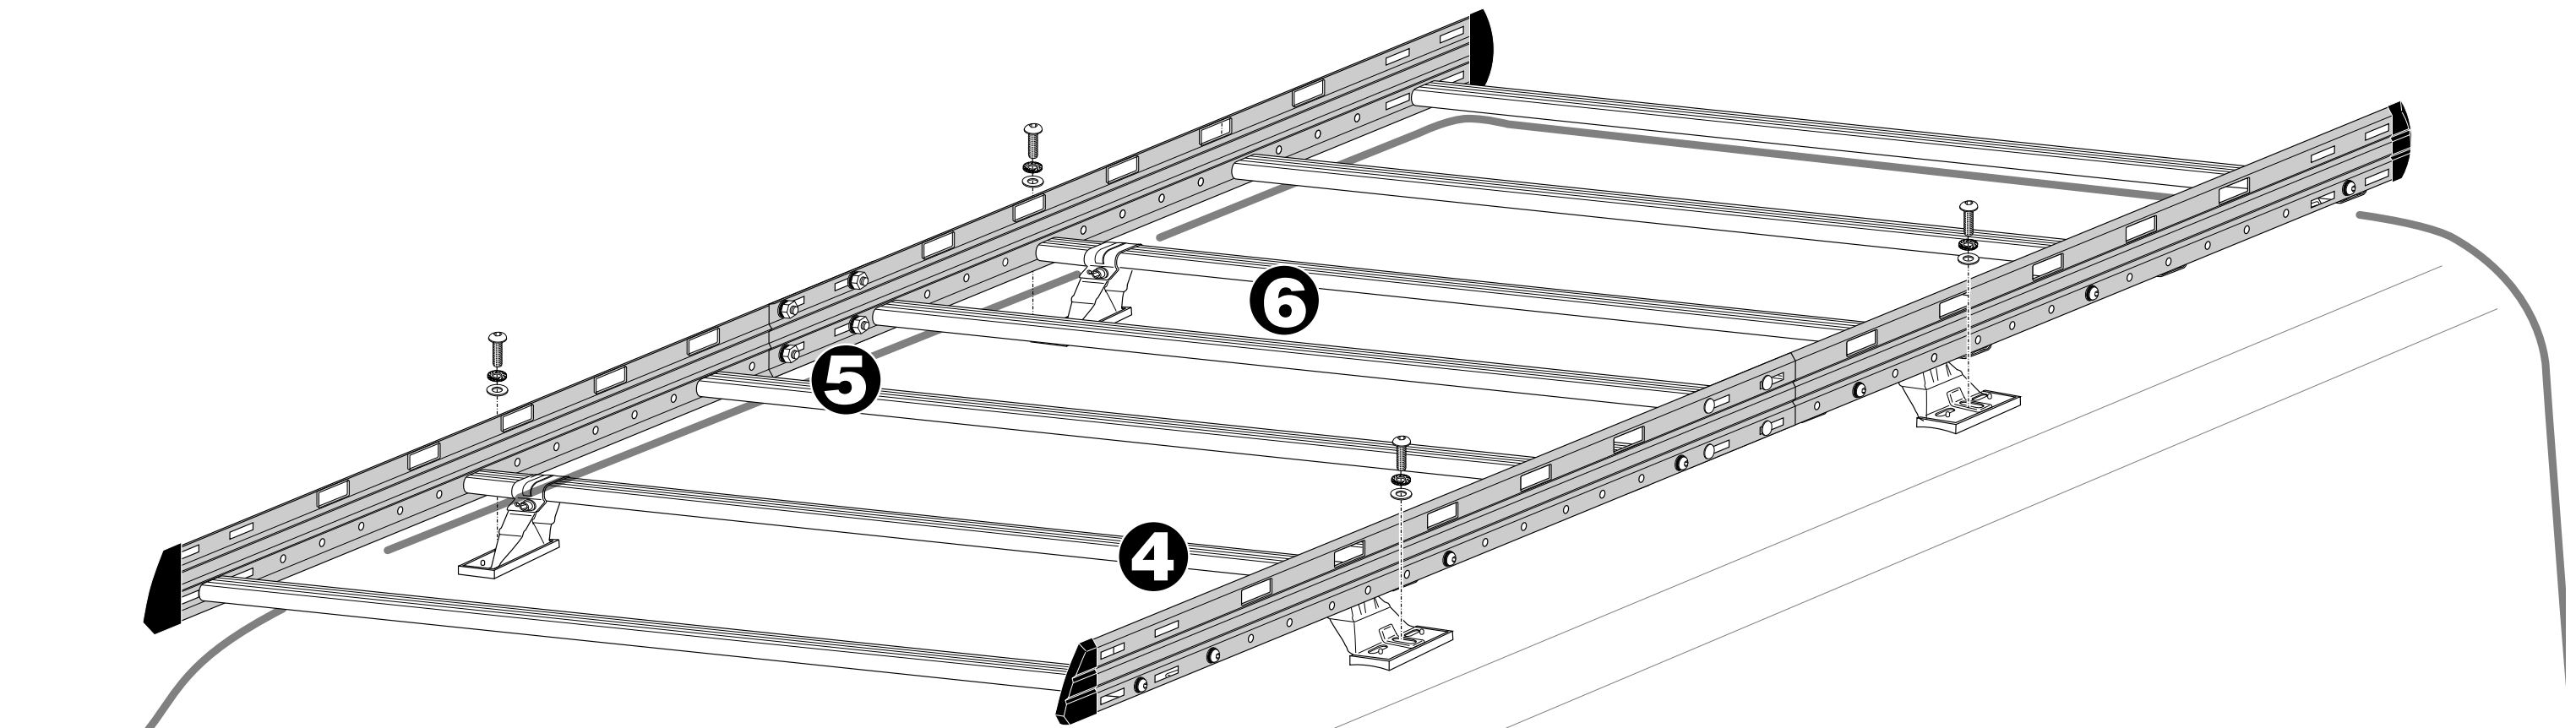


TRANSIT CONNECT T200


FORD TRANSIT CONNECT

T230

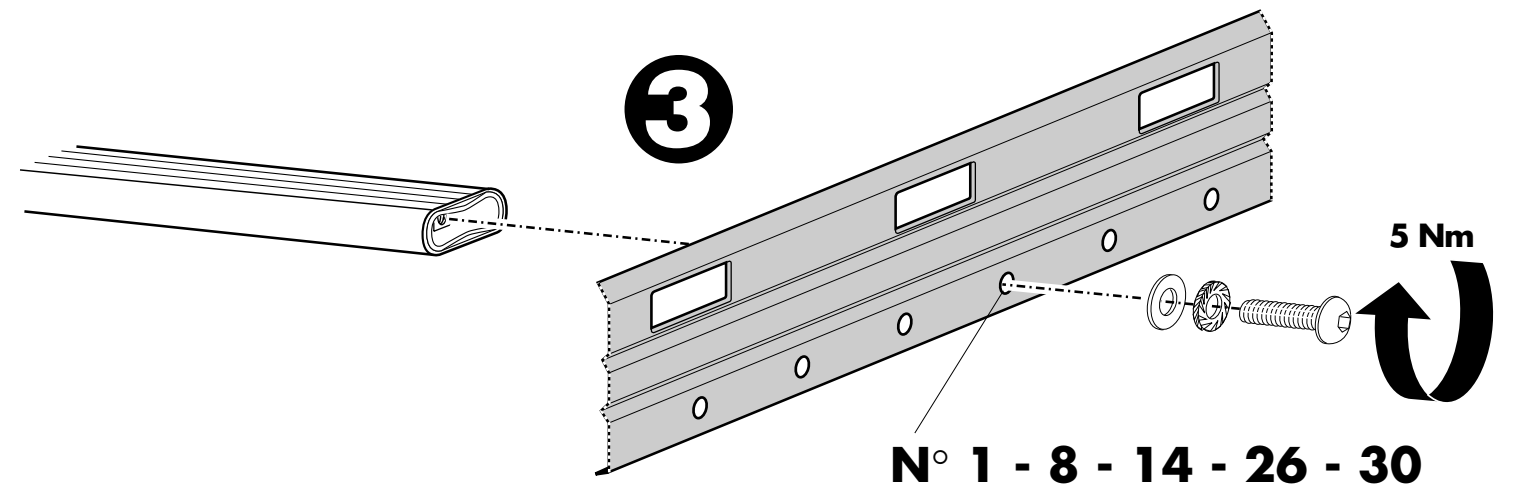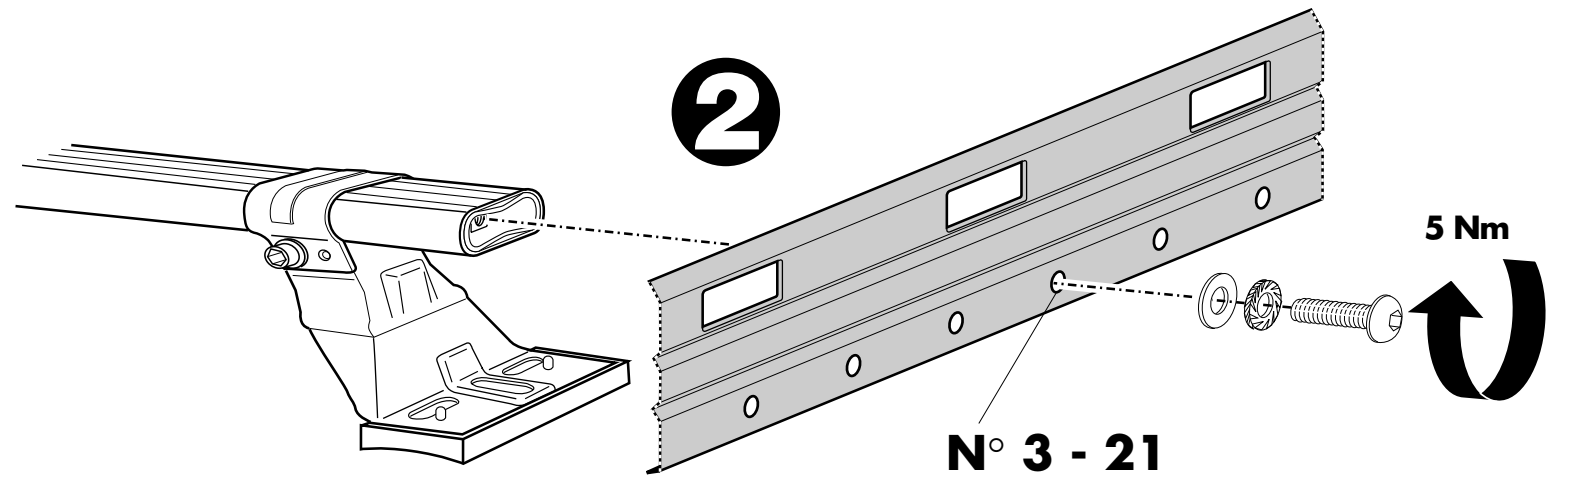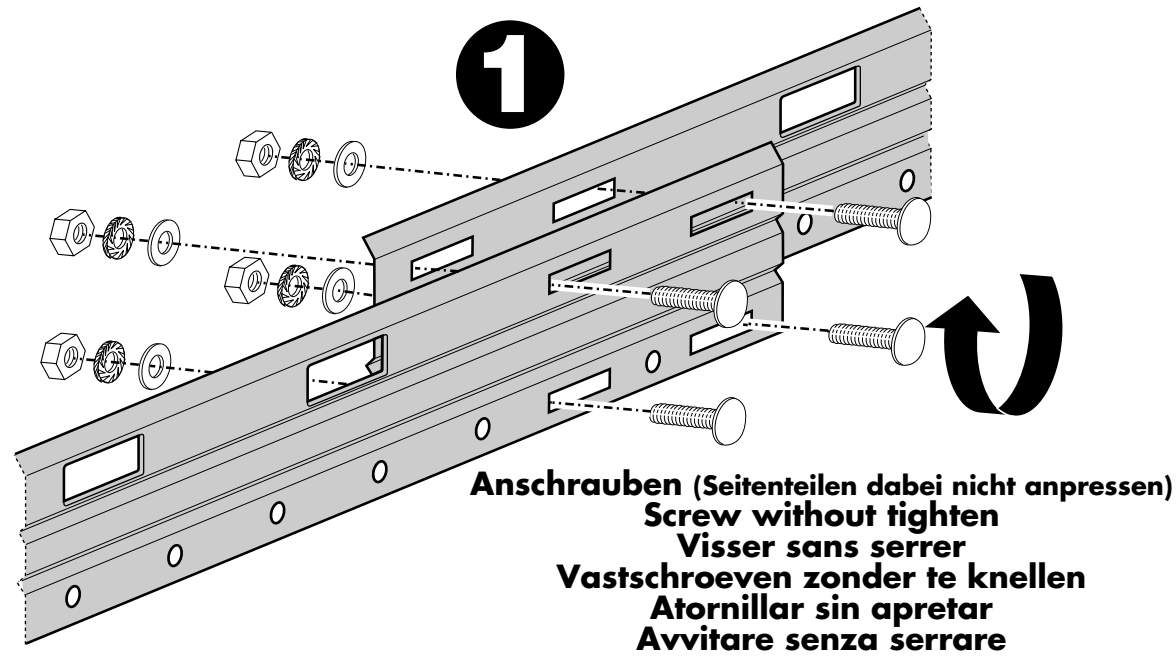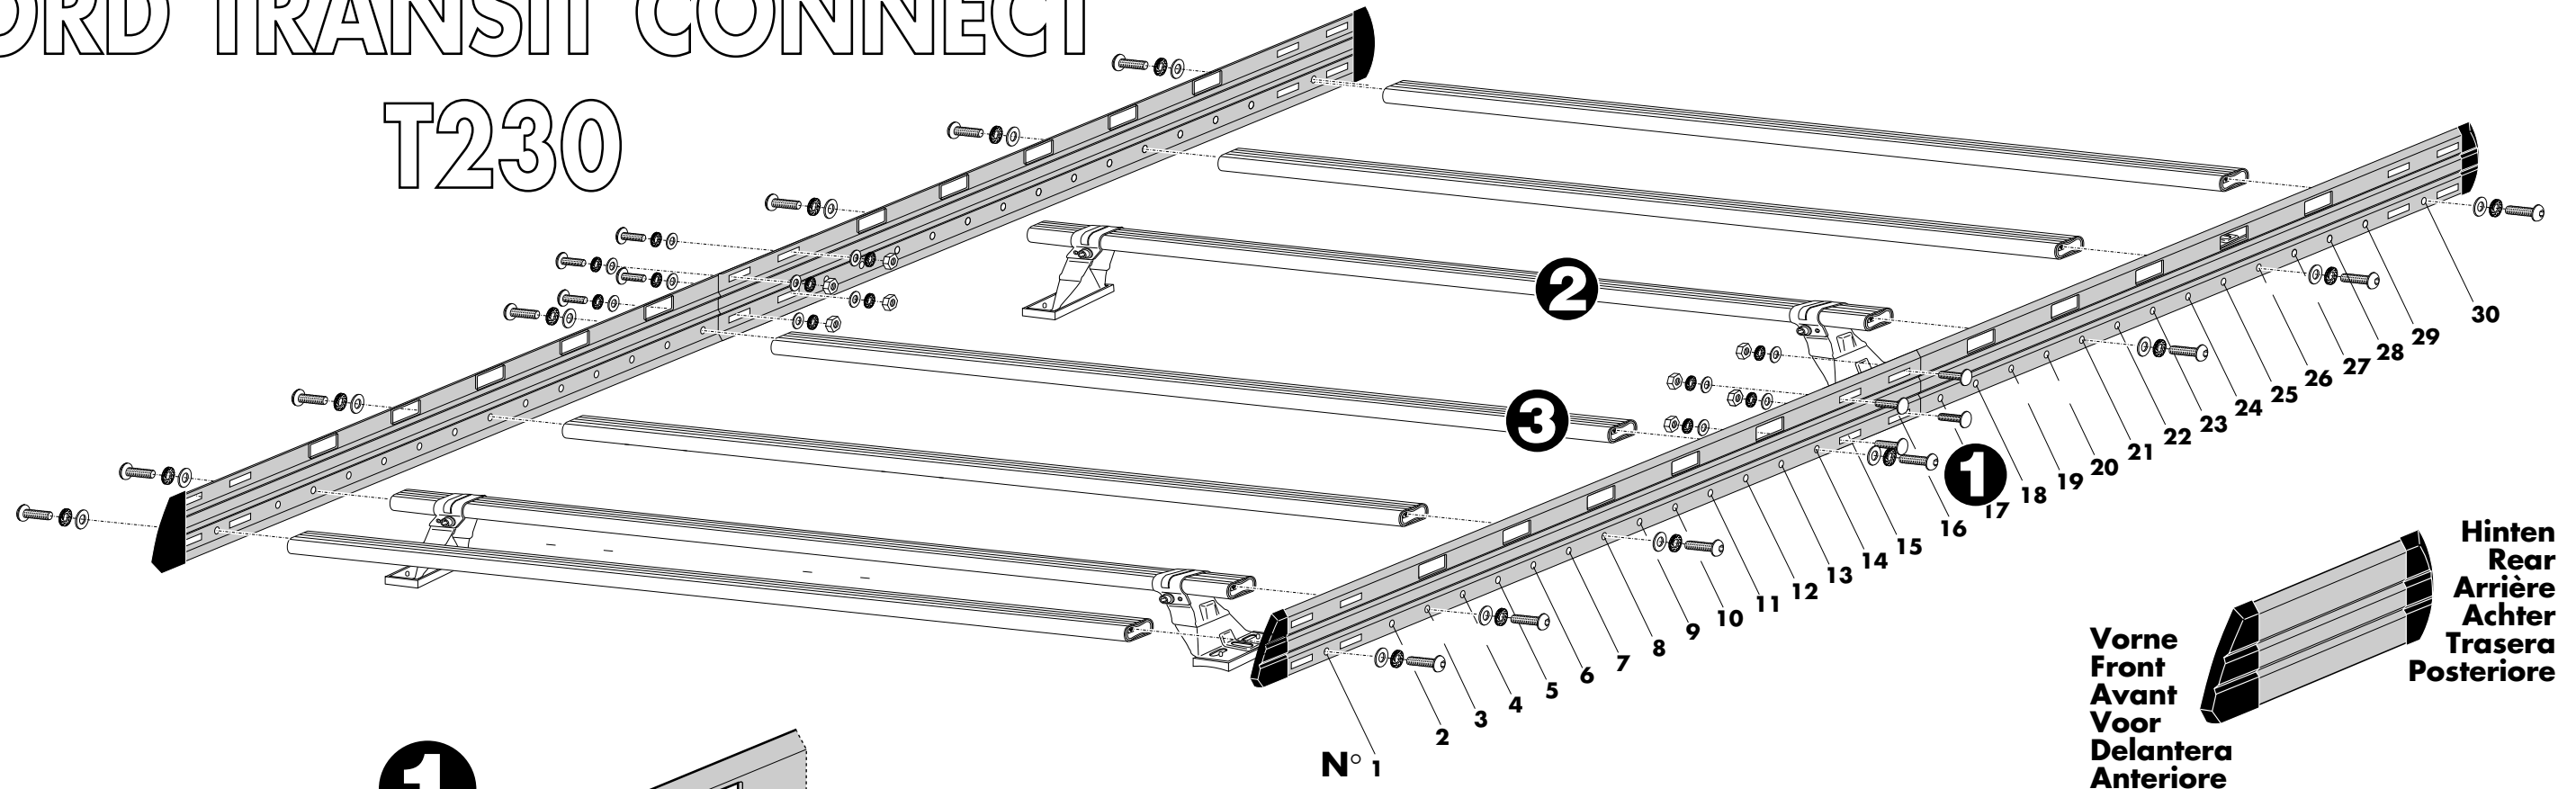


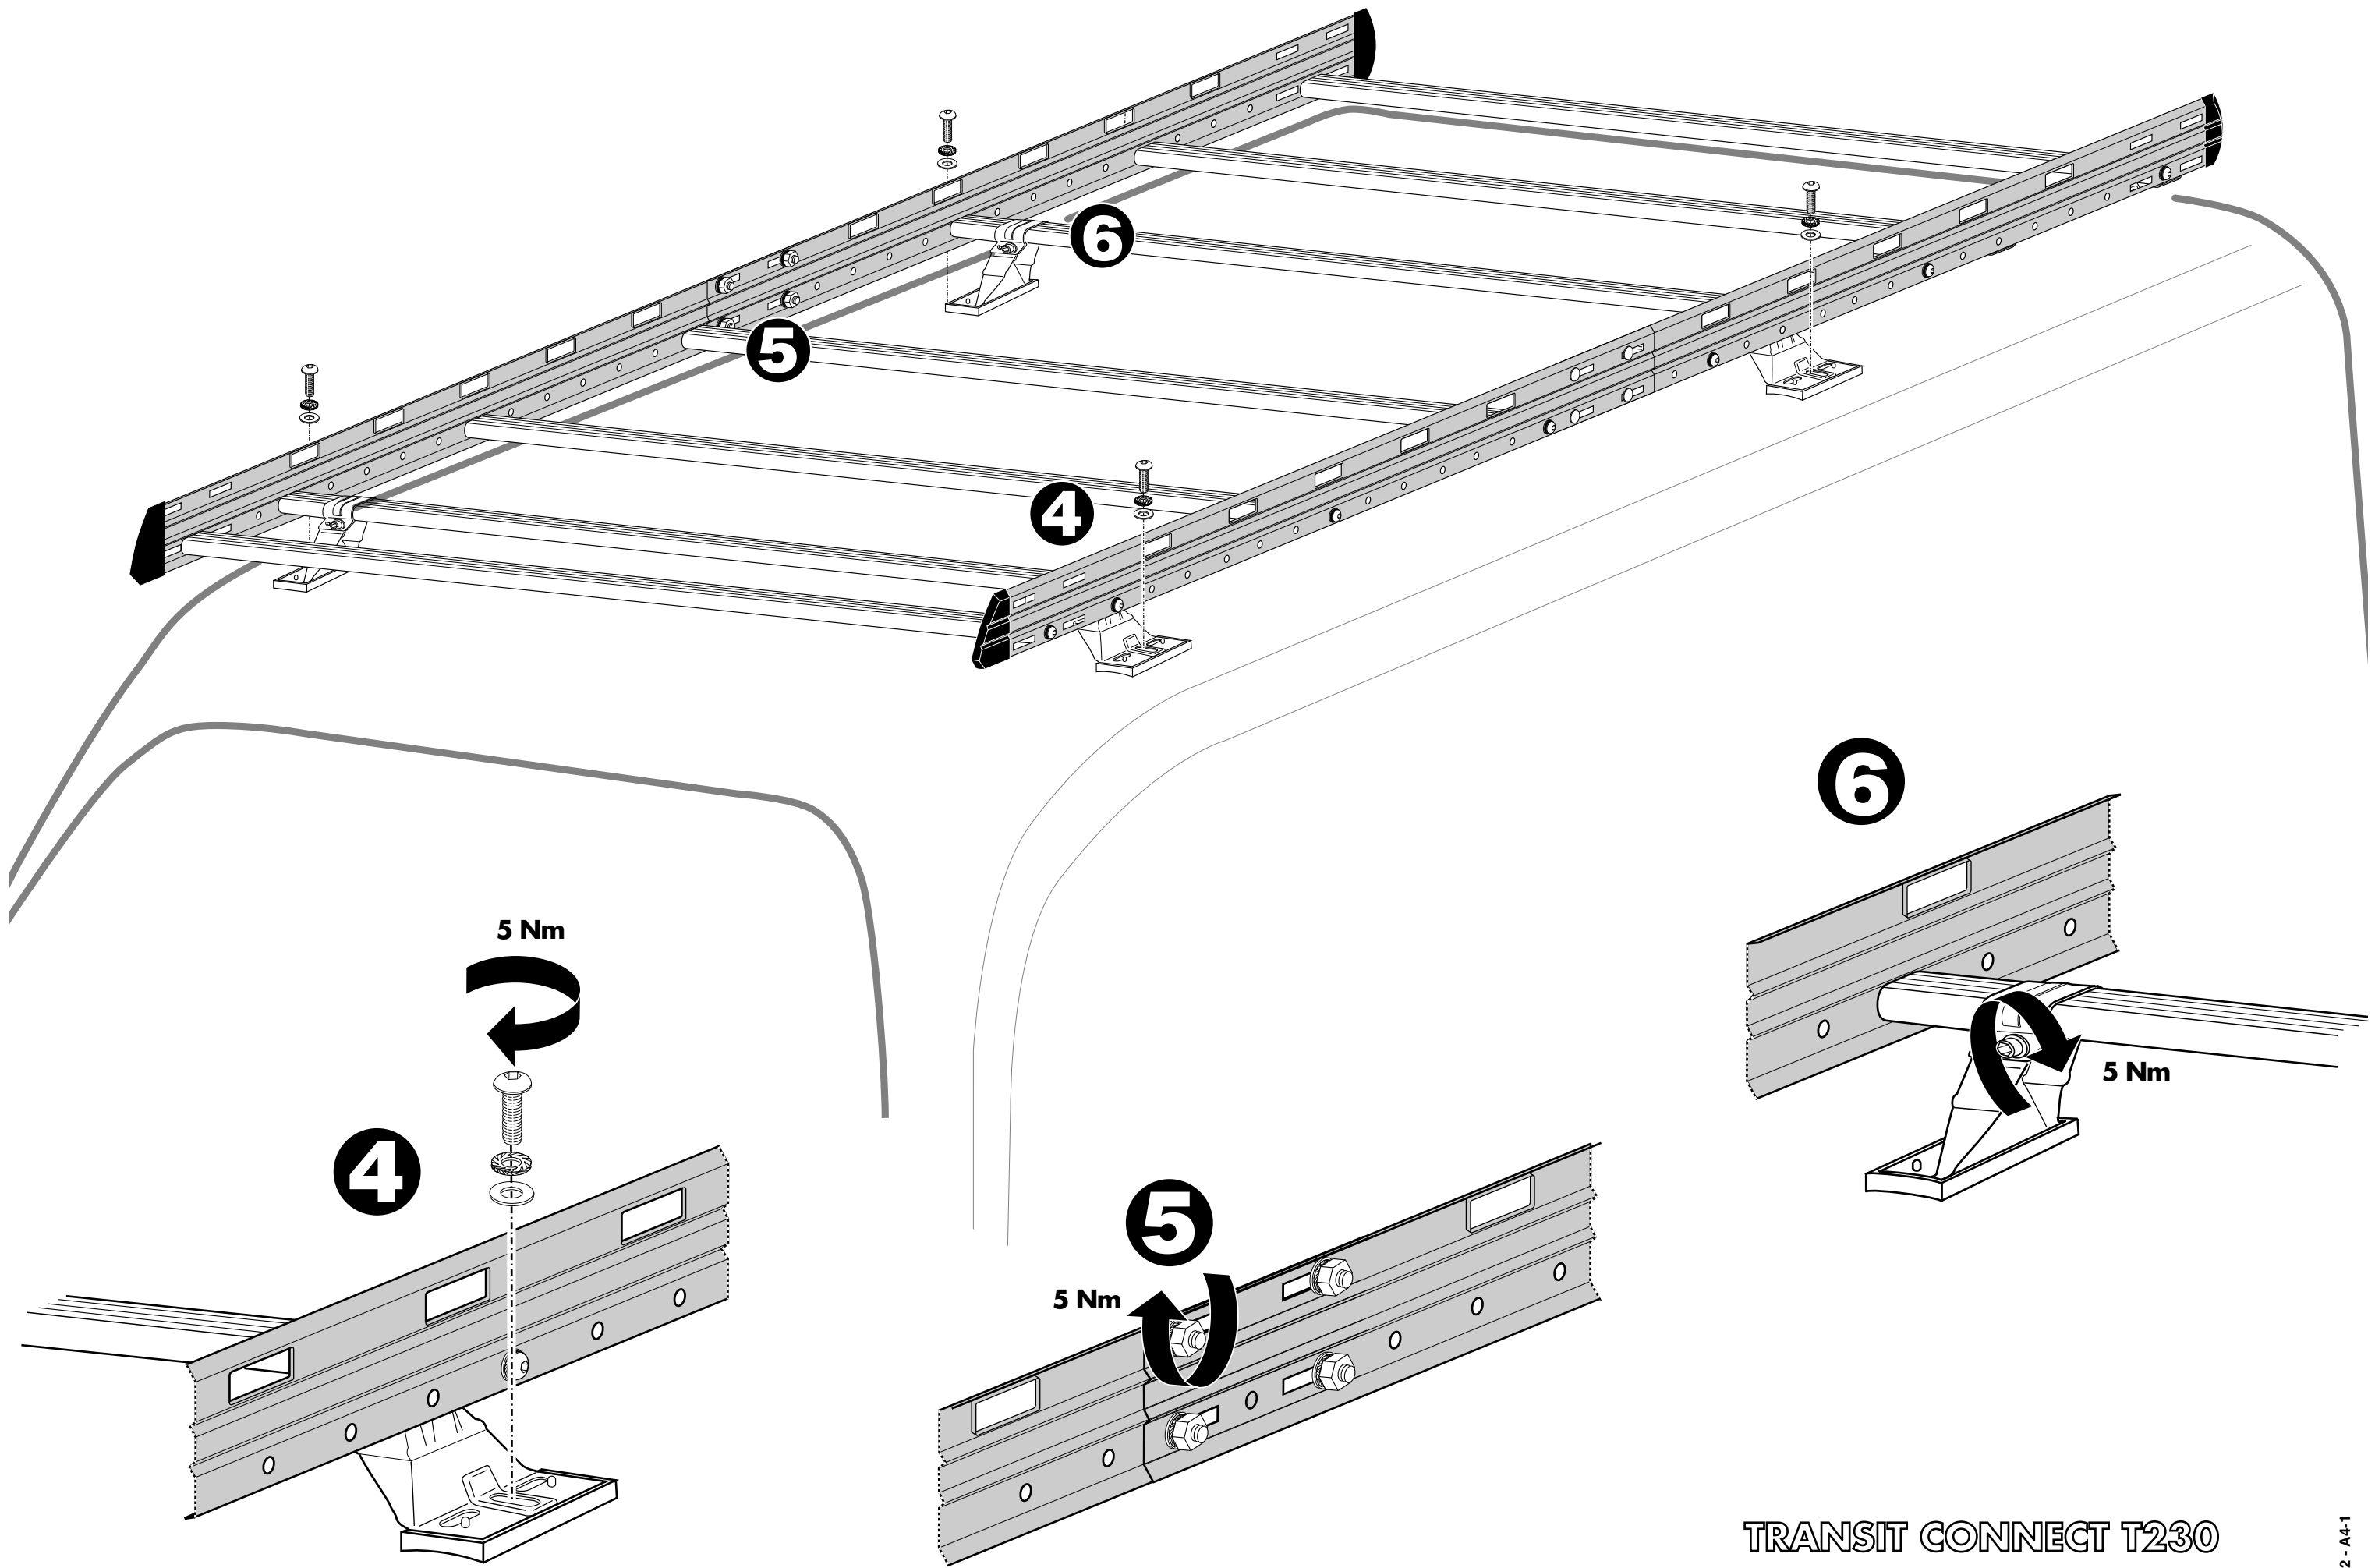


TRANSIT CONNECT T230

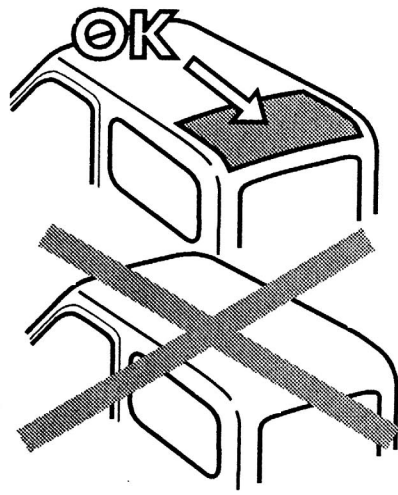

RENAULT KANGOO

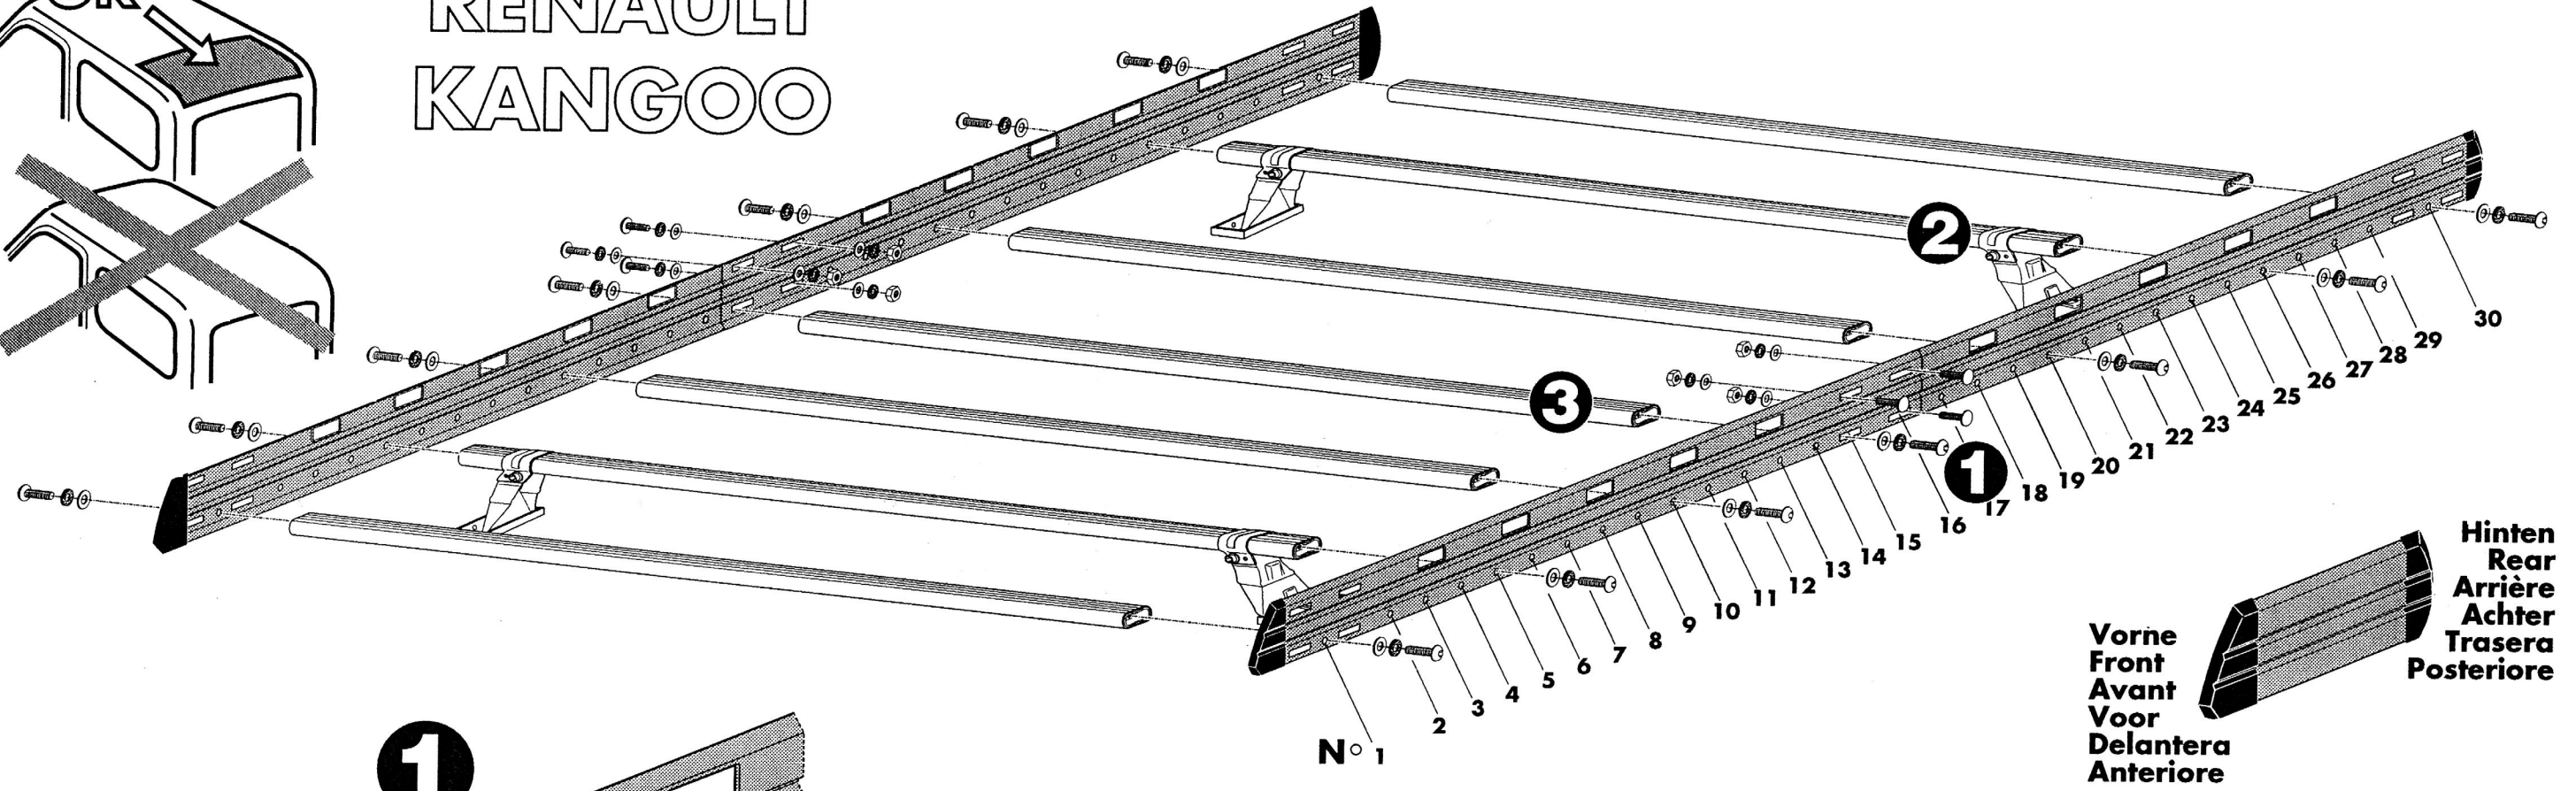


1

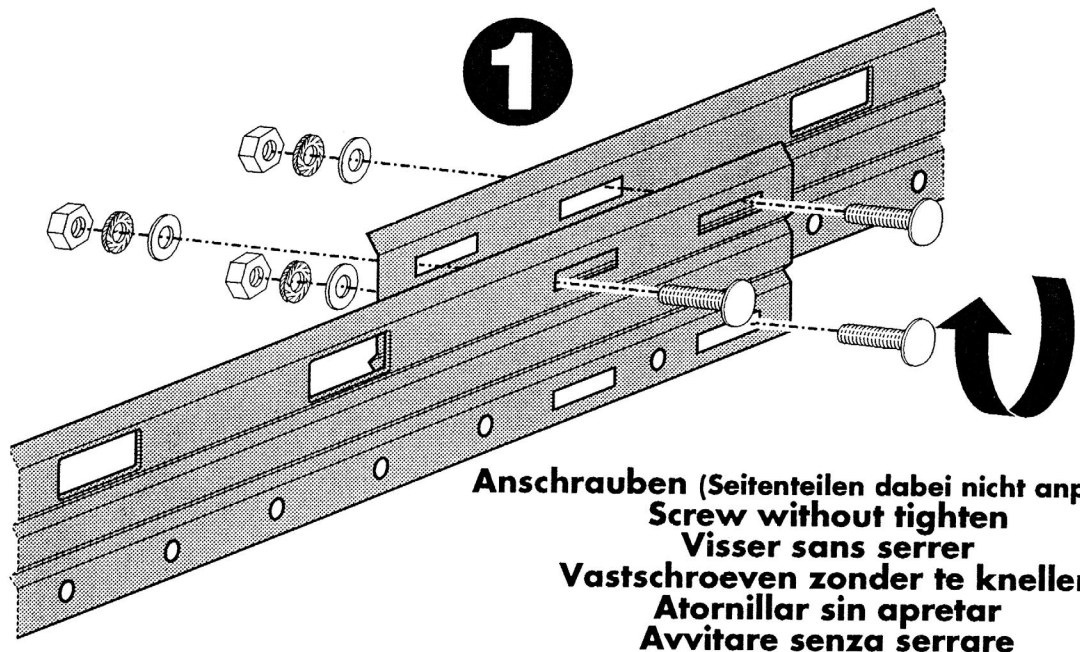


Anschrauben (Seitenteilen dabei nicht anpressen)
Screw without tighten
Visser sans serrer
Vastschroeven zonder te knellen
Atornillar sin apretar
Avvitare senza serrare

2





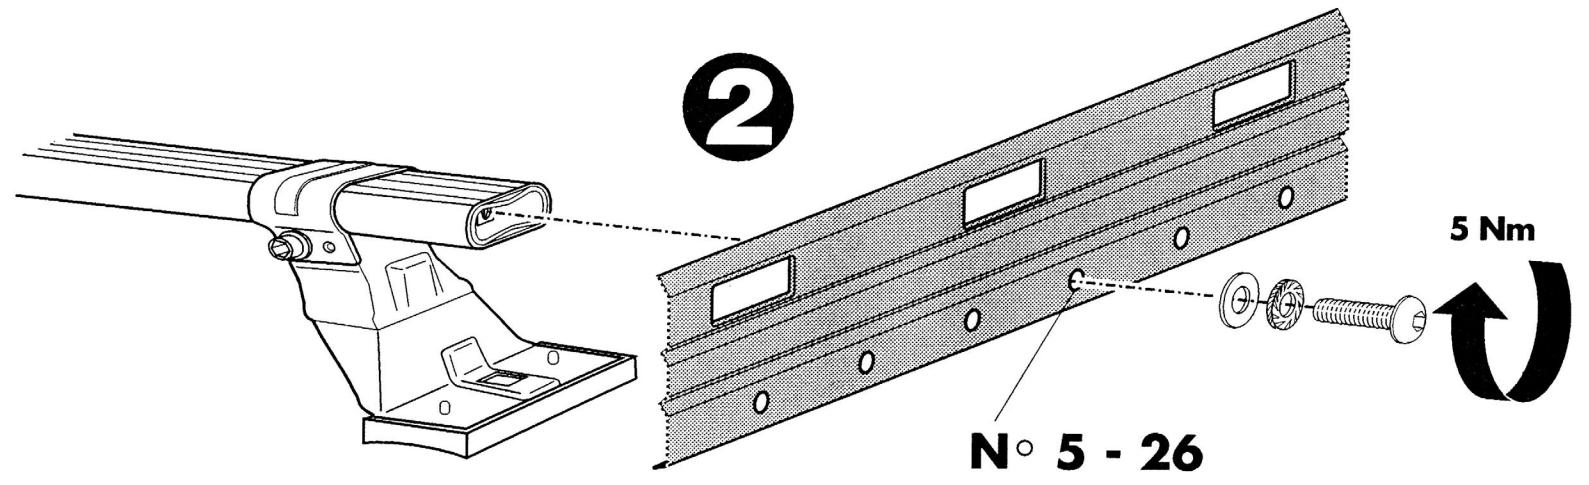


N° 5 - 26

3




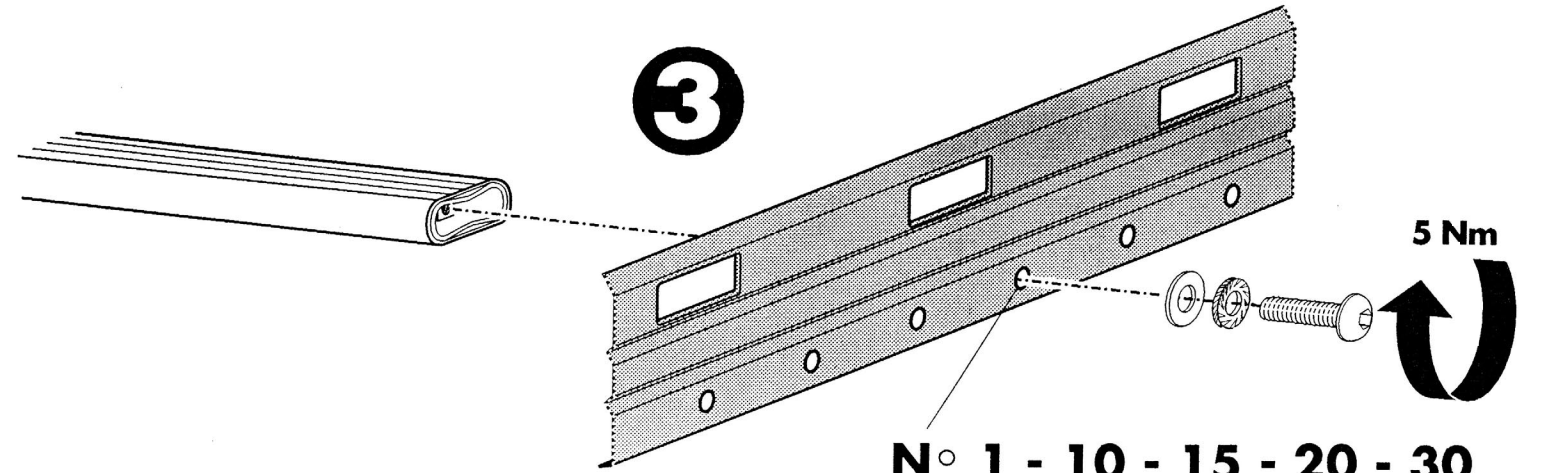



N° 1 - 10 - 15 - 20 - 30

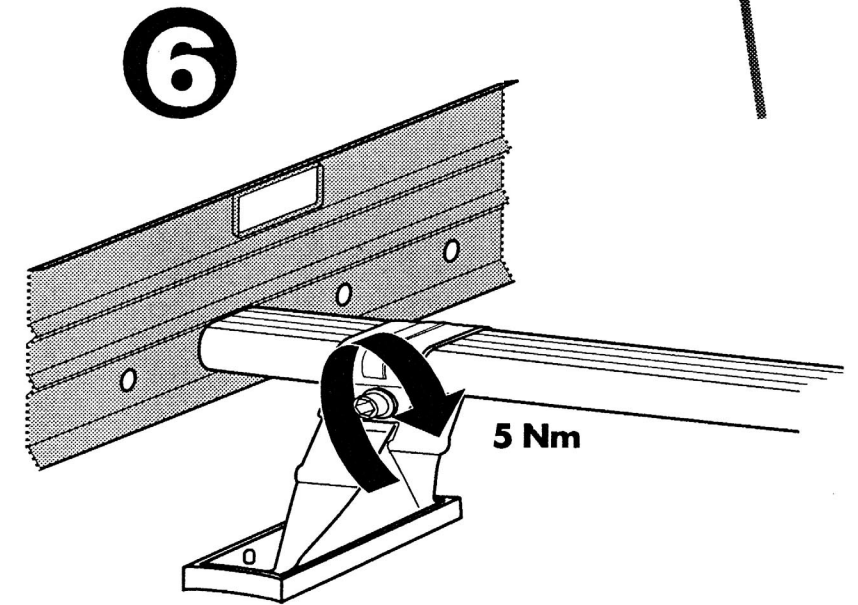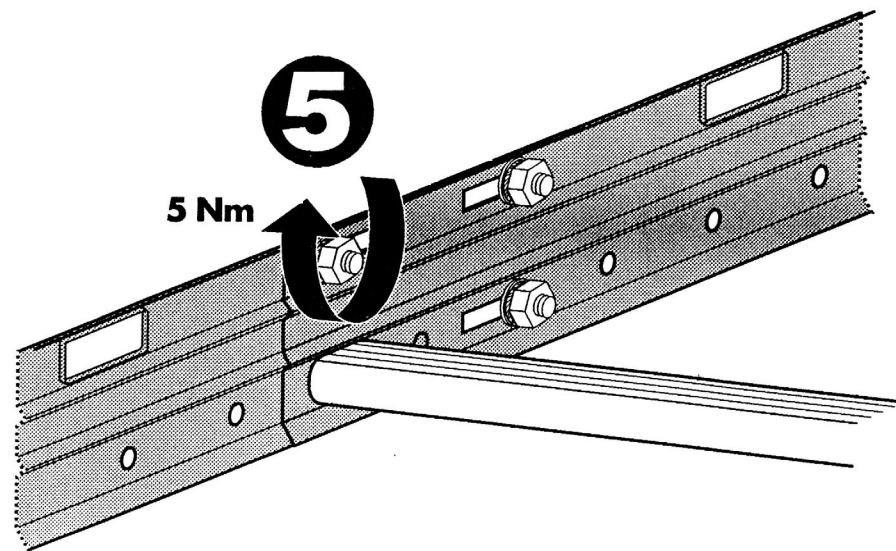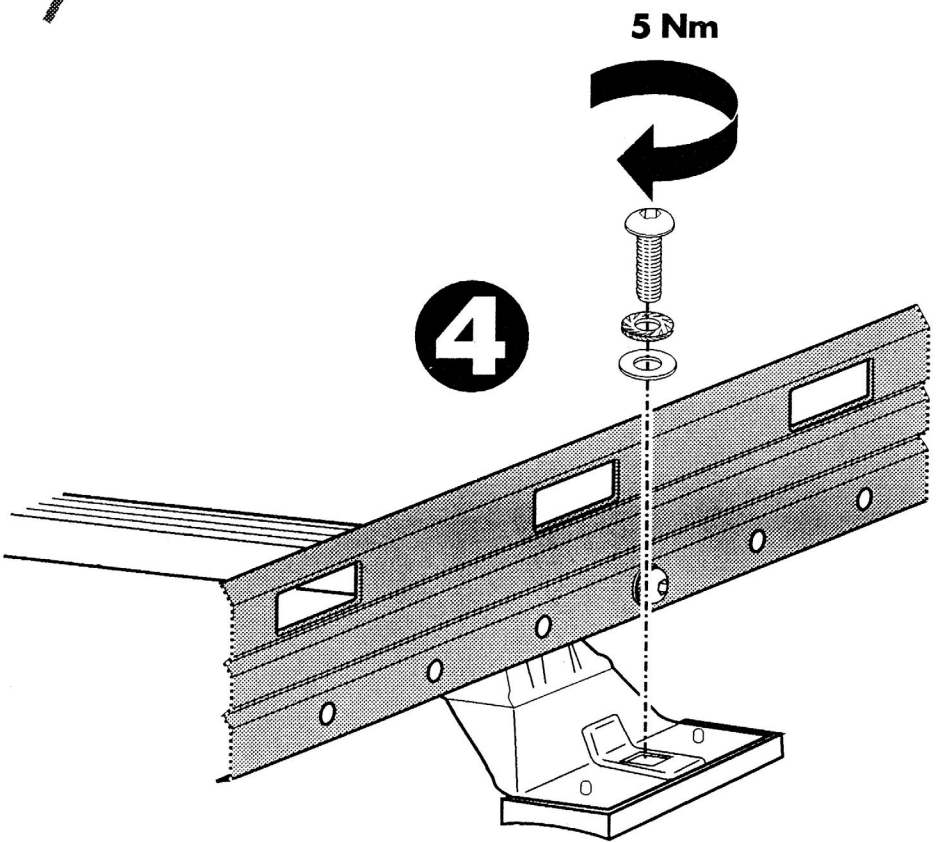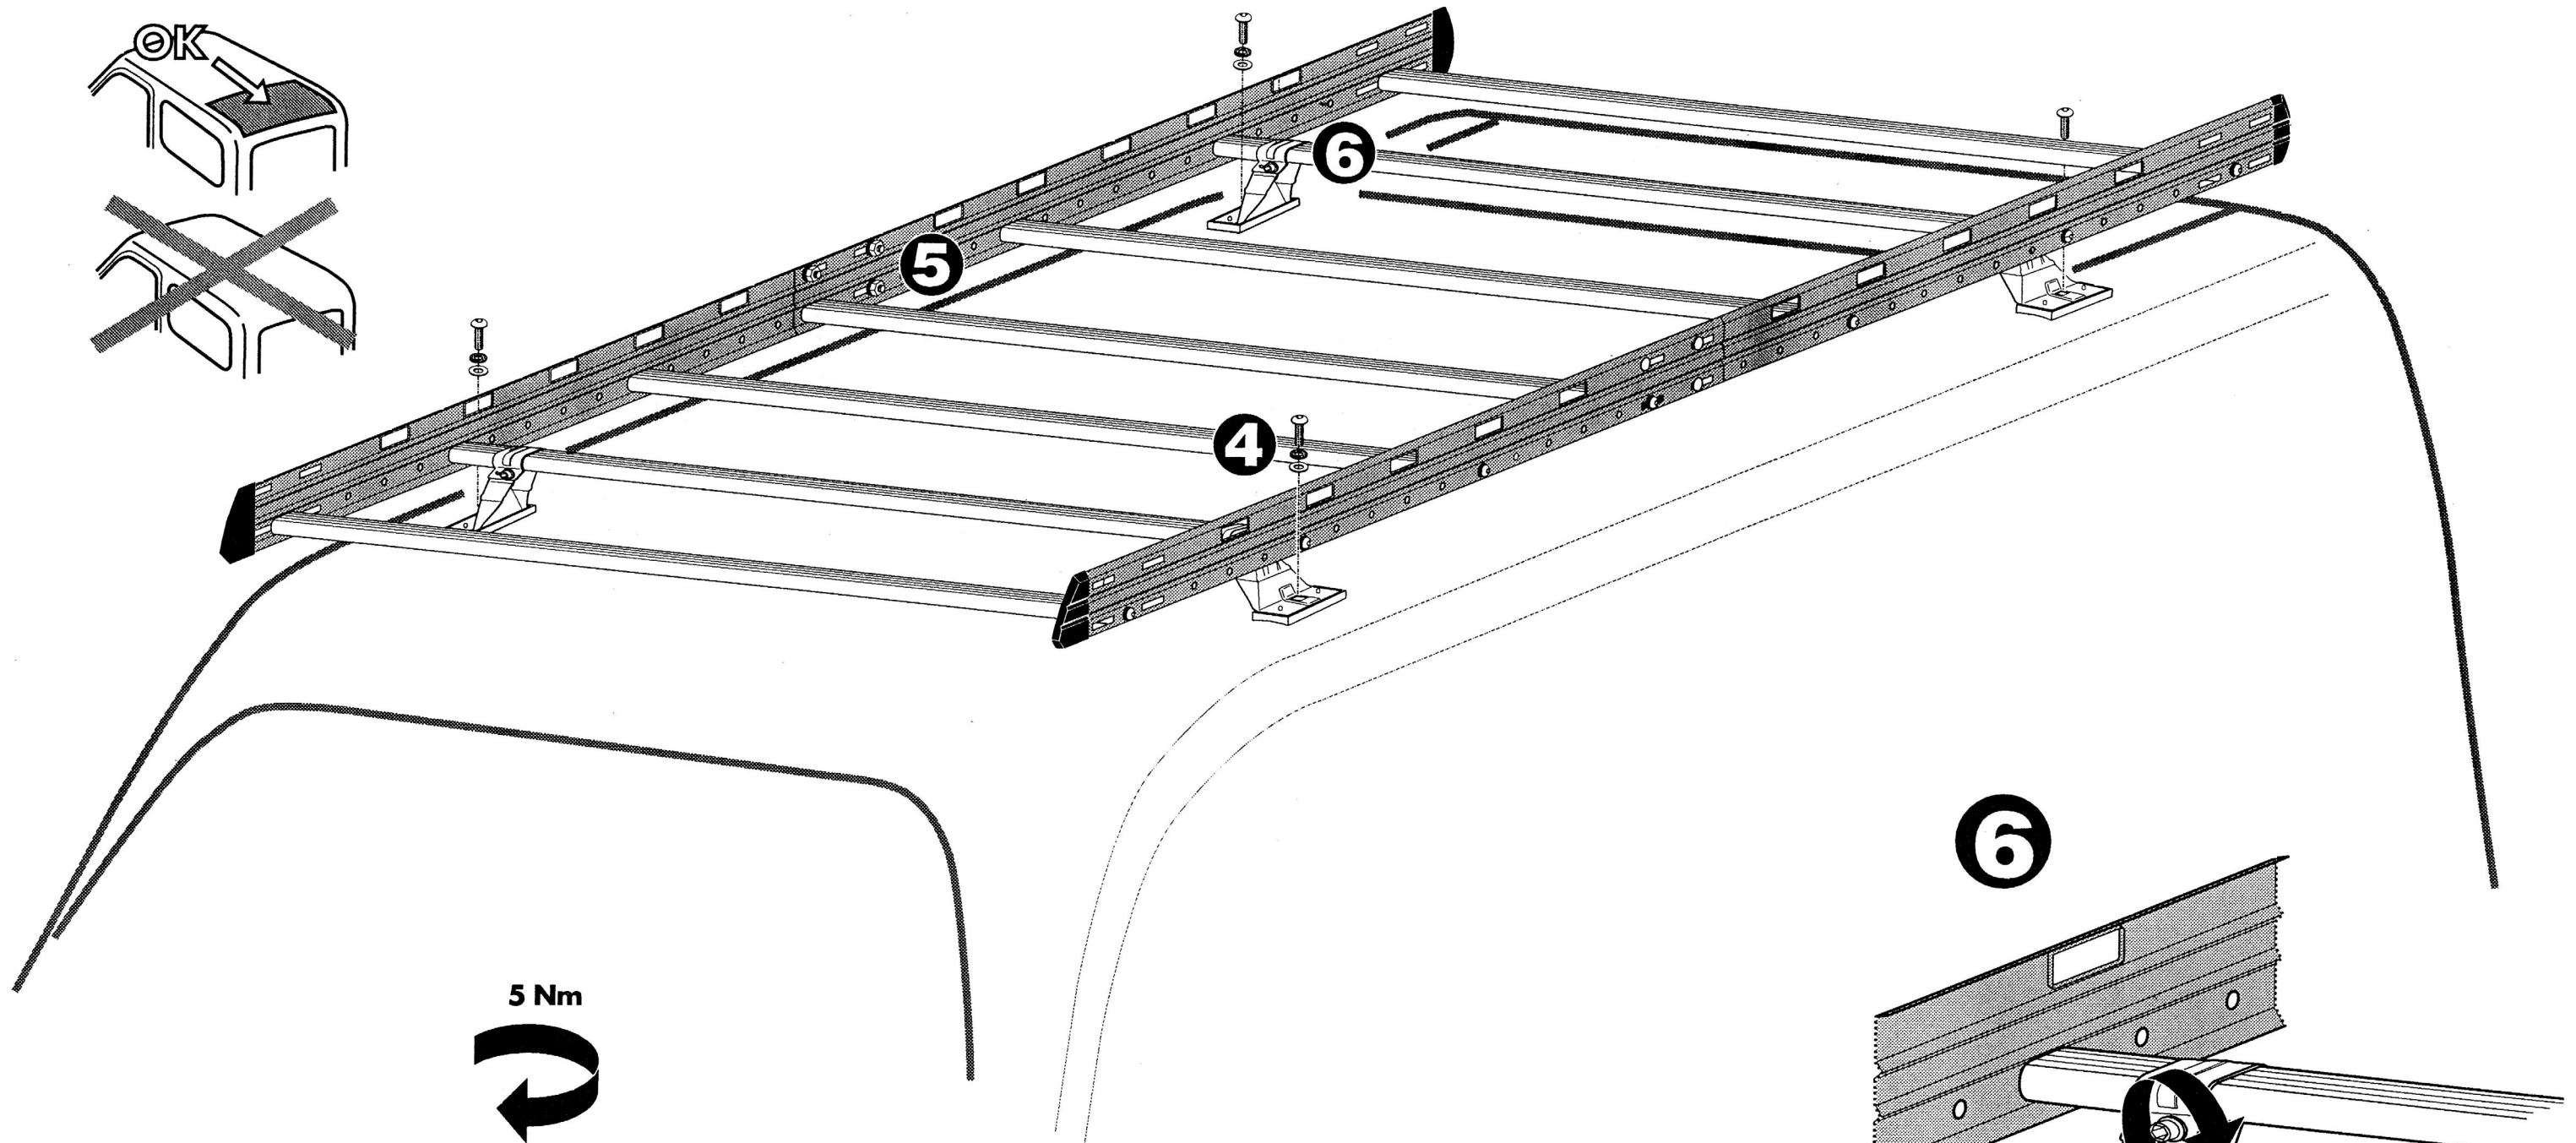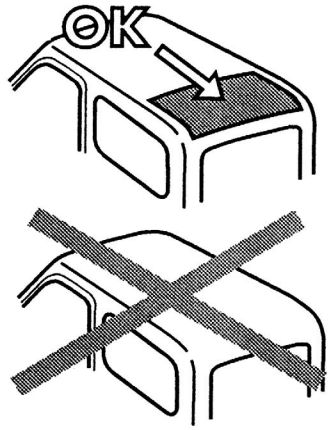

KANGOO

VW Caddy

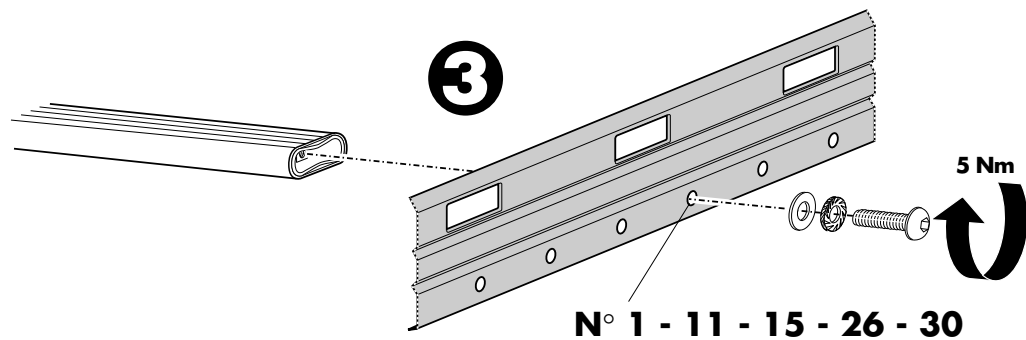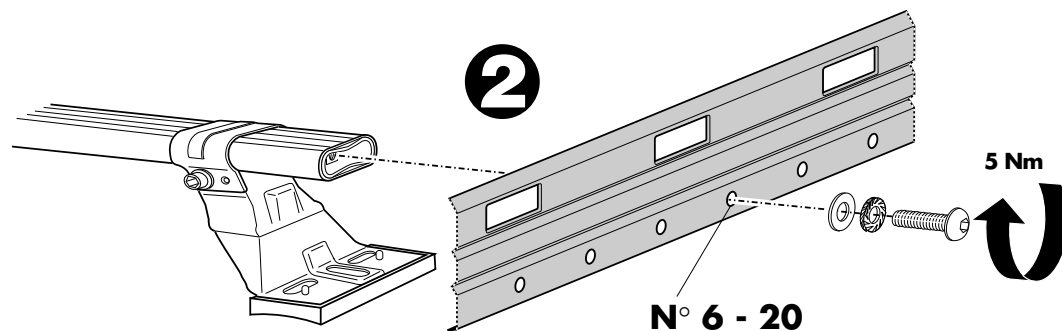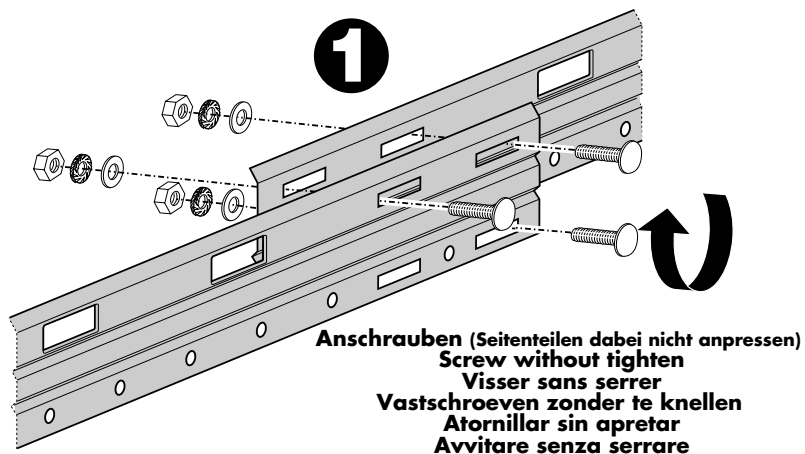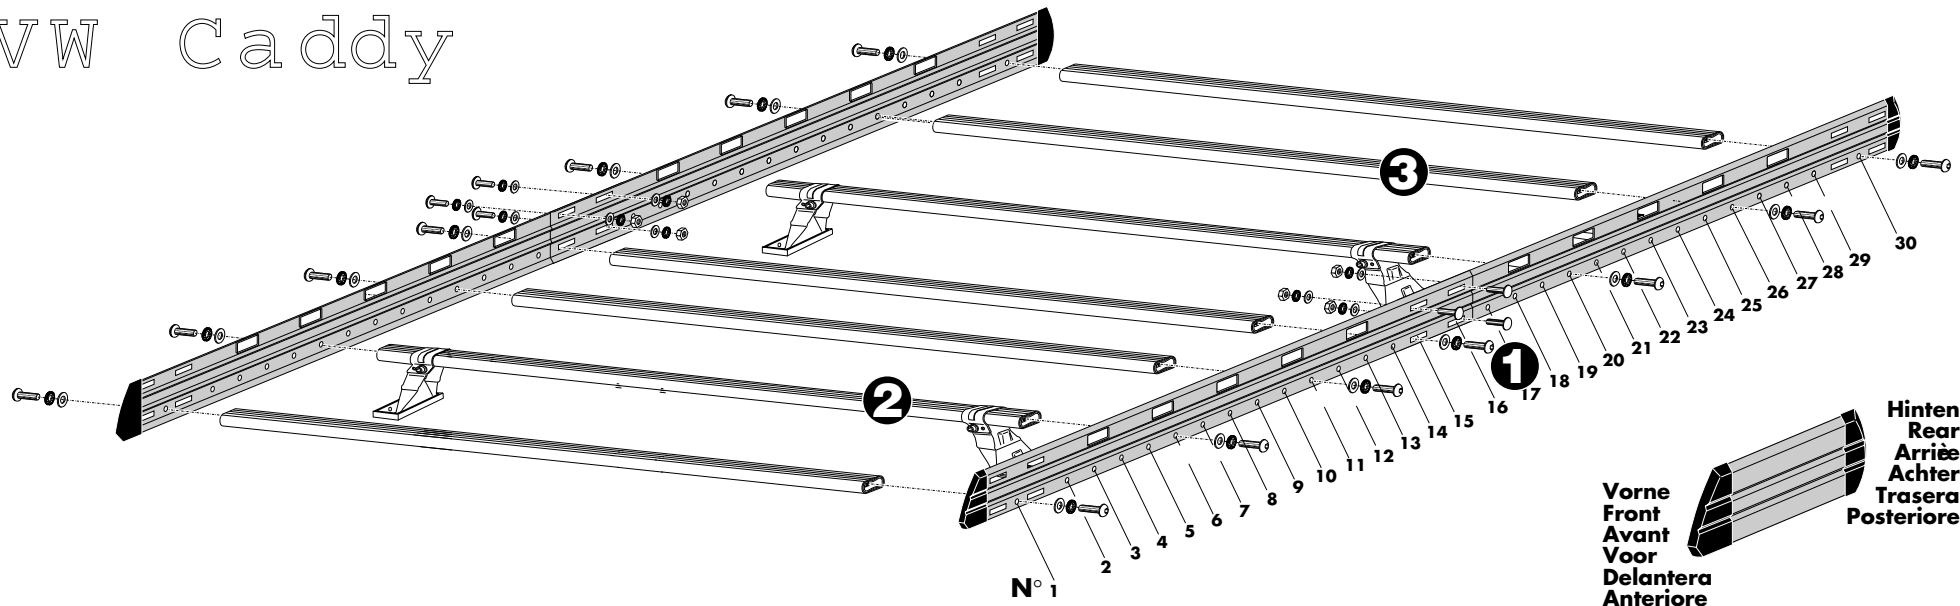

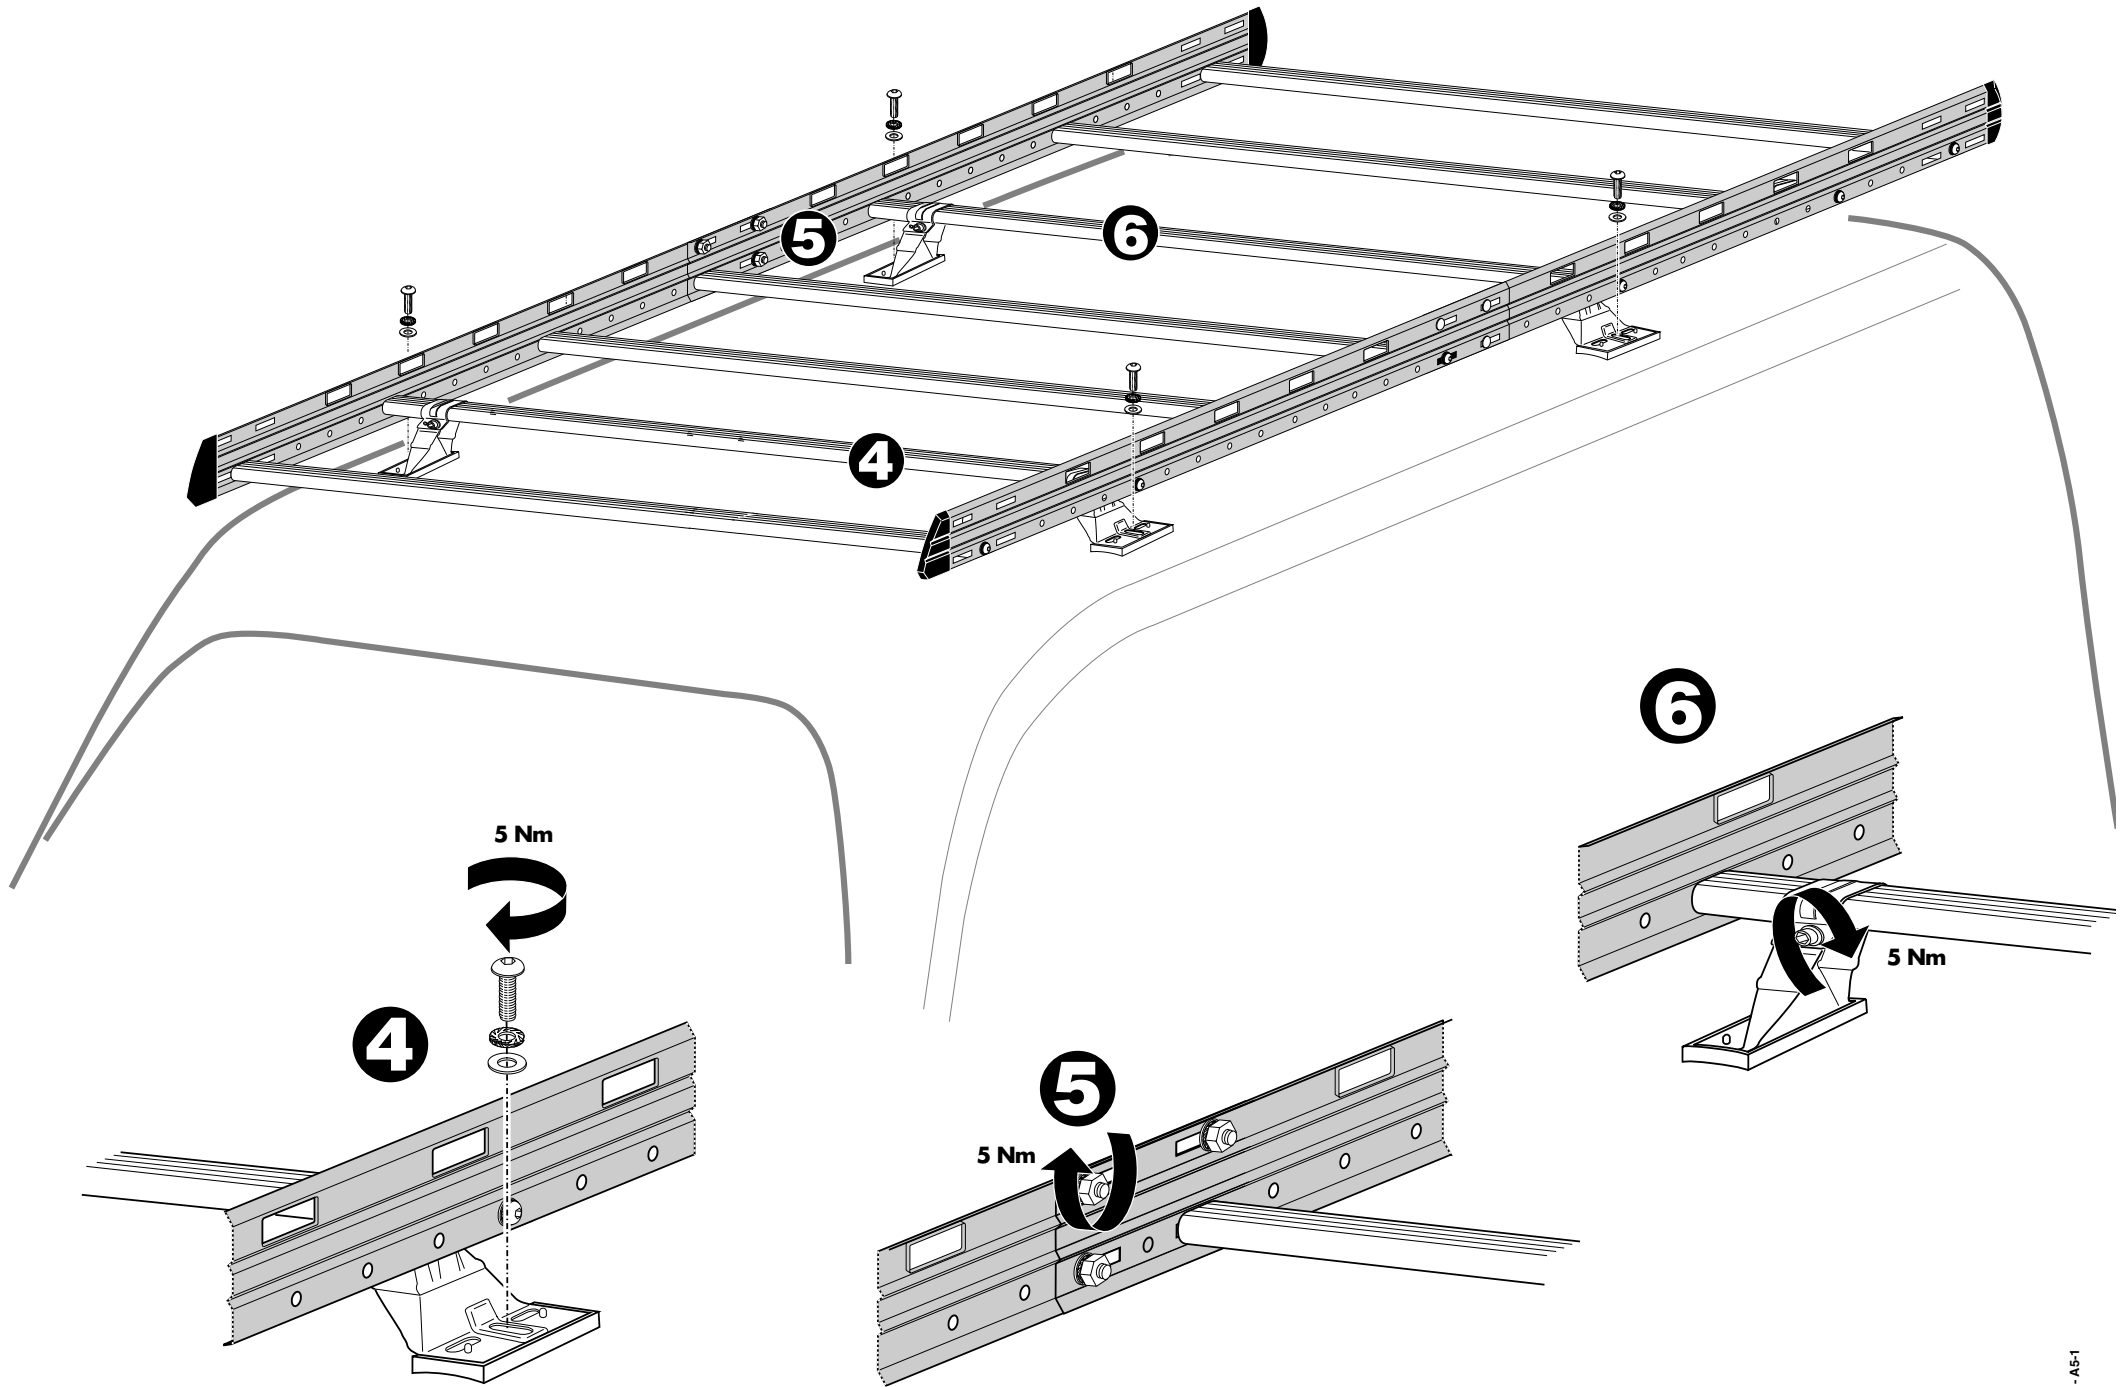

VW Caddy