

Thule Rapid System Kit 1048





> Instructions

SAAB 9-5, 4-dr Sedan, 98-04, 05-09 / *99-09

SAAB 9-5, 5-dr Estate, 05-

SAAB 9-5, 5-dr Wagon, *05-08

*North America

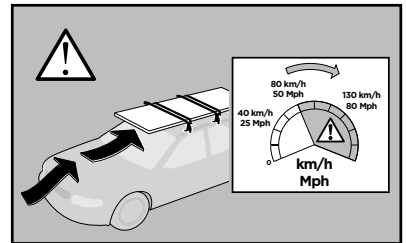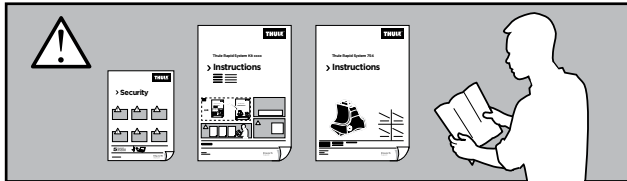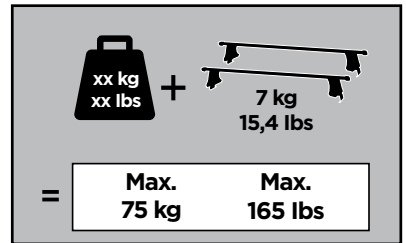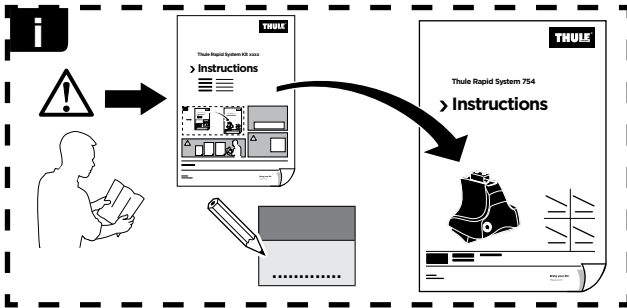

ISO 11154-E

141048


C.20121010
519-1048-02

Bring your life

thule.com




16 x4



102 x4





x1



x1

1

	X (scale)	X (mm)	X (inch)
SAAB 9-5 , 4-dr Sedan, 98-04, 05-09 / *99-09	34	991	39
SAAB 9-5 , 5-dr Estate, 05-	34	991	39
SAAB 9-5 , 5-dr Wagon, *05-08	34	991	39

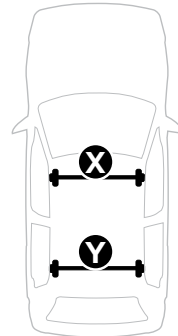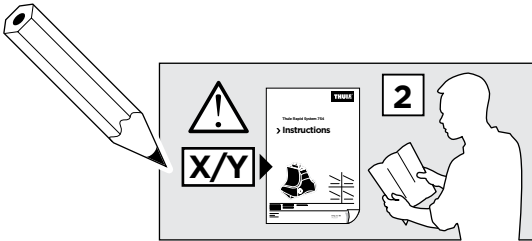



	Y (scale)	Y (mm)	Y (inch)
SAAB 9-5 , 4-dr Sedan, 98-04, 05-09 / *99-09	31,5	966	38
SAAB 9-5 , 5-dr Estate, 05-	31,5	966	38
SAAB 9-5 , 5-dr Wagon, *05-08	31,5	966	38

2

SAAB 9-5, 4-dr Sedan, 98-04, 05-09 / *99-09

SAAB 9-5, 5-dr Estate, 05-

SAAB 9-5, 5-dr Wagon, *05-08

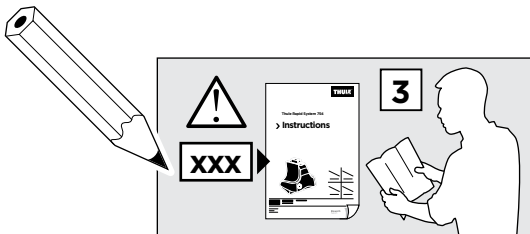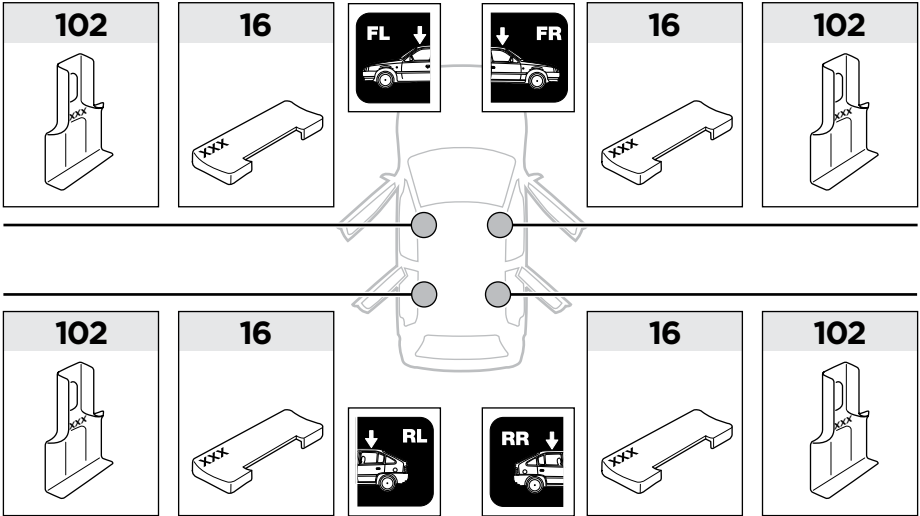

3

