






## Thule Rapid System Kit 1113

# > Instructions

VW Passat, 4-dr Sedan, 88-96 / \*90-97

\*North America

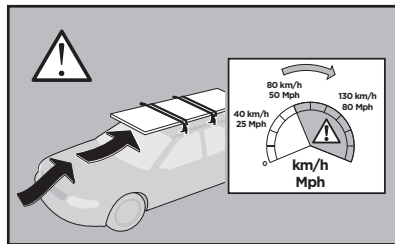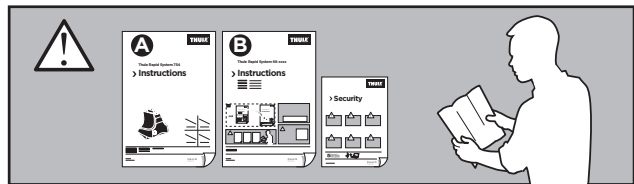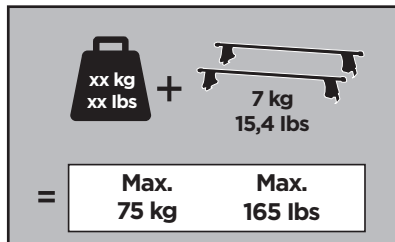

ISO 11154-E


141113

C.20130619  
519-1113-02

Bring your life  
thule.com



03 x4



236 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>VW Passat, 4-dr Sedan, 88-96 / *90-97</b>	<b>30,5</b>	<b>956</b>	<b>37 <sup>5</sup>/<sub>8</sub></b>

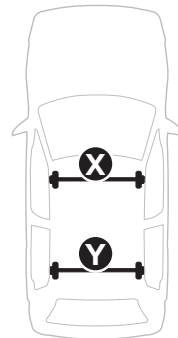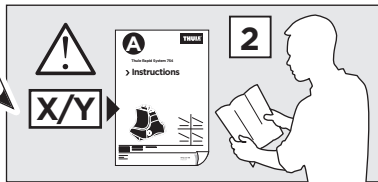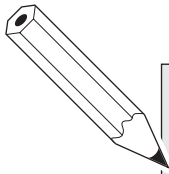

	Y (scale)	Y (mm)	Y (inch)
<b>VW Passat, 4-dr Sedan, 88-96 / *90-97</b>	<b>25,5</b>	<b>906</b>	<b>35 <sup>5</sup>/<sub>8</sub></b>

2

VW Passat, 4-dr Sedan, 88-96 / \*90-97

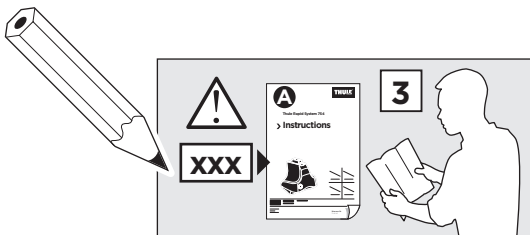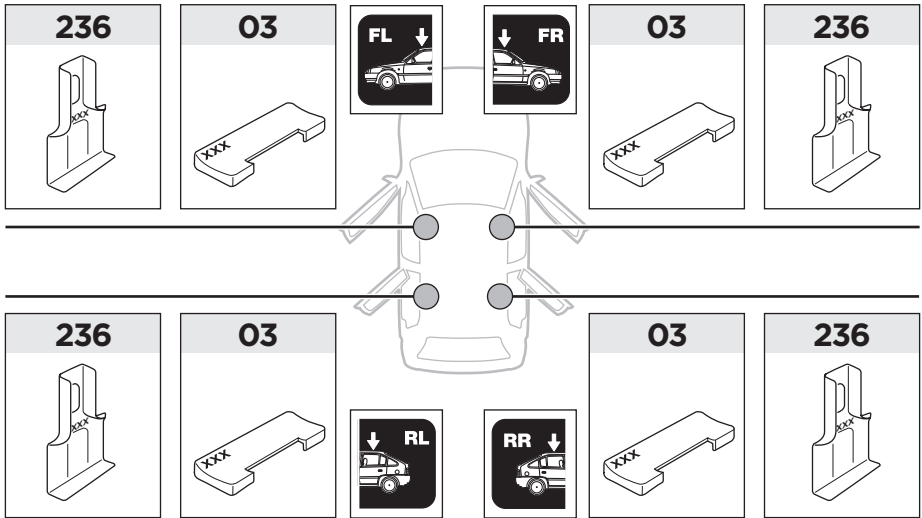

**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VW Passat</b> , 4-dr Sedan, 88-96 / *90-97	<b>290</b>	<b>700</b>	<b>11 <sup>3</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

