
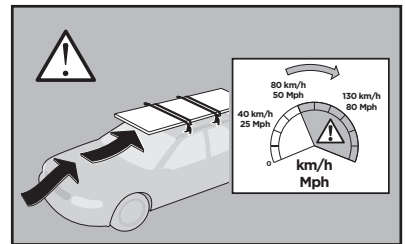
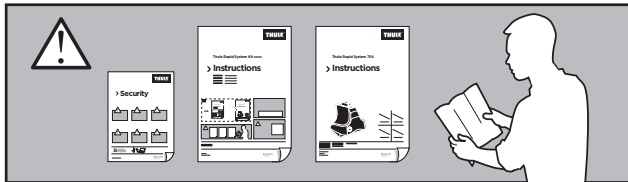
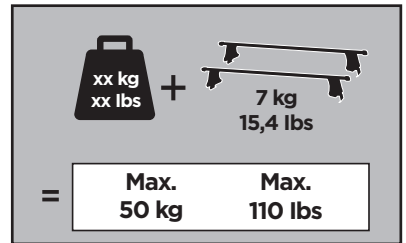


Thule Rapid System Kit 1124

> Instructions

NISSAN Cube, 5-dr MPV, 98-01

FORD Fusion, 5-dr Hatchback, 02-05

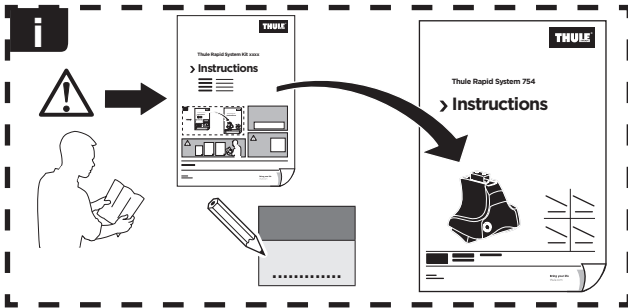

ISO 11154-E

141124


C.20130107
519-1124-01

Bring your life

thule.com



19 x4




153 x4



155 x2





x1



x1



1

	X (scale)	X (mm)	X (inch)
NISSAN Cube , 5-dr MPV, 98-01	33,5	986	38 ⁷ / ₈
FORD Fusion , 5-dr Hatchback, 02-05	36	1011	39 ³ / ₄

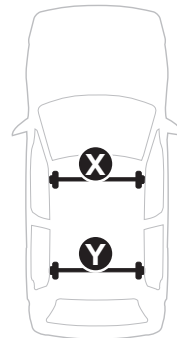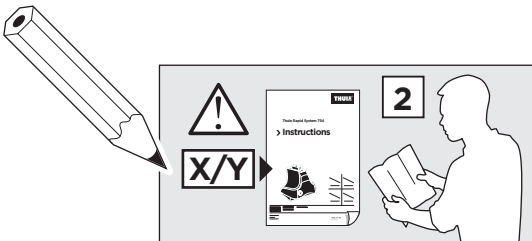


	Y (scale)	Y (mm)	Y (inch)
NISSAN Cube , 5-dr MPV, 98-01	30,5	956	37 ⁵ / ₈
FORD Fusion , 5-dr Hatchback, 02-05	32	971	38 ¹ / ₄


2

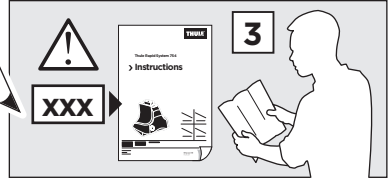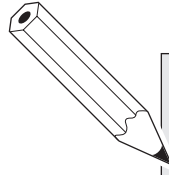


NISSAN Cube, 5-dr MPV, 98-01

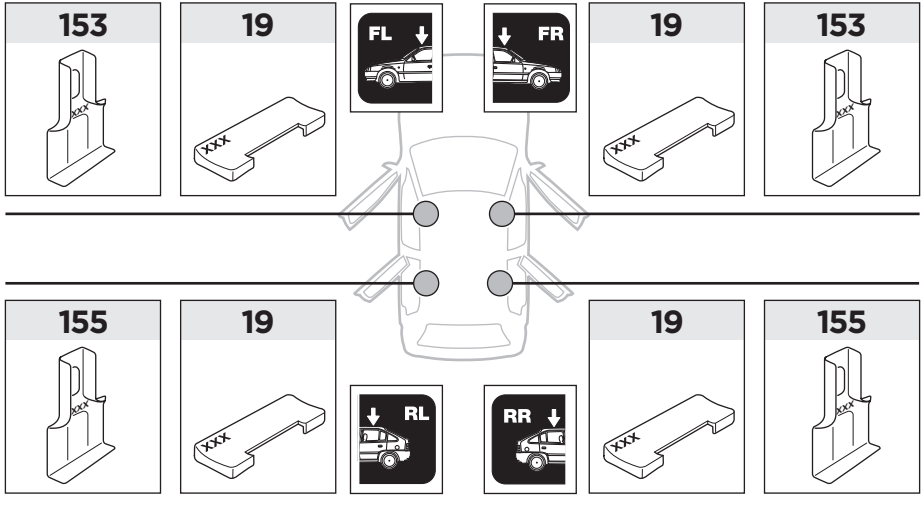


FORD Fusion, 5-dr Hatchback, 02-05

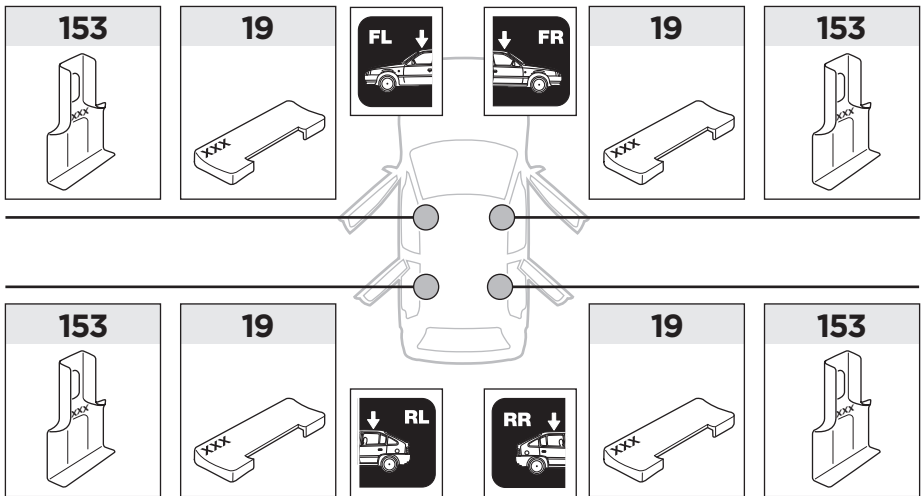


3

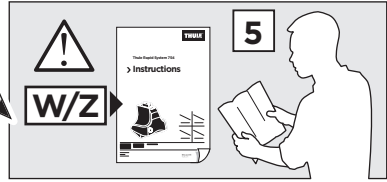

	W (mm)	Z (mm)	W (inch)	Z (inch)
NISSAN Cube , 5-dr MPV, 98-01	350	700	13 3/4	27 1/2
FORD Fusion , 5-dr Hatchback, 02-05	300	700	11 3/4	27 1/2

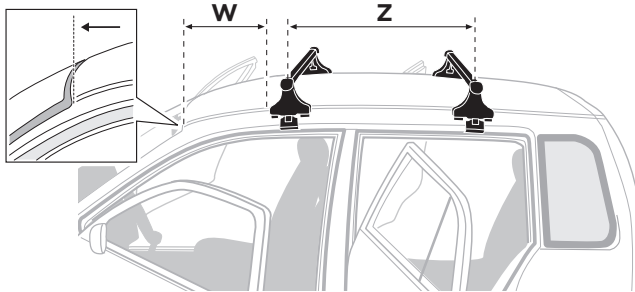

NISSAN Cube, 5-dr MPV, 98-01

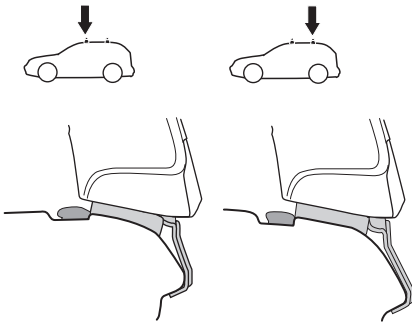

FORD Fusion, 5-dr Hatchback, 02-05

