





Thule Rapid System Kit 1151

> Instructions

HONDA HR-V, 3-dr SUV, 99-01, 02-05*

HONDA HR-V, 5-dr SUV, 00-01, 02-05*

* with roof spoiler

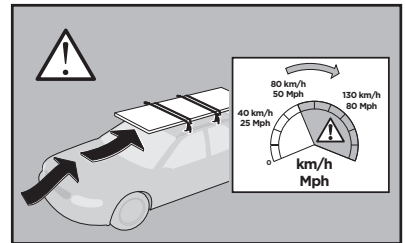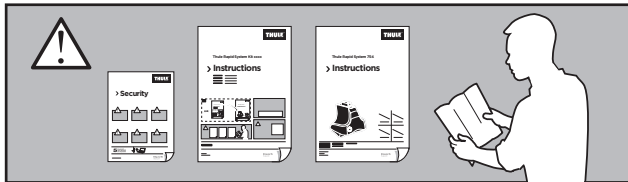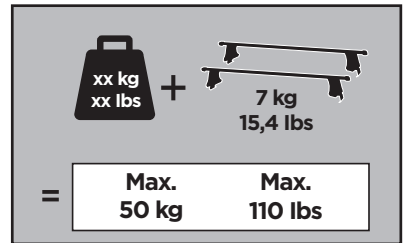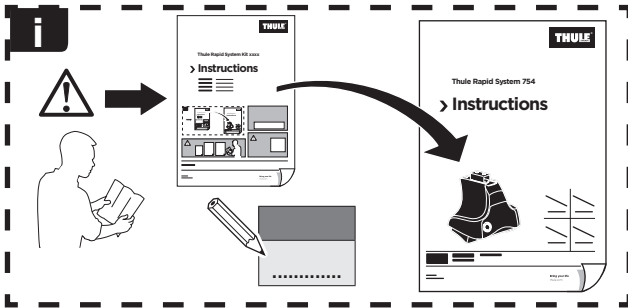

ISO 11154-E

141151


C.20130107
519-1151-01

Bring your life


thule.com



294 x2




295 x2



43 x4





x1



x1

1

	X (scale)	X (mm)	X (inch)
HONDA HR-V, 3-dr SUV, 99-01, 02-05*	42	1071	42 1/8
HONDA HR-V, 5-dr SUV, 00-01, 02-05*	42	1071	42 1/8

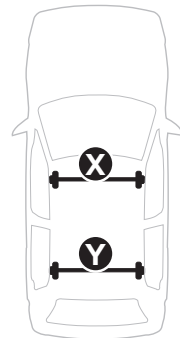
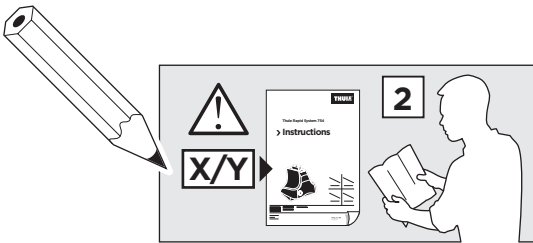


	Y (scale)	Y (mm)	Y (inch)
HONDA HR-V, 3-dr SUV, 99-01, 02-05*	38	1031	40 5/8
HONDA HR-V, 5-dr SUV, 00-01, 02-05*	38	1031	40 5/8


2

HONDA HR-V, 3-dr SUV, 99-01, 02-05*

HONDA HR-V, 5-dr SUV, 00-01, 02-05*

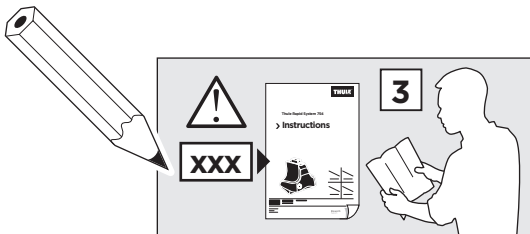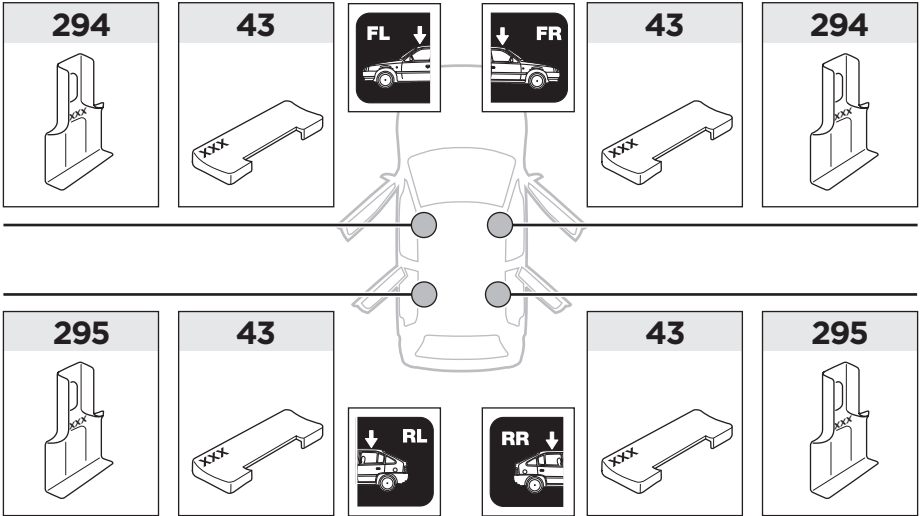

3

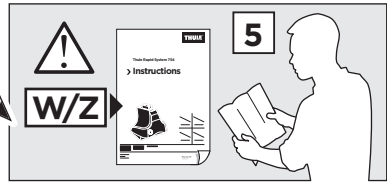

	W (mm)	Z (mm)	W (inch)	Z (inch)
HONDA HR-V, 3-dr SUV, 99-01, 02-05*	400	700	15 3/4	27 1/2
HONDA HR-V, 5-dr SUV, 00-01, 02-05*	400	700	15 3/4	27 1/2

