
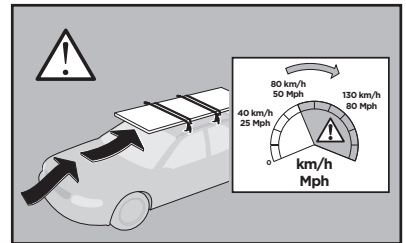
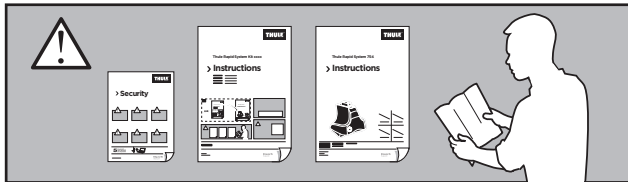
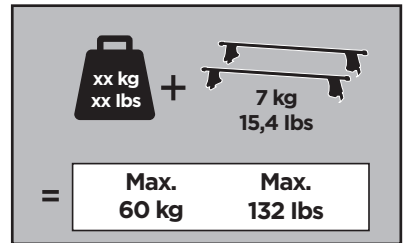


Thule Rapid System Kit 1354

> Instructions

SEAT Altea, 5-dr Hatchback, 04-

SEAT Toledo, 5-dr Hatchback, 05-12

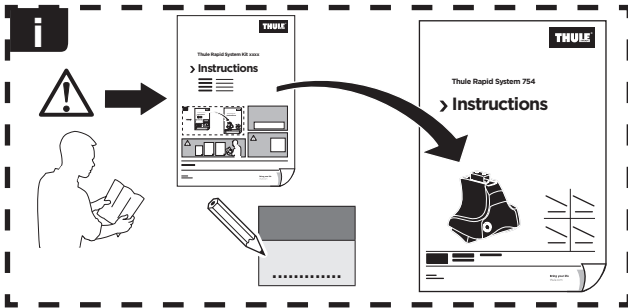

ISO 11154-E

141354


C.20130320
519-1354-02

Bring your life

thule.com




74 x1
75 x1
93 x2



664 x1
665 x1
301 x2





x1



x1

1



	X (scale)	X (mm)	X (inch)
SEAT Altea , 5-dr Hatchback, 04-	34,5	996	39 1/4
SEAT Toledo , 5-dr Hatchback, 05-12	34	991	39

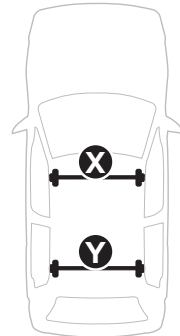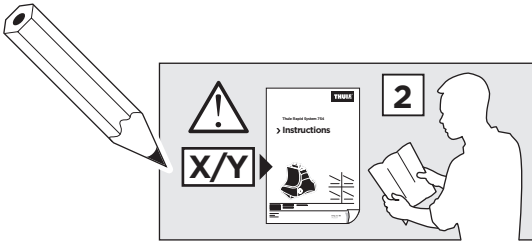


	Y (scale)	Y (mm)	Y (inch)
SEAT Altea , 5-dr Hatchback, 04-	30,5	956	37 5/8
SEAT Toledo , 5-dr Hatchback, 05-12	30,5	956	37 5/8

2

SEAT Altea, 5-dr Hatchback, 04-
SEAT Toledo, 5-dr Hatchback, 05-12

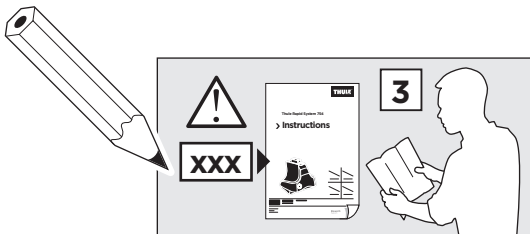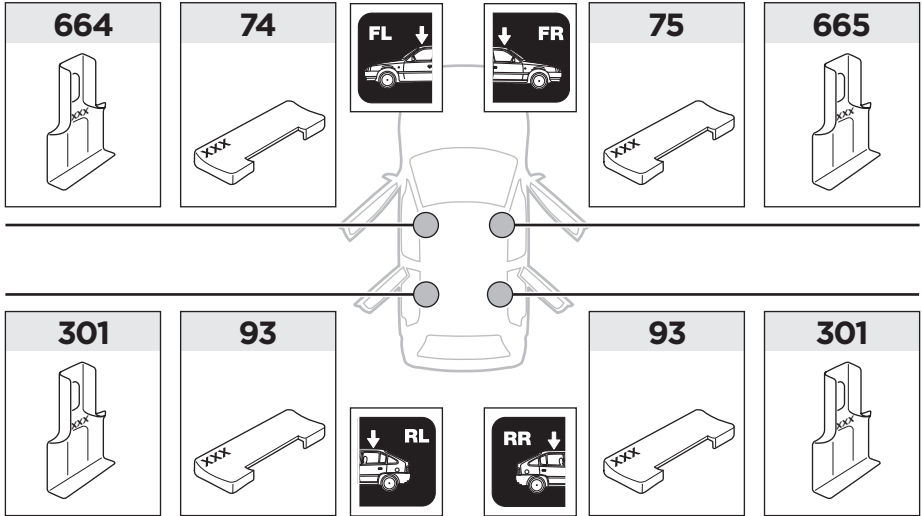

3

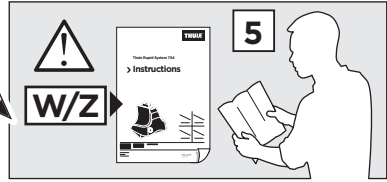

	W (mm)	Z (mm)	W (inch)	Z (inch)
SEAT Altea , 5-dr Hatchback, 04-	290	700	11 ³/₈	27 ¹/₂
SEAT Toledo , 5-dr Hatchback, 05-12	290	700	11 ³/₈	27 ¹/₂

