





Thule Rapid System Kit 1369

> Instructions

VOLVO V50, 5-dr Estate, 04-

VOLVO V50, 5-dr Wagon, *05-10

*North America

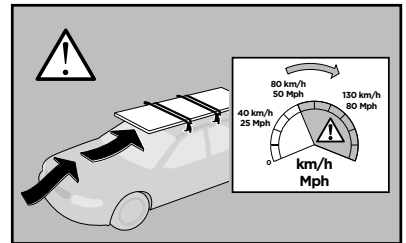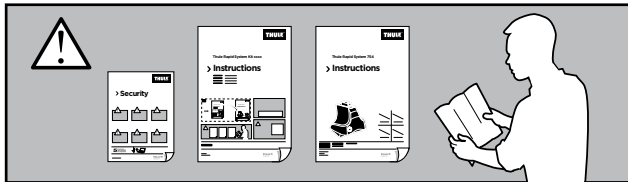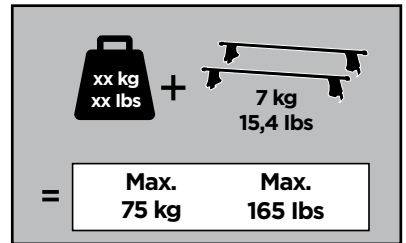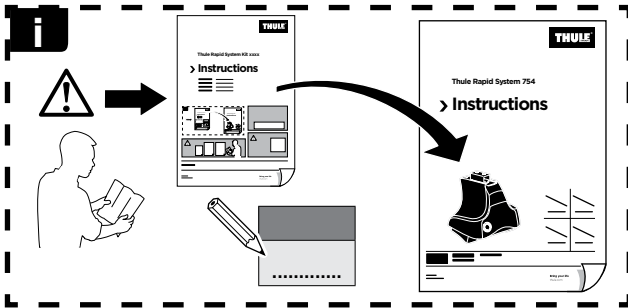

ISO 11154-E

141369


C.20120920
519-1369-03

Bring your life


thule.com



163 x2



164 x2




629 x2



697 x2





x1



x1

1



	X (scale)	X (mm)	X (inch)
VOLVO V50 , 5-dr Estate, 04-	41	1061	41 ³ / ₄
VOLVO V50 , 5-dr Wagon, *05-10	41	1061	41 ³ / ₄

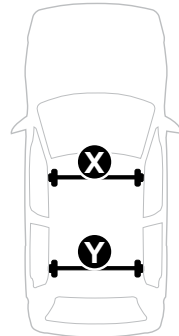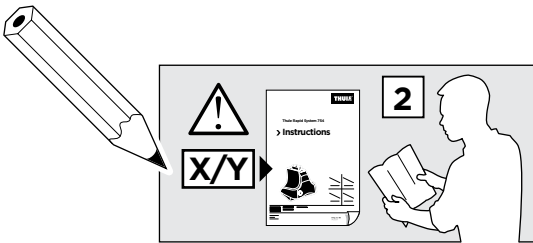


	Y (scale)	Y (mm)	Y (inch)
VOLVO V50 , 5-dr Estate, 04-	37	1021	40 ¹ / ₄
VOLVO V50 , 5-dr Wagon, *05-10	37	1021	40 ¹ / ₄

2

VOLVO V50, 5-dr Estate, 04-
VOLVO V50, 5-dr Wagon, *05-10

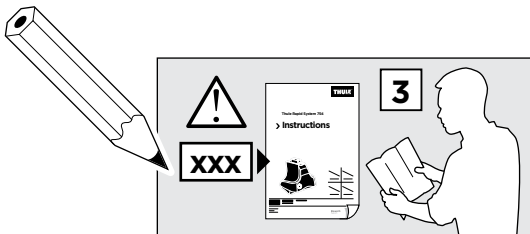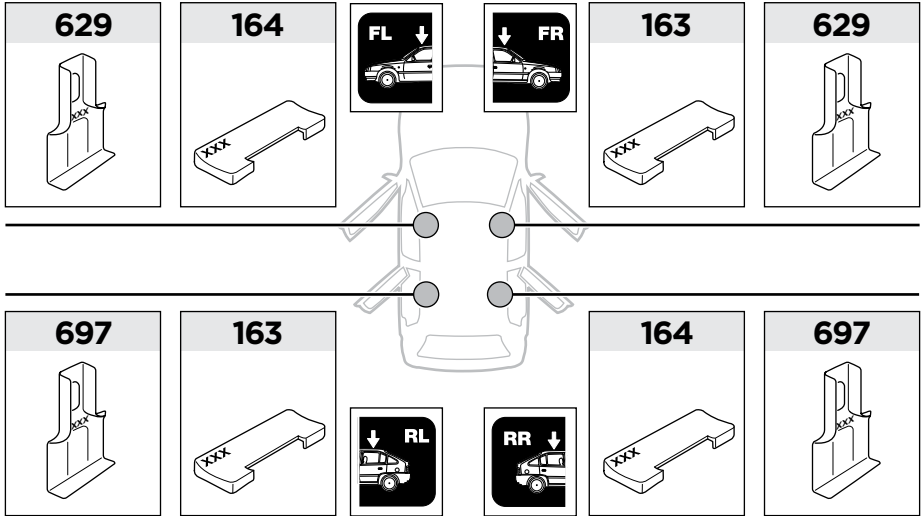

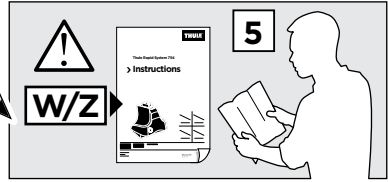3

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO V50 , 5-dr Estate, 04-	225	800	8 ⁷/₈	31 ¹/₂
VOLVO V50 , 5-dr Wagon, *05-10	225	800	8 ⁷/₈	31 ¹/₂

