





# Thule Rapid System Kit 1417

# > Instructions

**AUDI A3**, 3-dr Hatchback, 03-12

**AUDI A3 Sportback**, 5-dr Hatchback, 04-12 / \*06-

\*North America

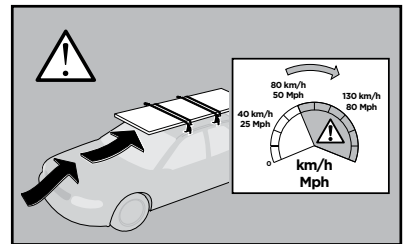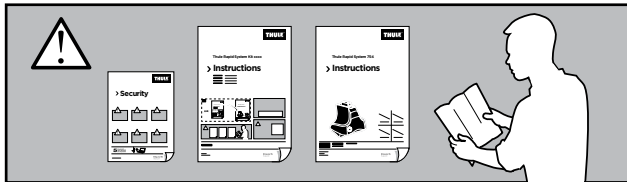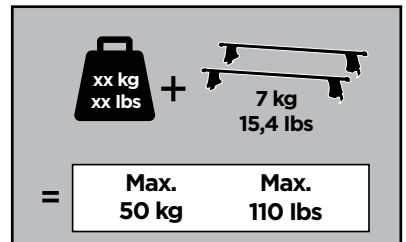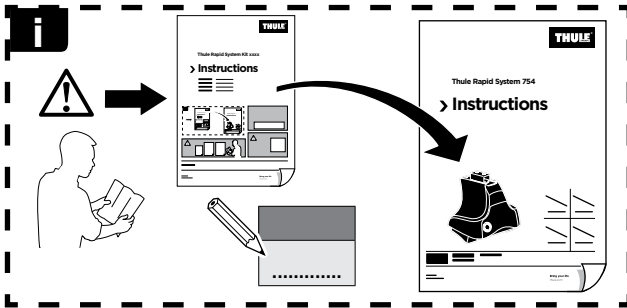



ISO 11154-E

141417




C.20121029  
519-1417-03

Bring your life

thule.com

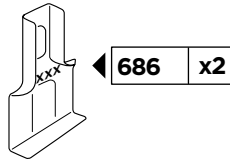

x1

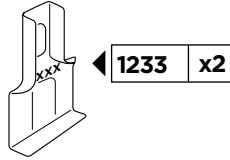



x1



1

	X (scale)	X (mm)	X (inch)
<b>AUDI A3</b> , 3-dr Hatchback, 03-12	36	1011	39 <sup>3</sup> / <sub>4</sub>
<b>AUDI A3 Sportback</b> , 5-dr Hatchback, 04-12 / *06-	36	1011	39 <sup>3</sup> / <sub>4</sub>

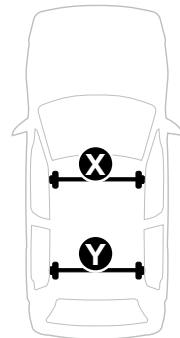
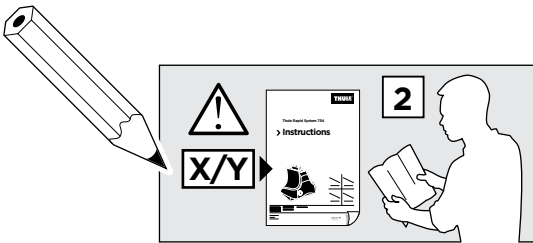


	Y (scale)	Y (mm)	Y (inch)
<b>AUDI A3</b> , 3-dr Hatchback, 03-12	33	981	38 <sup>5</sup> / <sub>8</sub>
<b>AUDI A3 Sportback</b> , 5-dr Hatchback, 04-12 / *06-	33	981	38 <sup>5</sup> / <sub>8</sub>



**2**

**AUDI A3, 3-dr Hatchback, 03-12**


**AUDI A3 Sportback, 5-dr Hatchback, 04-12 / \*06-**

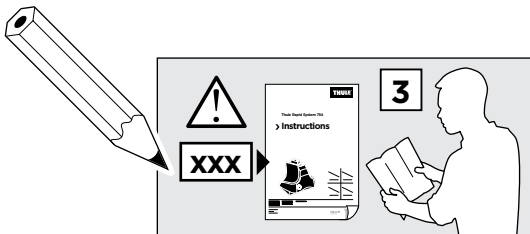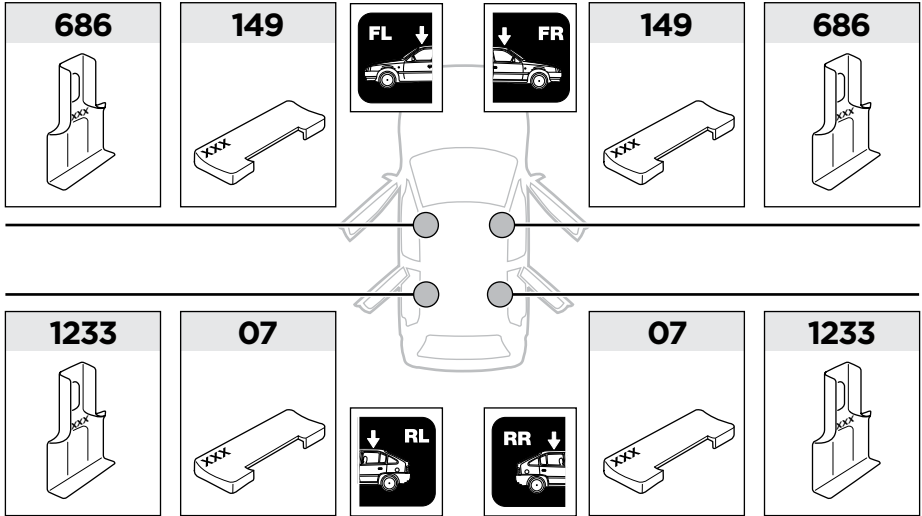



**3**

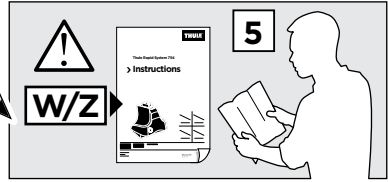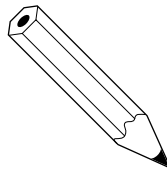

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>AUDI A3</b> , 3-dr Hatchback, 03-12	<b>260</b>	<b>700</b>	<b>10 1/4</b>	<b>27 1/2</b>
<b>AUDI A3 Sportback</b> , 5-dr Hatchback, 04-12 / *06-	<b>260</b>	<b>700</b>	<b>10 1/4</b>	<b>27 1/2</b>

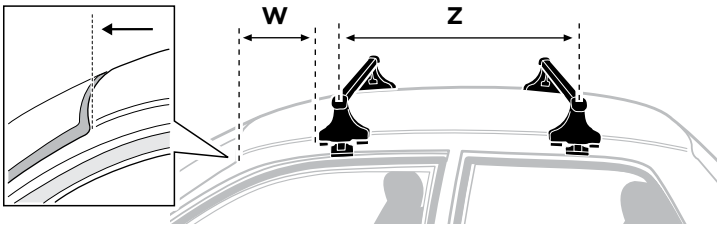

**AUDI A3**,  
3-dr Hatchback, 03-12

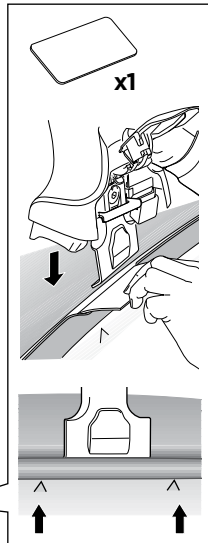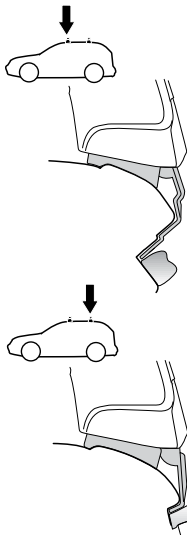

**AUDI A3 Sportback**,  
5-dr Hatchback, 04-12 / \*06-

