

# Thule Rapid System Kit 1468





# > Instructions

**TOYOTA Ist (Mk.II)**, 5-dr Hatchback, 07-






**TOYOTA Urban Cruiser**, 5-dr Hatchback, 09-

**SCION xD**, 5-dr Hatchback, \*08-

\*North America

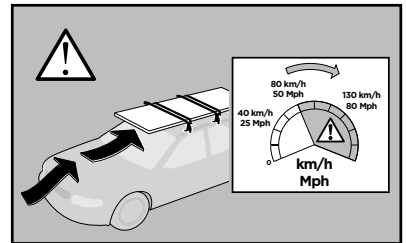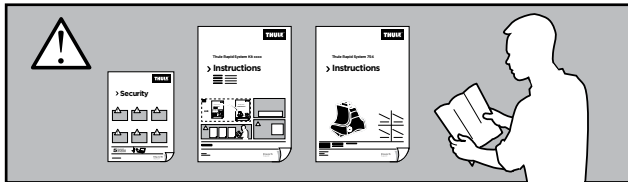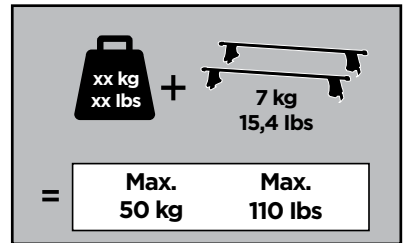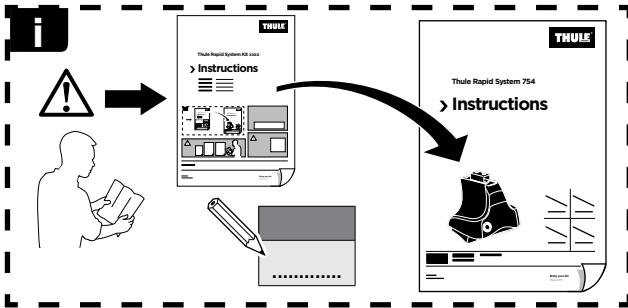

ISO 11154-E

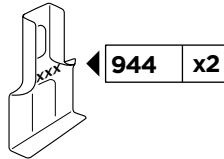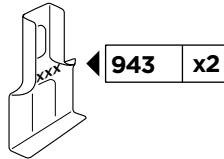



x1



x1

# 1



	X (scale)	X (mm)	X (inch)
<b>TOYOTA Ist (Mk.II), 5-dr Hatchback, 07-</b>	<b>31,5</b>	<b>966</b>	<b>38</b>
<b>TOYOTA Urban Cruiser, 5-dr Hatchback, 09-</b>	<b>31,5</b>	<b>966</b>	<b>38</b>
<b>SCION xD, 5-dr Hatchback, *08-</b>	<b>31,5</b>	<b>966</b>	<b>38</b>

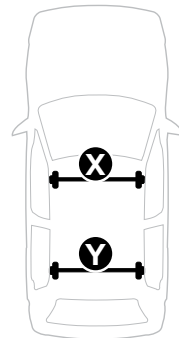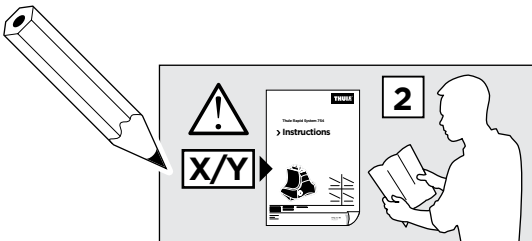


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Ist (Mk.II), 5-dr Hatchback, 07-</b>	<b>28</b>	<b>931</b>	<b>36 <sup>5</sup>/<sub>8</sub></b>
<b>TOYOTA Urban Cruiser, 5-dr Hatchback, 09-</b>	<b>28</b>	<b>931</b>	<b>36 <sup>5</sup>/<sub>8</sub></b>
<b>SCION xD, 5-dr Hatchback, *08-</b>	<b>28</b>	<b>931</b>	<b>36 <sup>5</sup>/<sub>8</sub></b>

**2**

**TOYOTA Ist (Mk.II), 5-dr Hatchback, 07-**  
**TOYOTA Urban Cruiser, 5-dr Hatchback, 09-**  
**SCION xD, 5-dr Hatchback, \*08-**

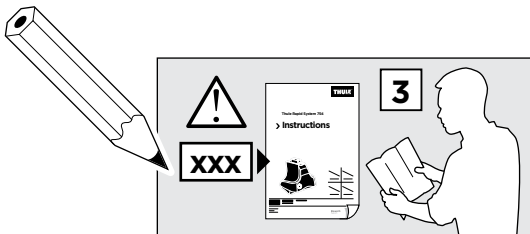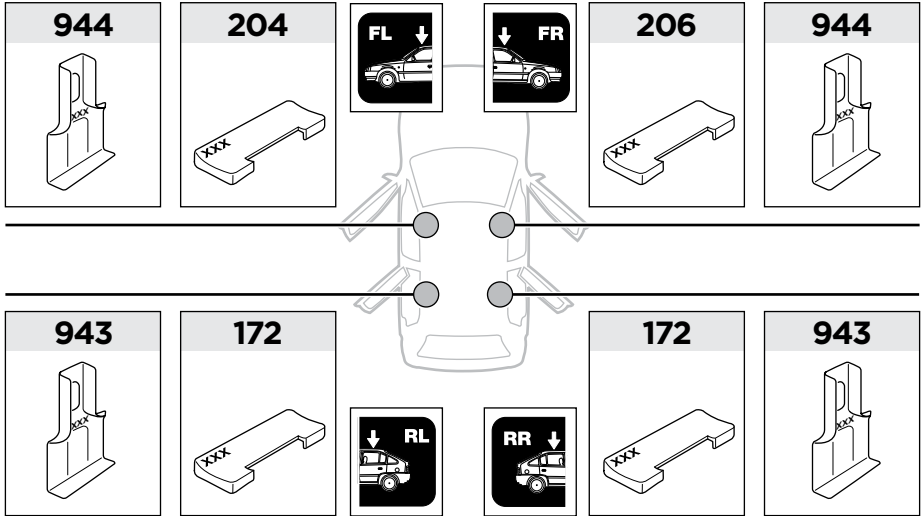

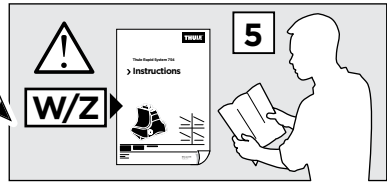**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Ist (Mk.II), 5-dr Hatchback, 07-</b>	<b>170</b>	<b>715</b>	<b>6 <sup>3</sup>/<sub>4</sub></b>	<b>28 <sup>1</sup>/<sub>8</sub></b>
<b>TOYOTA Urban Cruiser, 5-dr Hatchback, 09-</b>	<b>170</b>	<b>715</b>	<b>6 <sup>3</sup>/<sub>4</sub></b>	<b>28 <sup>1</sup>/<sub>8</sub></b>
<b>SCION xD, 5-dr Hatchback, *08-</b>	<b>170</b>	<b>715</b>	<b>6 <sup>3</sup>/<sub>4</sub></b>	<b>28 <sup>1</sup>/<sub>8</sub></b>

