
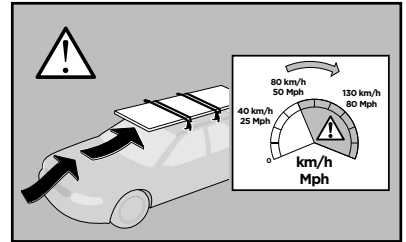
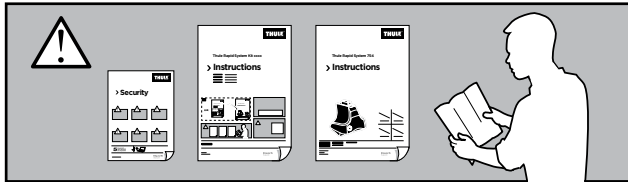
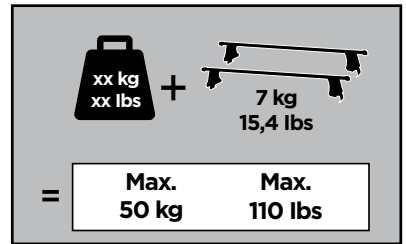


Thule Rapid System Kit 1539

> Instructions

DODGE Avenger, 4-dr Sedan, *07-


*North America

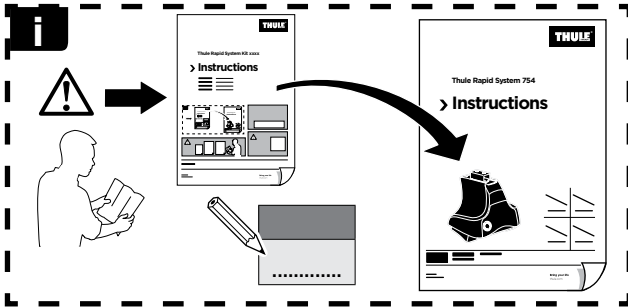

ISO 11154-E



111 x2




733 x2




x1

170 x2






1020 x2



x1

1


	X (scale)	X (mm)	X (inch)
DODGE Avenger, 4-dr Sedan, *07-	37	1120	44

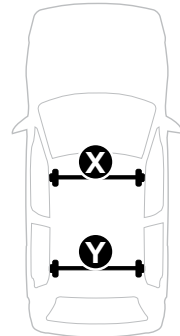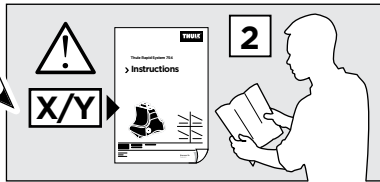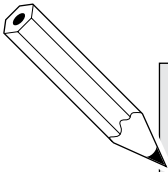


	Y (scale)	Y (mm)	Y (inch)
DODGE Avenger, 4-dr Sedan, *07-	43,5	1085	42 3/4

2

DODGE Avenger, 4-dr Sedan, *07-

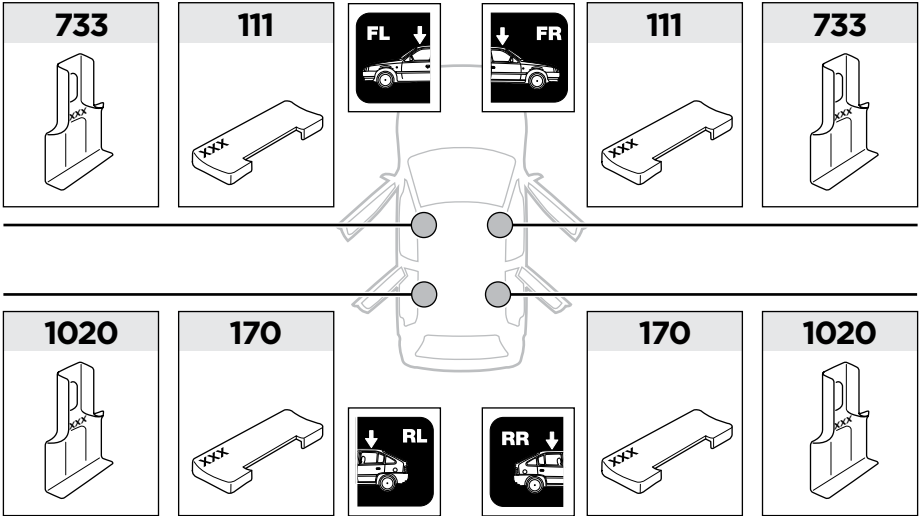

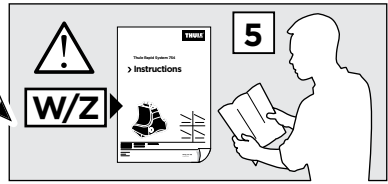3

	W (mm)	Z (mm)	W (inch)	Z (inch)
DODGE Avenger, 4-dr Sedan, *07-	255	700	10	27 1/2

