
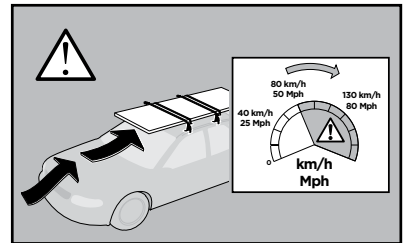
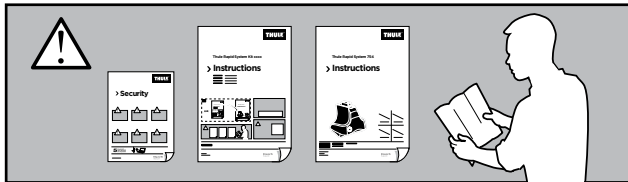
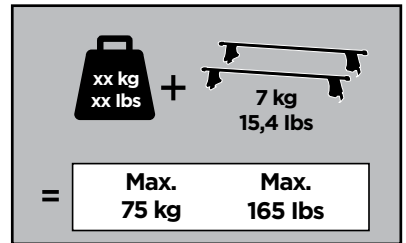


# Thule Rapid System Kit 1600

# > Instructions

**VOLVO V70**, 5-dr Estate, 07-\*


\*Without railing

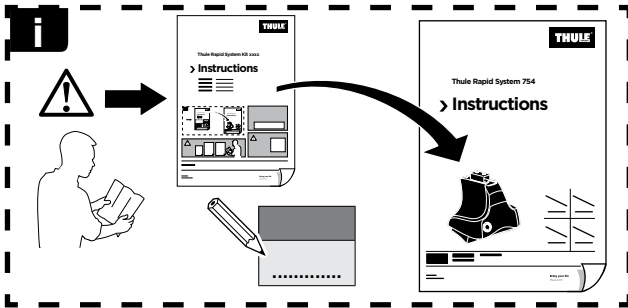


ISO 11154-E





15 x2



204 x1



206 x1



903 x2




1088 x1



1089 x1





x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>VOLVO V70, 5-dr Estate, 07-</b>	<b>44,5</b>	<b>1096</b>	<b>43 <sup>1</sup>/<sub>8</sub></b>

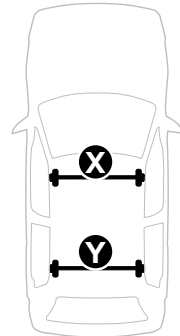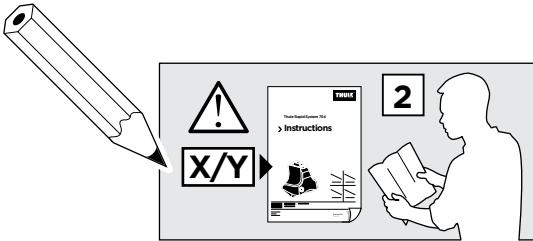


	Y (scale)	Y (mm)	Y (inch)
<b>VOLVO V70, 5-dr Estate, 07-</b>	<b>38,5</b>	<b>1036</b>	<b>40 <sup>3</sup>/<sub>4</sub></b>

**2**

**VOLVO V70, 5-dr Estate, 07-**

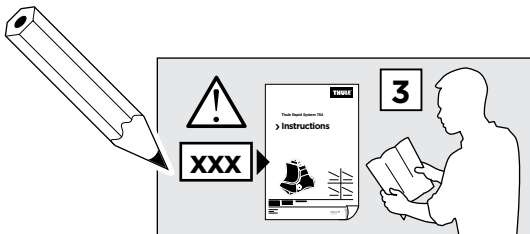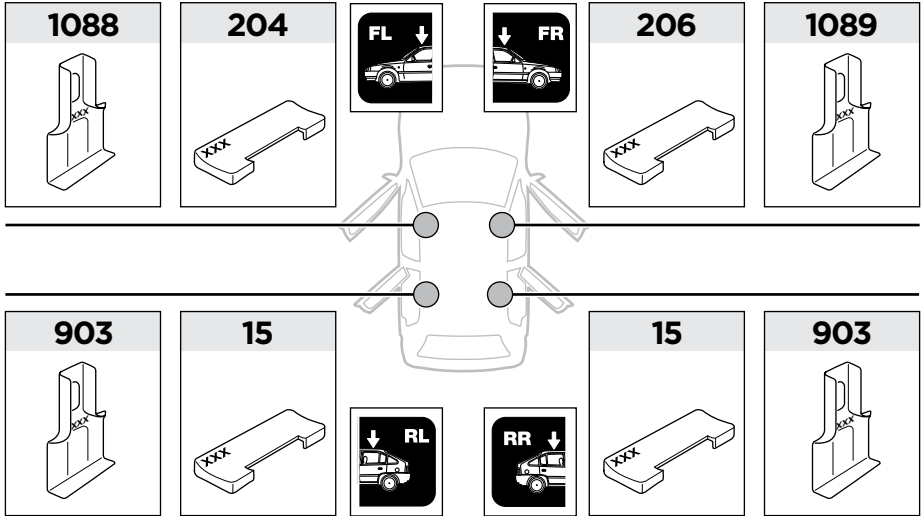

**3**

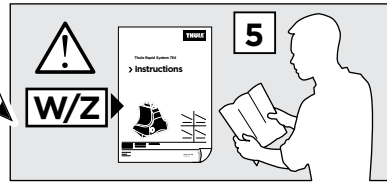

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLVO V70, 5-dr Estate, 07-</b>	<b>230</b>	<b>700</b>	<b>9</b>	<b>27 1/2</b>

