
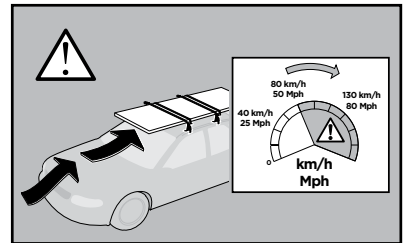
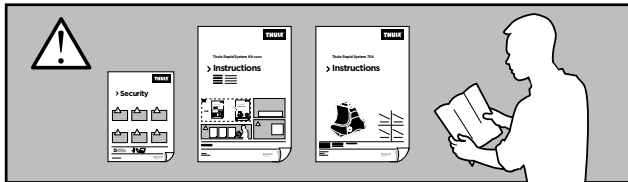
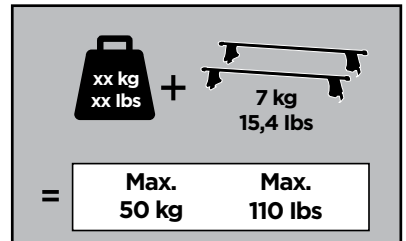


# Thule Rapid System Kit 1602

# > Instructions

**BMW X1, 5-dr SUV, 10- (Without railing)**





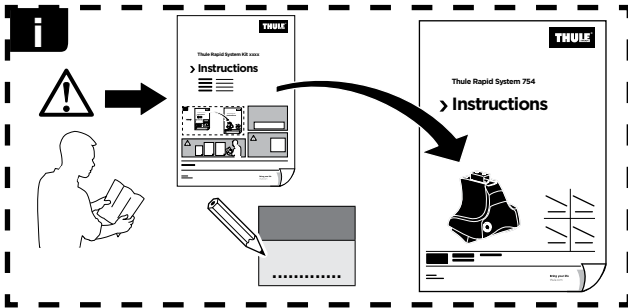


ISO 11154-E

**141602**



C.20120920  
519-1602-01

**Bring your life**  
thule.com

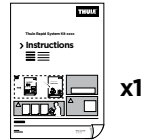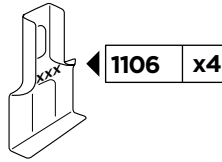

# 1


	X (scale)	X (mm)	X (inch)
<b>BMW X1, 5-dr SUV, 10- (Without railing)</b>	<b>41,5</b>	<b>1066</b>	<b>42</b>

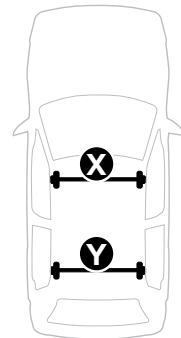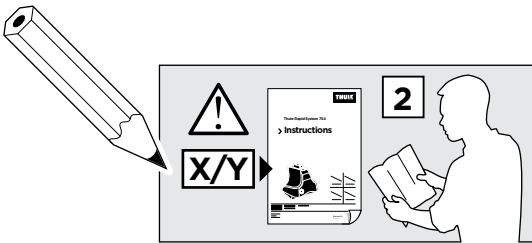


	Y (scale)	Y (mm)	Y (inch)
<b>BMW X1, 5-dr SUV, 10- (Without railing)</b>	<b>40,5</b>	<b>1056</b>	<b>41 <sup>5</sup>/<sub>8</sub></b>

**2**

**BMW X1**, 5-dr SUV, 10- (Without railing)

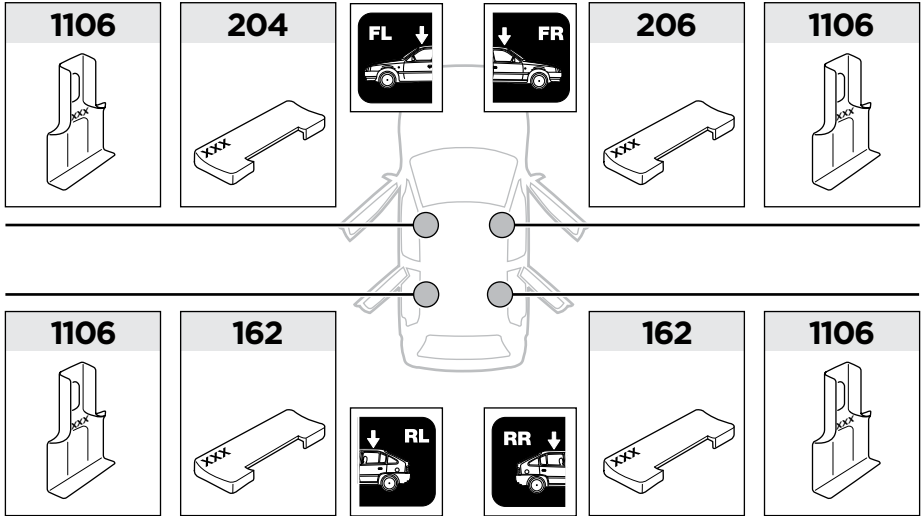

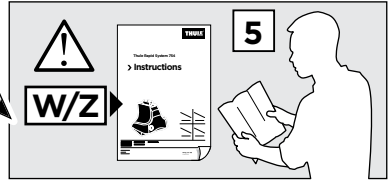**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>BMW X1, 5-dr SUV, 10- (Without railing)</b>	<b>310</b>	<b>700</b>	<b>12 1/4</b>	<b>27 1/2</b>

