
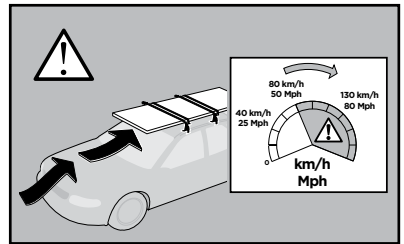
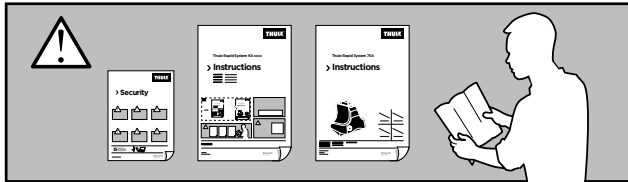
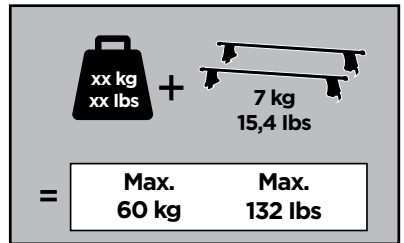




# Thule Rapid System Kit 1640

# > Instructions


KIA Sportage, 5-dr SUV, 10- (Without railing)

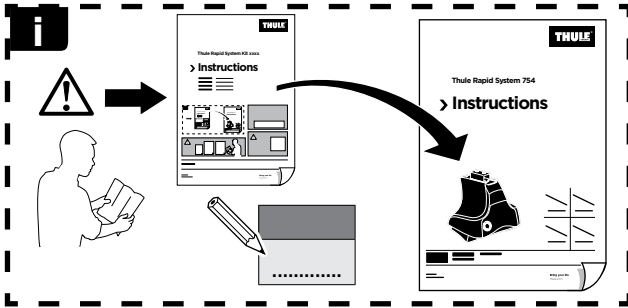

ISO 11154-E

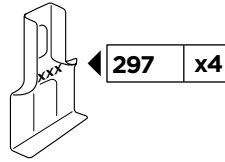



x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>KIA Sportage, 5-dr SUV, 10-</b> (Without railing)	<b>43,5</b>	<b>1086</b>	<b>42 3/4</b>

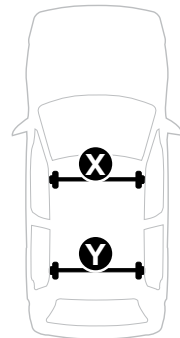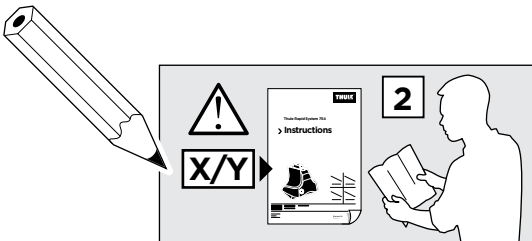



	Y (scale)	Y (mm)	Y (inch)
<b>KIA Sportage, 5-dr SUV, 10-</b> (Without railing)	<b>39,5</b>	<b>1046</b>	<b>41 1/8</b>

**2**

**KIA Sportage, 5-dr SUV, 10- (Without railing)**

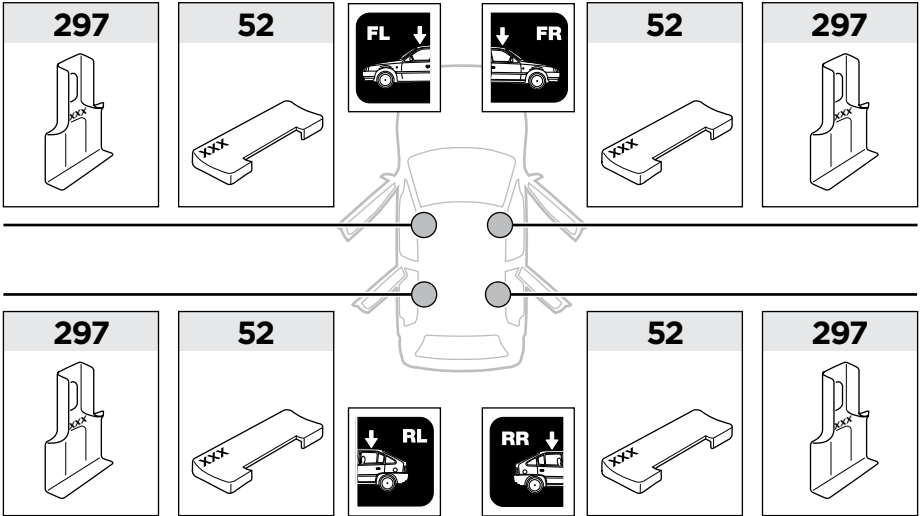

3

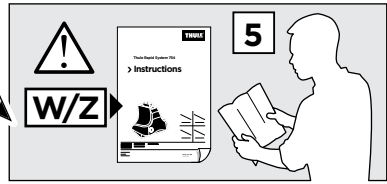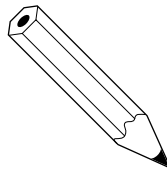

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>KIA Sportage, 5-dr SUV, 10- (Without railing)</b>	<b>360</b>	<b>700</b>	<b>14 1/8</b>	<b>27 1/2</b>

